

tM-752N Series User Manual

ICP DAS CO., LTD.



Warranty

All products manufactured by ICP DAS are warranted against defective materials for a period of one year from the date of delivery to the original purchaser.

Warning

ICP DAS assumes no liability for damages consequent to the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, nor for any infringements of patents or other rights of third parties resulting from its use.

Copyright

Copyright © 2011 by ICP DAS. All rights are reserved.

Trademark

Names are used for identification only and may be registered trademarks of their respective companies.

Table of Contents


PACKING LIST	4
MORE INFORMATION	4
1. INTRODUCTION	5
1.1 ADDRESSABLE RS-232 CONVERTER	6
1.2 RESPONSES FROM RS-232 DEVICES CAN BE ADDRESSABLE	6
1.3 ONBOARD 1KB QUEUE BUFFER	7
1.4 WHY WEB SERVER TECHNOLOGY?	7
2. HARDWARE INFORMATION	8
2.1 SPECIFICATIONS	8
2.2 FEATURES	9
2.3 SELECTION GUIDE	9
2.4 TM-752N FRONT VIEW	10
2.5 DIMENSIONS	12
2.6 PIN ASSIGNMENTS	13
2.6.1 <i>tM-7521 Pin Assignments</i>	13
2.6.2 <i>tM-7522 Pin Assignments</i>	14
2.7 WIRING NOTES	15
2.7.1 <i>RS-232 Wiring Connections</i>	15
2.7.2 <i>RS-485 Wiring Connections</i>	16
3. SETTING UP THE TM-752N	17
STEP 1: CONNECTING THE POWER AND HOST PC	17
STEP 2: RUN THE ESEARCH UTILITY	20
STEP 3: SEARCH FOR THE TM-752N MODULE	20
STEP 4: CONFIGURE THE NETWORK SETTINGS	21
STEP 5: TESTING YOUR TM-752N	22
4. WEB CONFIGURATION	23
4.1 LOGGING ON TO THE TM-752N WEB SERVER	23
4.2 HOME PAGE	25
4.3 NETWORK SETTING	26
4.3.1 <i>Network and Miscellaneous Settings</i>	26

4.3.2	<i>IP Address Selection</i>	26
4.3.3	<i>General Configuration Settings</i>	29
4.3.4	<i>Restore Factory Defaults</i>	30
4.4	SERIAL PORT SETTINGS.....	31
4.4.1	<i>Port1 Settings</i>	31
4.5	CHANGE PASSWORD.....	33
4.6	LOGOUT	33
5.	COMMAND SETS	34
5.1	COMMAND SETS TABLE.....	34
5.1.1	\$AAA[addr].....	35
5.1.2	\$AABN[baud rate].....	37
5.1.3	\$AADN[data-bit].....	39
5.1.4	\$AAPN[parity-bit].....	41
5.1.5	\$AAON[stop-bit].....	43
5.1.6	\$AA6[ID].....	45
5.1.7	\$AA7.....	47
5.1.8	\$AAC[delimiter].....	49
5.1.9	[delimiter]AA[bypass].....	51
5.1.10	\$AAKV.....	52
5.1.11	\$AATN[CrLfmode].....	54
5.1.12	\$AAM.....	56
5.1.13	\$AAU.....	58
5.1.14	\$AAJN[timeout].....	60
5.1.15	\$AAEV.....	62
6.	TYPICAL APPLICATIONS	64
6.1	APPLICATION 1	64
6.2	APPLICATION 2	65
6.3	APPLICATION 3	66

Packing List

The shipping package includes the following items:

- One tM-752N series hardware module
- One printed Quick Start Guide
- One DC Connector Power cable

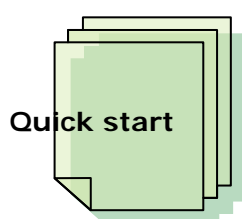

Note!!

If any of these items are missing or damaged, please contact the local distributor for more information. Save the shipping materials and cartons in case you want to ship the module in the future.

More Information

Documentation

<http://ftp.icpdas.com/pub/cd/tinymodules/napdos/tM-752N/document/>

Firmware

<http://ftp.icpdas.com/pub/cd/tinymodules/napdos/tM-752N/firmware/>

1. Introduction

Nowadays, a great number of RS-232 devices for both automation and information transfer are being used in industrial applications, and linking these devices is very important in the modern situation. The devices are usually located at a distance from the Host PC, meaning that linking via multiple serial cards is inefficient. ICPDAS tM-752N series products have been developed to provide an effective link between multiple RS-232 devices via a single RS-485 network. This network protocol offers stability, reliability and simple cabling while delivering a low-cost, easy-to-maintain product.

To achieve maximum space savings, the tM-752N is offered in an amazingly small form-factor that enables it to be easily installed anywhere, even directly attached to a serial device or embedded into a machine. The tM-752N features a powerful 32-bit MCU that allows it to efficiently handle network traffic. The tM-752N offers true IEEE 802.3af-compliant (classification, Class 1) Power-over-Ethernet (PoE) functionality using a standard category 5 Ethernet cable that allows it to receive power from a PoE switch such as the NS-205PSE. If there is no PoE switch available on site, the tM-752N can accept power input from a DC adapter.

1.1 Addressable RS-232 Converter

Most RS-232 devices don't support individual device addressing. To overcome this limitation, ICPDAS tM-752N series modules assign a unique address to any RS-232 device installed on an RS-485 network. When the Host PC sends a command to the RS-485 network a device address can be attached to the command. The destination tM-752N module will then remove the address field and pass the remaining commands to the destination RS-232 device. Responses from the local RS-232 devices will be returned to the Host PC via the tM-752N module.

1.2 Responses from RS-232 devices can be addressable

ICPDAS tM-752N series modules can prefix a response from an RS-232 device with a unique address and then pass the response to the RS-485 network. The Host PC can then identify which RS-232 device the response comes from.

1.3 Onboard 1KB Queue Buffer

tM-752N series modules are equipped with a 1KB queue buffer for its local serial port. All input data can be stored in the queue buffer until the Host PC has time to read it. These features allow the Host PC to be linked to thousands of RS-232 devices without any loss of data.

1.4 Why Web Server Technology?

Web server technology enables configuration of the tM-752N via a standard web browser interface, e.g. Internet Explorer, Firefox or Mozilla, etc. This means that it is easy to check the configuration of the tM-752N via an Ethernet network without needing to install any other software tools, thereby reducing the user's learning curve.



tM-752N Series

[Home](#) | [Port1](#) | [Port2](#) | [Network Setting](#) | [Filter](#) | [Change Password](#) | [Logout](#)

Status & Configuration

Model Name	tM-7521	Alias Name	Tiny
Firmware Version	v1.0.0 [Sep.02, 2011]	MAC Address	00-0D-E0-80-12-22
IP Address	10.1.0.47	System Address	0x00 (0)
Initial Switch	OFF	System Timeout (Serial Watchdog, Seconds)	300

Current port settings:

Port Settings	Port 1	Port 2
Baud Rate (bps)	115200	115200
Data Size (bits)	8	8
Parity	None	None
Stop Bits (bits)	1	1
Flow Control	None	None
Serial Ending Chars	-	-
Port ID	0x00 (0)	0x00 (0)
Delimiter	:	:
Response Timeout (ms)	1000	1000
Continue Response Timeout (ms)	-	0

2. Hardware Information

2.1 Specifications

Model	tM-7521	tM-7522
System		
CPU	32-bit MCU	
Communication Interface		
Ethernet	10/100 Base-TX, 8-pin RJ-45 x 1, (Auto-negotiating, Auto-MDI/MDIX, LED indicator) PoE (IEEE 802.3af, Class 1)	
COM1	2-wire RS-485	2-wire RS-485
COM2	5-wire RS-232	3-wire RS-232
COM3	-	3-wire RS-232
	Yes, automatic RS-485 direction control	
UART	16c550 or compatible	
COM Port Format		
Baud Rate	115200 bps Max.	
Data Bit	5, 6, 7, 8	
Parity	None, Odd, Even, Mark, Space	
Stop Bit	1, 2	
General		
Power Input	PoE: IEEE 802.3af, Class 1 DC jack: +12 ~ 48 V _{DC}	
Power Consumption	0.05 A @ 24 V _{DC}	
Connector	10-Pin Removable Terminal Block x 1	
Mounting	DIN-Rail	
Flammability	Fire Retardant Materials (UL94-V0 Level)	
Operating Temperature	-25° ~ 75°C	
Storage Temperature	-30° ~ 80°C	
Humidity	10 ~ 90% RH, non-condensing	


2.2 Features

- Built-in “Addressable RS-232 Converter” firmware
- Contains a 32-bit MCU that efficiently handles efficient network traffic
- 10/100 Base-TX Ethernet, RJ-45 x1
(Auto-negotiating, auto MDI/MDIX, LED Indicators)
- Includes redundant power inputs: PoE (IEEE 802.3af, Class 1) and DC jack
- Allows automatic RS-485 direction control
- Supports UDP responder for device discovery
- Allows easy firmware update via the Ethernet
- Tiny Built-in Web server for easy configuration
- Male DB-9 or terminal block connector for easy wiring
- Tiny form-factor and low power consumption
- RoHS compliant with no Halogen
- Made from high-grade fire retardant materials (UL94-V0 Level)
- Cost-effective


2.3 Selection Guide

Model	CPU	Ethernet	Baud Rate	COM1	COM2	COM3
tM-7521	32-bit MCU	10/100 Base-TX, PoE	115200 bps	2-wire RS-485	5-wire RS-232	-
tM-7522				2-wire RS-485	3-wire RS-232	3-wire RS-232
3-Wire RS-232: RxD, TxD, GND (Non-isolated) 5-Wire RS-232: RxD, TxD, CTS, RTS, GND (No-isolated) 2-Wire RS-485: DATA+, DATA-, GND (Non-isolated)						

2.4 tM-752N Front View

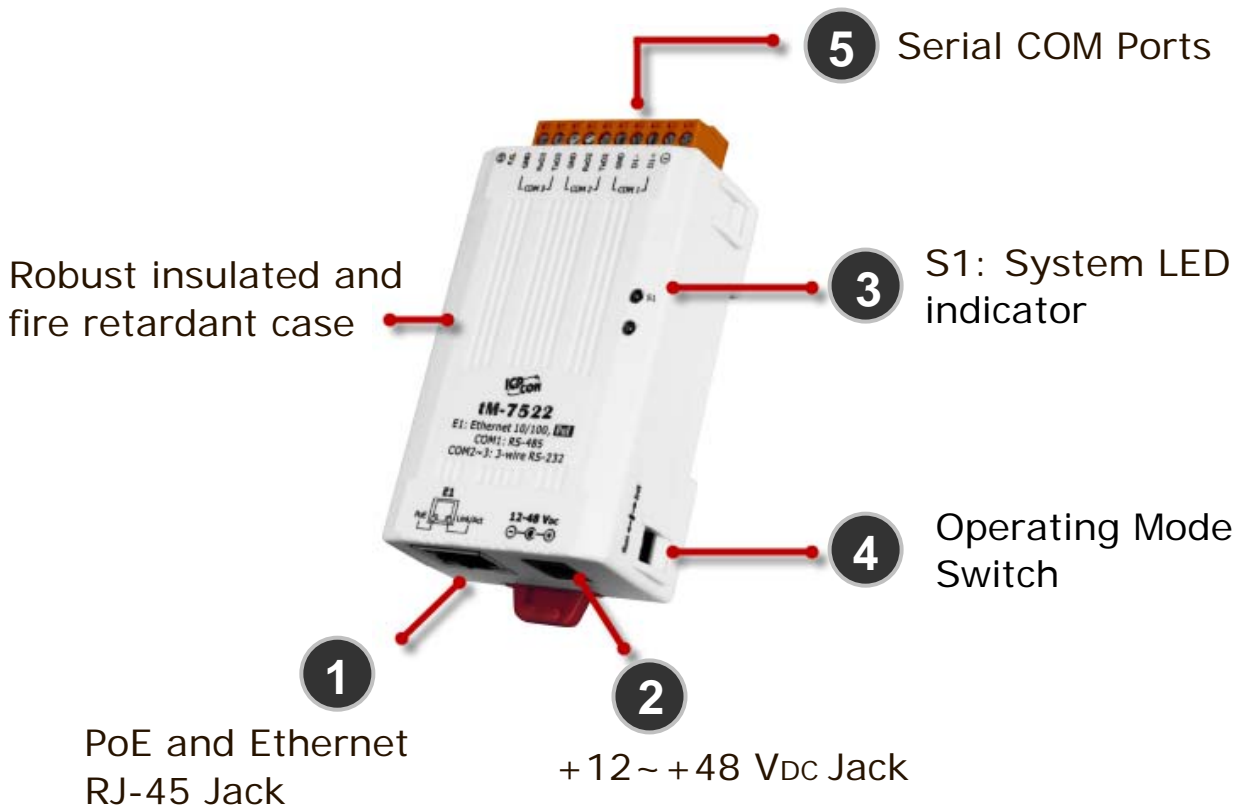


1 PoE and Ethernet RJ-45 Jack:

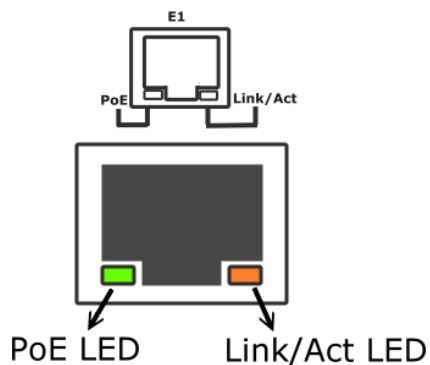

The tM-752N is equipped with a RJ-45 jack that is used as the 10/100 Base-TX Ethernet port and features networking capability. When an Ethernet link is detected and an Ethernet packet is received, the **Link/Act LED (Orange)** indicator will be illuminated. When power is supplied via PoE (Power-over-Ethernet), the **PoE LED (Green)** indicator will be illuminated.

2 +12 ~ +48 Vdc Jack:

The tM-752N is equipped with a +12~+48 VDC jack that is used as the power supply. If there is no PoE switch available on site, the tM-752N will accept power input from a DC adapter.

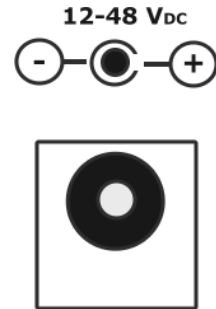

3 S1: System LED indicator:

Once power is supplied to the tM-752N, the system LED indicator will be illuminated as follows:

Function	System LED Behavior
Running Firmware	ON
Network ready	Flashing per 3 seconds
Serial Port Busy	Flashing per 0.2 seconds

4 Operating Mode Switch:

Init Mode: Configuration mode

Run Mode: Firmware operation mode




In the tM-752N series, the operating mode Switch is in the Run position by default. When updating the tM-752N firmware, the switch needs to be moved from the Run position to the Init position. The Switch must be returned to the Run position after the update is complete.

5 Serial COM Ports:

The numbers of serial COM Ports depend on the types of tM-752N modules. For more detailed information regarding the pin assignments of the Serial COM ports, please refer to [Section 2.6 “Pin Assignments”](#).

2.5 Dimensions


■ tM-7521/tM-7522 Dimensions:

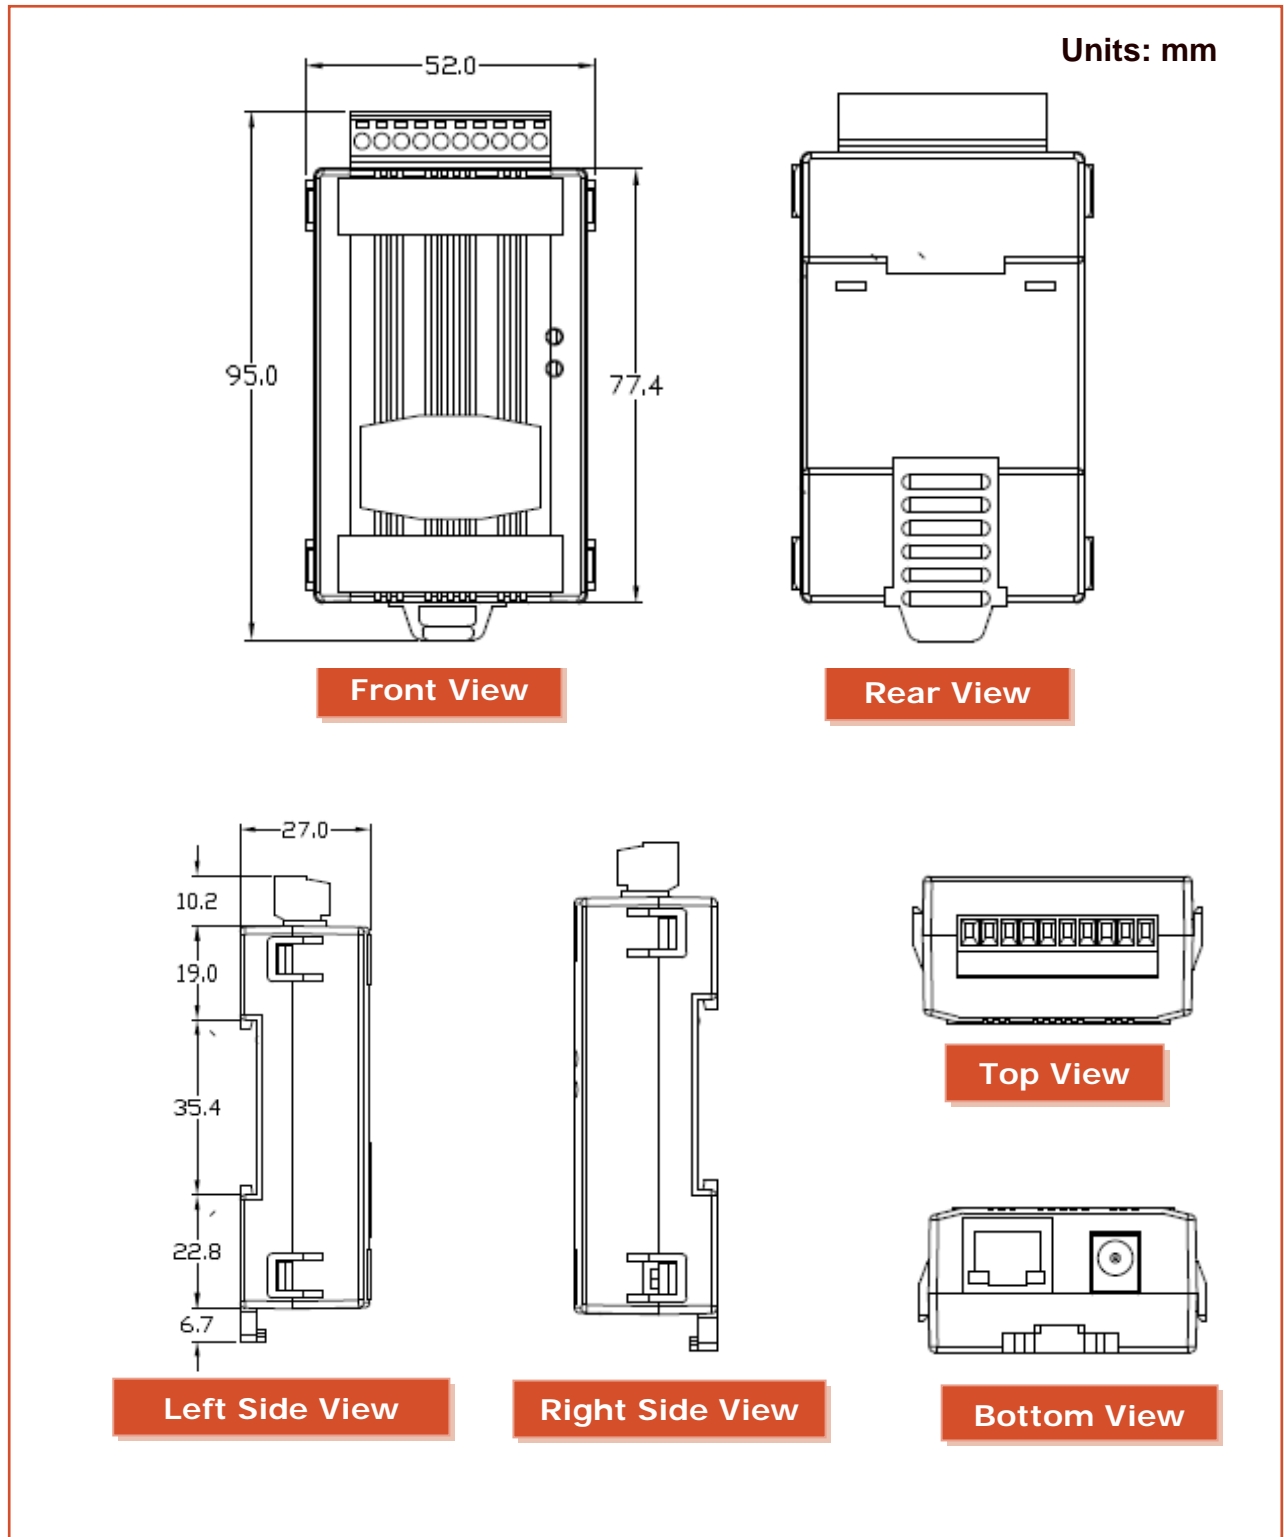

2.6 Pin Assignments


2.6.1 tM-7521 Pin Assignments

1-Port 2-Wire RS-485 and 1-Port 5-Wire RS-232 Module

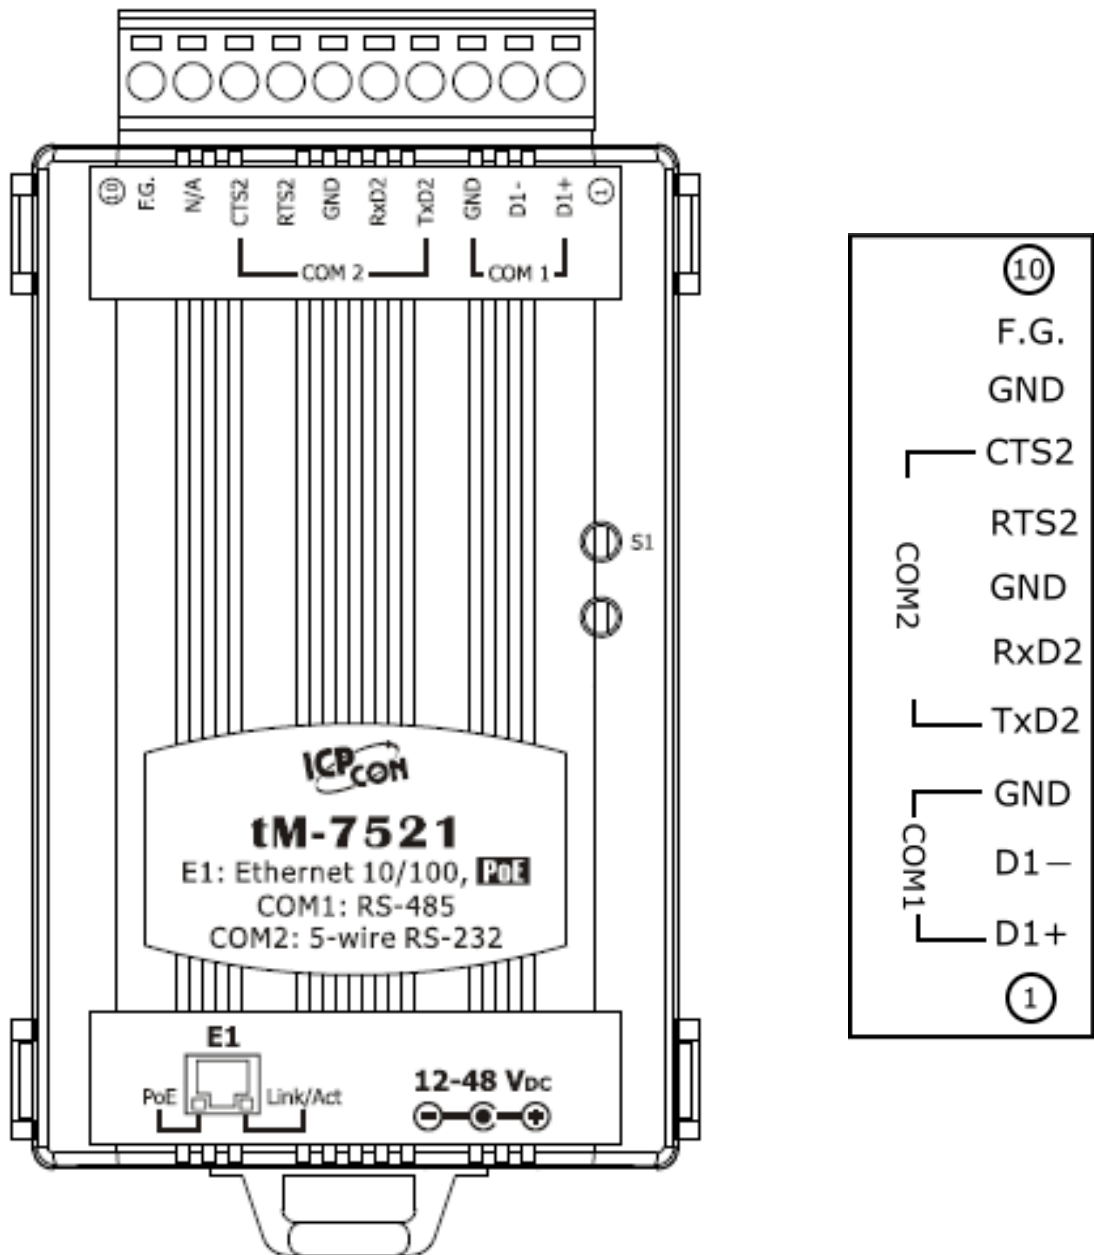

2.6.2 tM-7522 Pin Assignments


1-Port 2-Wire RS-485 and 2-Port 3-Wire RS-232 Module

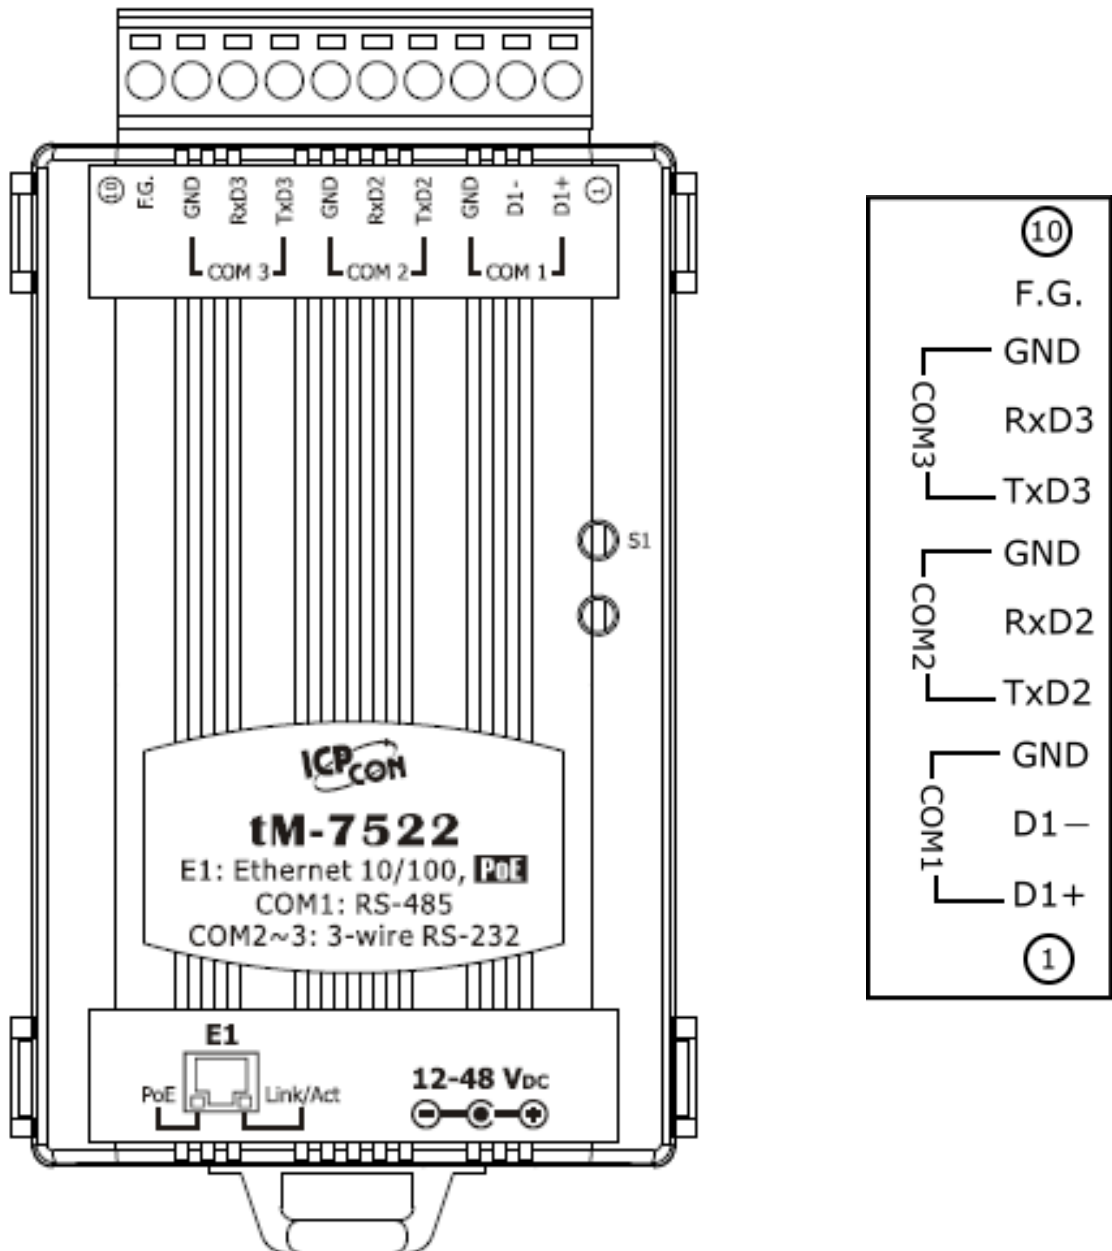


2.7 Wiring Notes

2.7.1 RS-232 Wiring Connections

5-wire RS-232 Connection (DB-9)

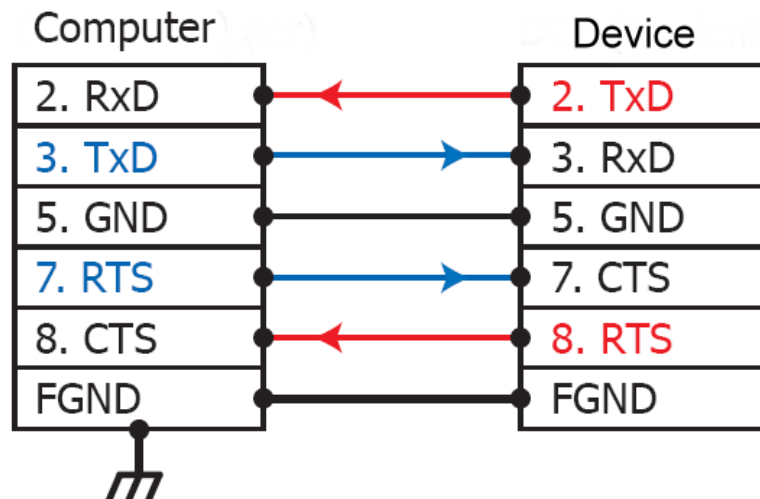


3-wire RS-232 Connection (Shorts unused signals RTS/CTS)

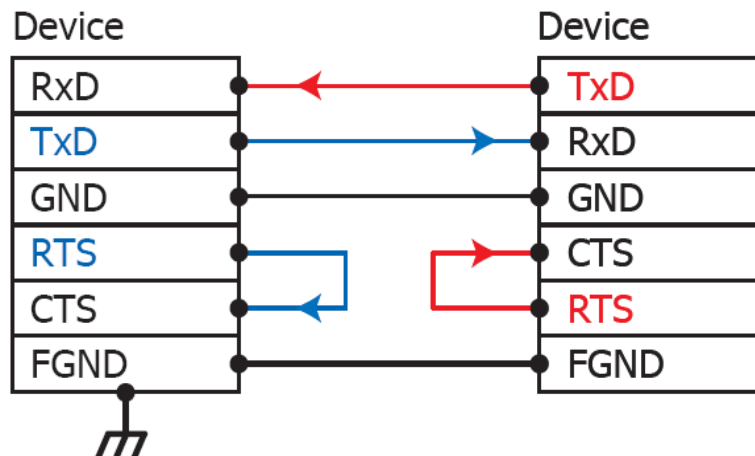

Note!!

1. For 3-Wire RS-232 connections, it is recommended that unused signals such as RTS/CTS and DTR/DSR are shorted, since some systems may still check the status of CTS and DSR.
2. FGND is the frame ground that provides a path to earth ground for ESD protection.

2.7.2 RS-485 Wiring Connections

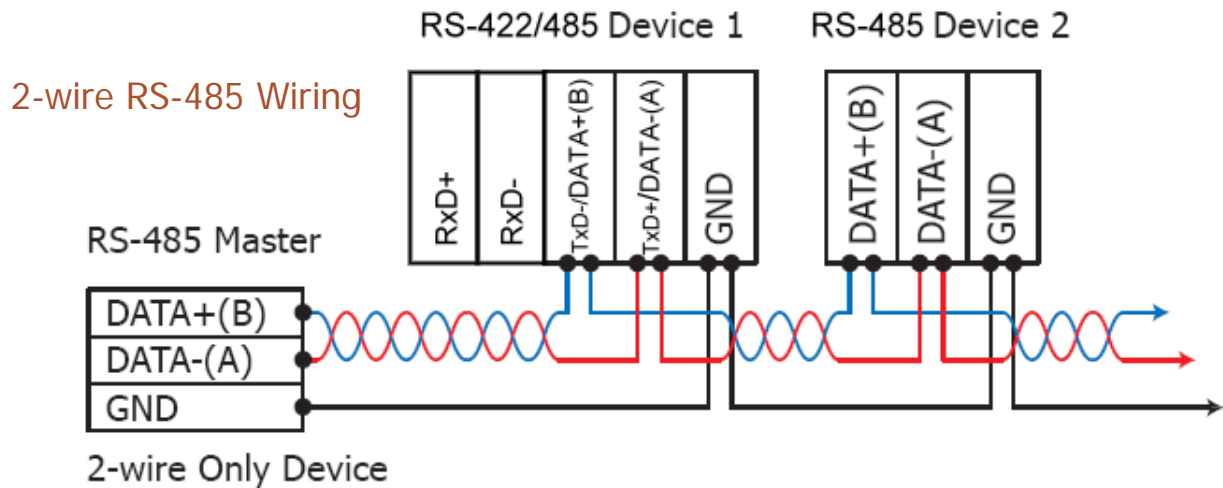

Note!!


For non-isolated RS-422/485 ports, you should connect all signal grounds of RS-422/485 devices together. This reduces the common-mode voltage between devices.

3. Setting up the tM-752N


Step 1: Connecting the power and Host PC


※ Prepare for device: NS-205PSE or NS-205 (optional) 、 I-7520 module (optional)

1. Check Init/Run switch is on “Run” position.

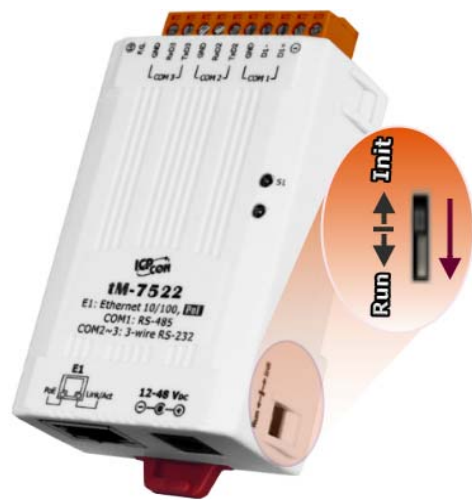


2. Connect both the tM-752N and your computer to the same sub network or the same Ethernet Switch, and power the tM-752N on. Make sure the System LED indicator is flashing.

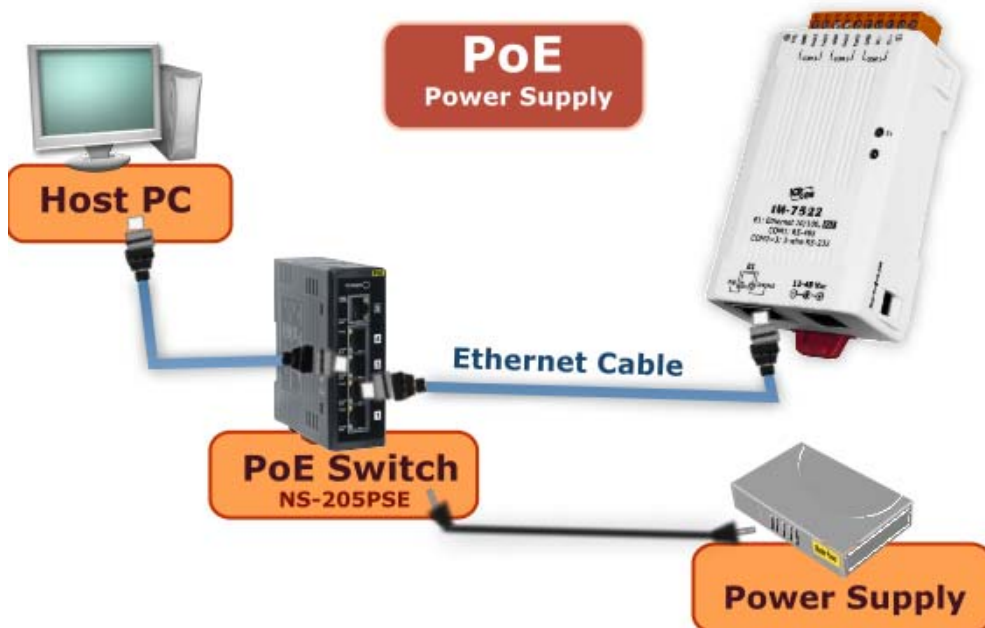


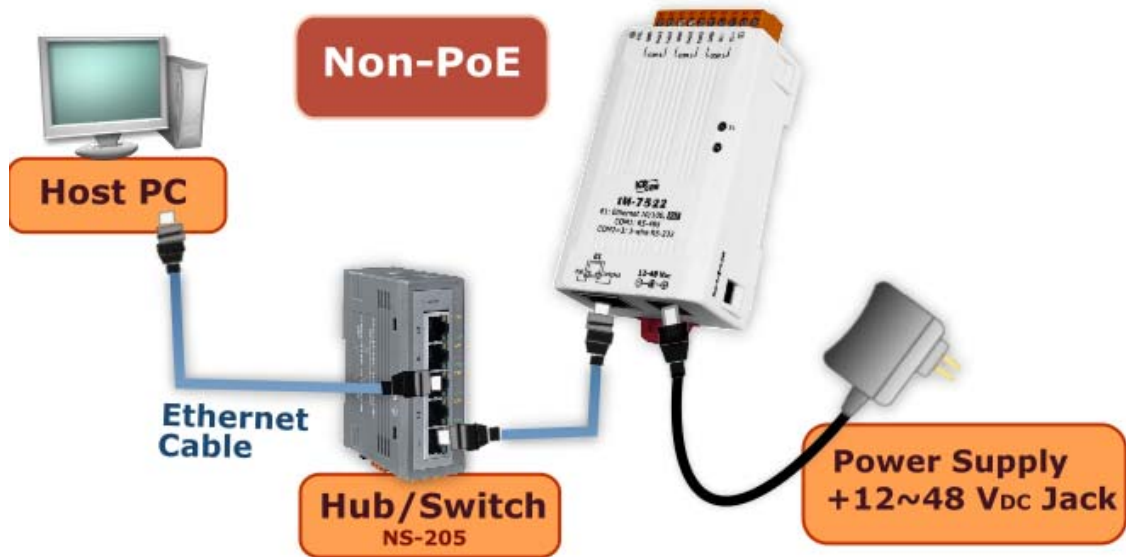


3. Perform a test wiring check as follows:

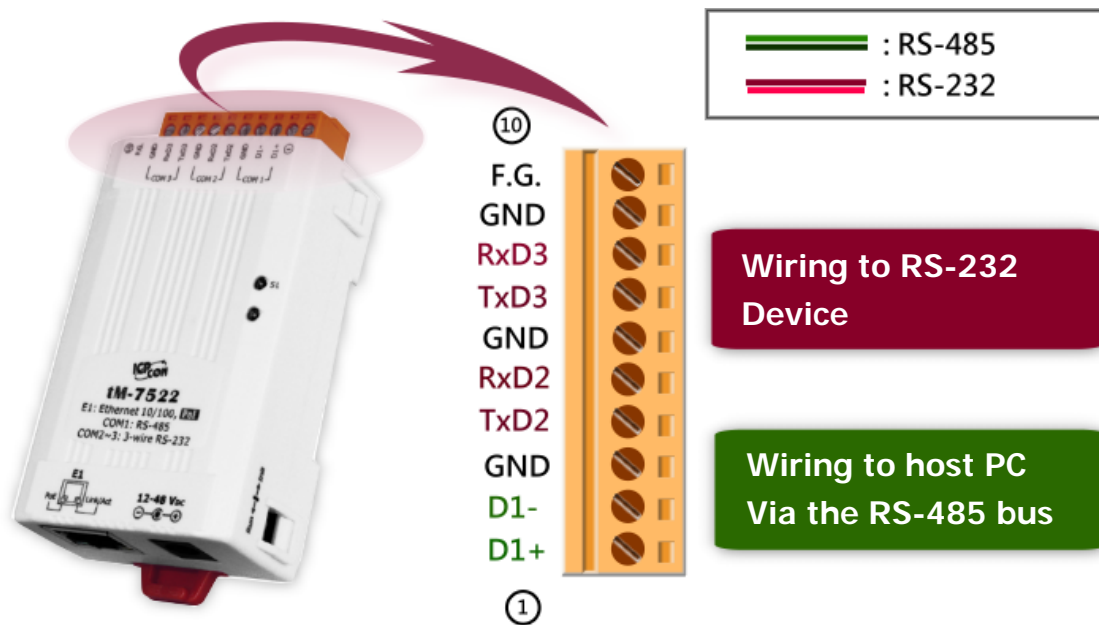


- Connect the tM-752N module to the RS-485 network as follows:

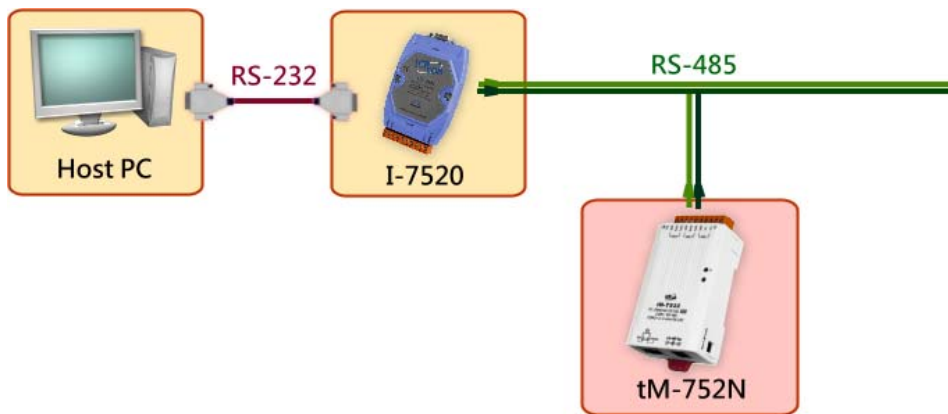

- Connecting to a Single Remote RS-232 Device as follows:

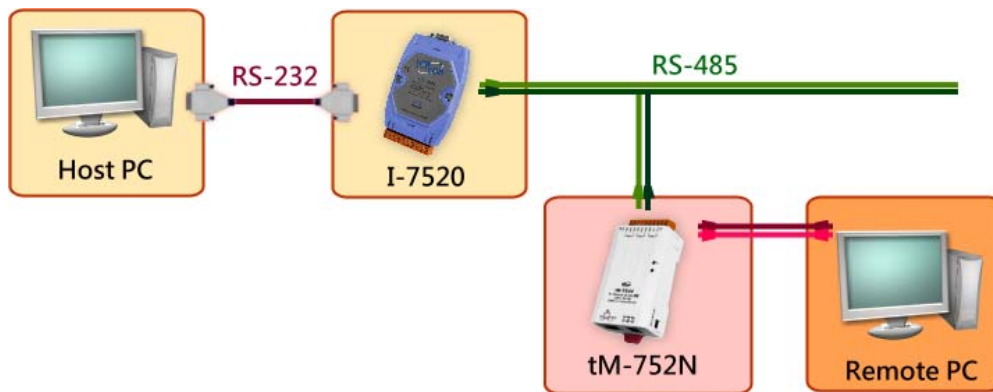

- Connecting to a Multiple Remote RS-232 Devices as follows:

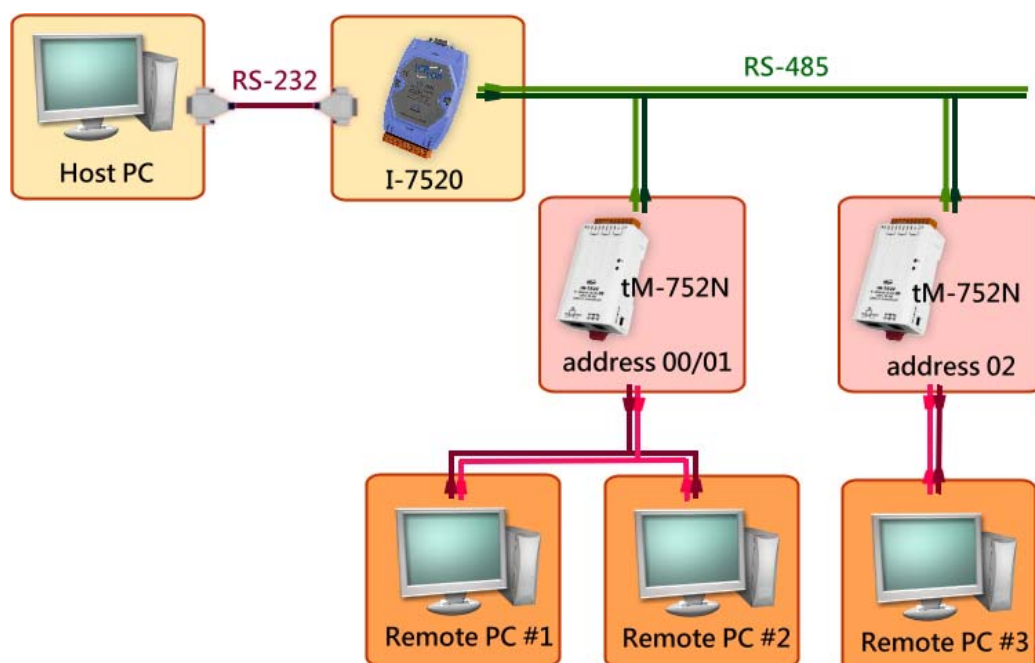

Step 2: Run the eSearch Utility

The eSearch Utility can be obtained from our FTP site:


<http://ftp.icpdas.com/pub/cd/tinymodules/napdos/software/esearch/>



Double-click the eSearch.exe.

Step 3: Search for the tM-752N module

Click the “**Search Servers**” button to search for your tM-752N module.

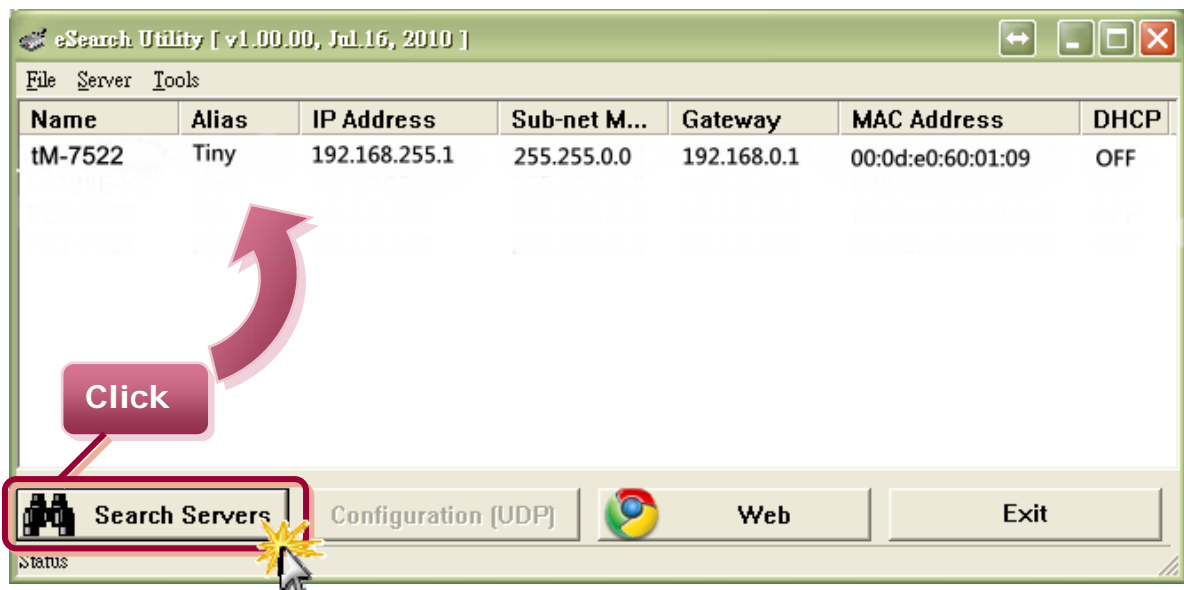


Step 4: Configure the network settings


1. tM-752N series modules are IP-based devices that may not be suitable for your network using a default IP address. Therefore, you must first assign a new IP address to the tM-752N module depending on your network settings.

The factory default IP settings are as follows:

Item	Default
IP Address	192.168.255.1
Subnet Mask	255.255.0.0
Gateway	192.168.0.1

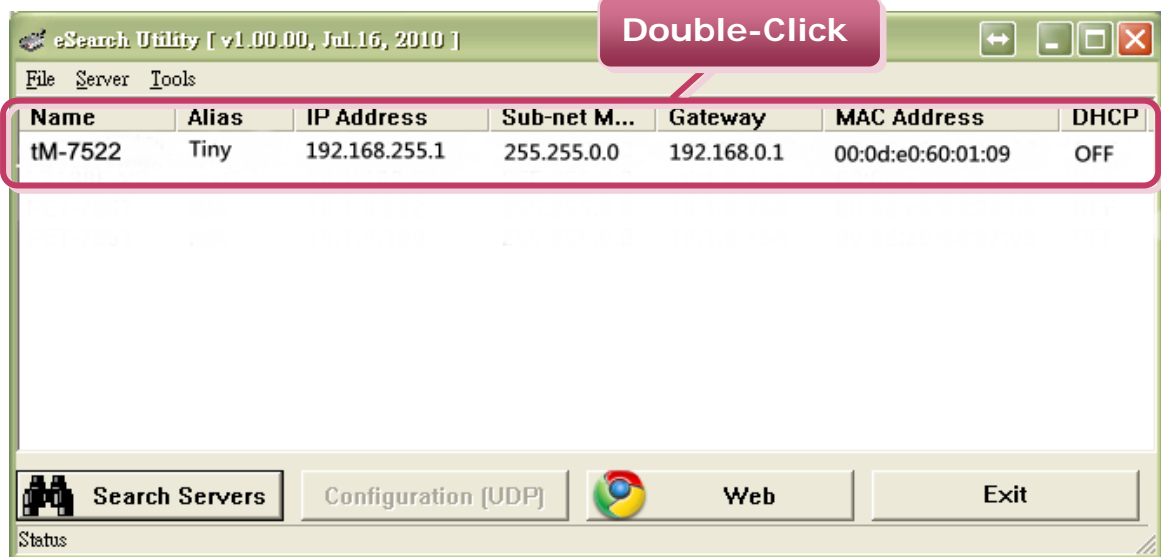


2. Contact your Network Administrator to obtain the correct network configuration information such as **IP/Mask/Gateway**. Enter the network settings and then click “OK”. The tM-752N will use the new settings within 2 seconds.

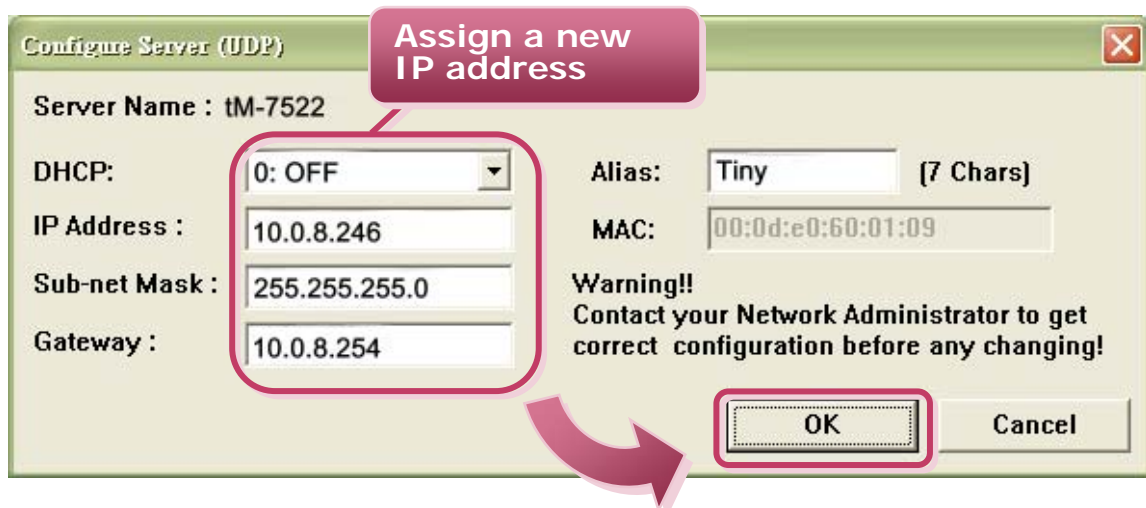


Step 5: Testing your tM-752N

1. Execute your hyper terminal program or our “**Terminal.exe**”.
The Terminal.exe can be obtained from our FTP site:
<http://ftp.icpdas.com/pub/cd/tinymodules/napdos/software/>
2. Check that the configuration of the COM Port is correct and then click the “**Open COM**” button.

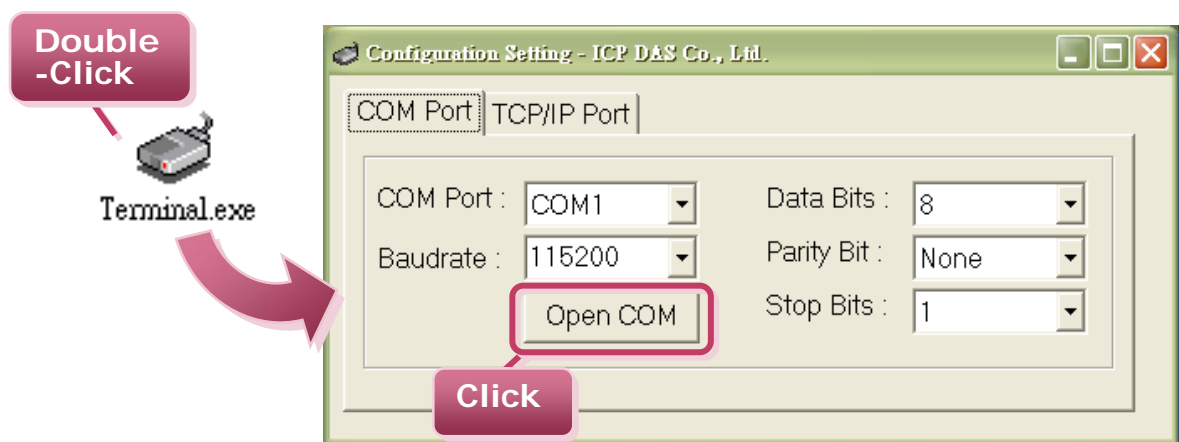

3. Type a string in the send field then click the “**Send**” button. If a response is received, it will be displayed in the received field.

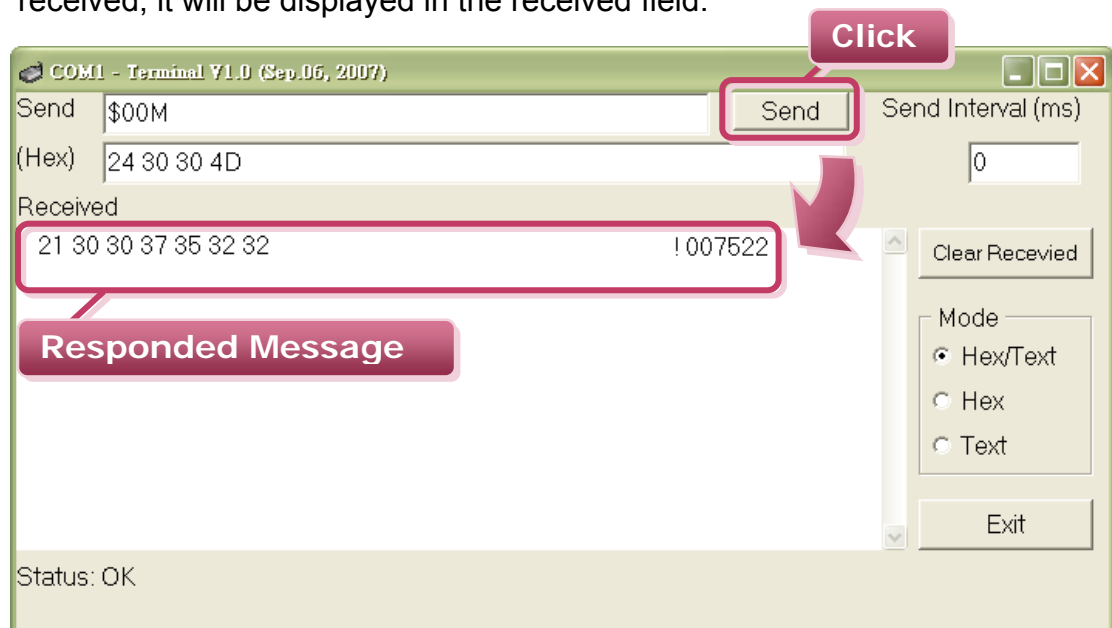

Note: For more detailed information regarding the command sets, please refer to [Section 5 “Command Sets”](#).

4. Web Configuration

The tM-752N module can be configured via serial port (refer to [ch5](#)) and also can be configured via web browser after its network is setting and functioning correctly.

4.1 Logging on to the tM-752N Web server

You can log onto the tM-752N web server from any computer that has Internet access.

Step 1: Open a browser

Mozilla Firefox, Google Chrome and Internet Explorer, for example are reliable and popular internet browsers that can be used to configure tM-752N modules.



Step 2: Type the URL address of the tM-752N

Make sure you have correctly configured the network settings for the tM-752N, or refer to [Section 3 “Setting up the tM-752N”](#).



Step 3: Enter the Password

After entering the IP address, the login dialog page will be displayed. Enter the password, and then click the “**Submit**” button to enter the configuration web page.

The factory default password is:

Item	Default
Login password	admin

Step 4: Welcome to tM-752N web server

After logging onto the tM-752N web server, the main page will appear.

Port Settings	Port 1	Port 2
Baud Rate (bps)	115200	115200
Data Size (bits)	8	8
Parity	None	None
Stop Bits (bits)	1	1
Flow Control	None	None
Serial Ending Char.	-	-
Port ID	0x00 (0)	0x00 (0)
Delimiter	-	-
Response Timeout (ms)	1000	1000
Continue Response Timeout (ms)	-	0

4.2 Home Page

The Home link connects to the main page, which contains two parts.

tM-752N Series

[Home](#) | [Port1](#) | [Port2](#) | [Network Setting](#) | [Filter](#) | [Change Password](#) | [Logout](#)

- The first part of this page provides basic information about the tM-752N hardware and software.

Status & Configuration

Model Name:	tM-7521	Alias Name:	Tiny
Firmware Version:	v1.0.0 [Sep.02, 2011]	MAC Address:	00-0D-E0-80
IP Address:	10.1.0.47	System Address:	0x00 (0)
Initial Switch:	OFF	System Timeout (Serial Watchdog, Seconds):	300

- The second part of this page provides the status of the port settings.

Current port settings:

Port Settings	Port 1	Port 2
Baud Rate (bps):	115200	115200
Data Size (bits):	8	8
Parity:	None	None
Stop Bits (bits):	1	1
Flow Control:	None	None
Serial Ending Chars:	-	-
Port ID:	0x00 (0)	0x00 (0)
Delimiter:	:	:
Response Timeout (ms):	1000	1000
Continue Response Timeout (ms):	-	0

4.3 Network Setting

tM-752N Series

[Home](#) | [Port1](#) | [Port2](#) | **[Network Setting](#)** | [Filter](#) | [Change Password](#) | [Logout](#)

4.3.1 Network and Miscellaneous Settings

- Check the model name and the software information.
- The software information includes the following items:
Firmware Version, Model Name, IP Address, Initial Switch, MAC Address, and System Timeout.

Network and Miscellaneous Settings


Model Name:	tM-7521	Alias Name:	Tiny
Firmware Version:	v1.0.0 [Sep.02, 2011]	MAC Address:	00-0D-E0-80-12-22
IP Address:	10.1.0.47	System Address:	0x00 (0)
Initial Switch:	OFF	System Timeout: (Serial Watchdog, Seconds)	300

After updating the tM-752N firmware, you can check the version information on this page.

4.3.2 IP Address Selection

The **Address Type**, **Static IP Address**, **Subnet Mask** and **Default Gateway** items are the most important network settings and should always correspond to the LAN definition. If they do not match, the tM-752N module will not operate correctly. If the settings are changed while the module is operating, any links to Virtual COM Port based applications currently in use will be lost and an error will occur.

IP Address Selection

Address Type:	DHCP/AutoIP 			
Static IP Address:	0	.	0	.
Subnet Mask:	0	.	0	.
Default Gateway:	0	.	0	.
MAC Address:	00-0D-E0-80-12-22 (Format FF-FF-FF-FF-FF-FF)			
<input type="button" value="Update Settings"/>				

■ Item Descriptions:


Item	Description
Address Type	Static IP: If you don't have a DHCP server in your network, you can configure the network settings manually. Please refer to the Section "4.3.2.1 Manually Configuration"
	DHCP/AutoIP: Dynamic Host Configuration Protocol (DHCP) is a network application protocol that automatically assigns an IP address to each device. Please refer to Section 4.3.2.2 "Dynamic Configuration"
Static IP Address	Each tM-752N on the network must have a unique IP address. This item used to assign specific IP address.
Subnet Mask	The Subnet Mask indicates which portion of the IP address is used to identify the local network or subnet.
Default Gateway	A gateway (or router) is a system that is used to connect an individual network with one or more additional networks.
MAC Address	The User-defined MAC address.
Update Settings	Click this button to save the new settings to the tM-752N.

Network settings can be configured using either **dynamic configuration** or **manual configuration**, as per the following instructions:

4.3.2.1 Manual Configuration

When using manual configuration, you have to assign all the network settings in the following manner:

- Step 1: Select “**Static IP**” as the address type
- Step 2: Enter the appropriate **network settings**
- Step 3: Click the “**Update Settings**” button to finish the configuration

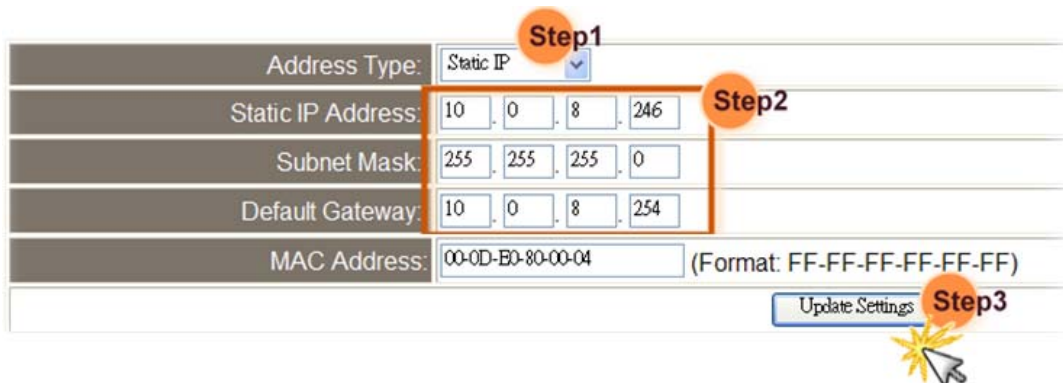


Address Type:	Static IP
Static IP Address:	10 . 0 . 8 . 246
Subnet Mask:	255 . 255 . 255 . 0
Default Gateway:	10 . 0 . 8 . 254
MAC Address:	00-0D-E0-80-00-04 (Format: FF-FF-FF-FF-FF-FF)
<input type="button" value="Update Settings"/>	

4.3.2.2 Dynamic Configuration

Dynamic configuration is very easy to perform. If you have a DHCP server, the network address can be dynamically configured in the following manner:

- Step 1: Select “**DHCP/AutoIP**” as the address type
- Step 2: Click the “**Update Settings**” button to finish the configuration

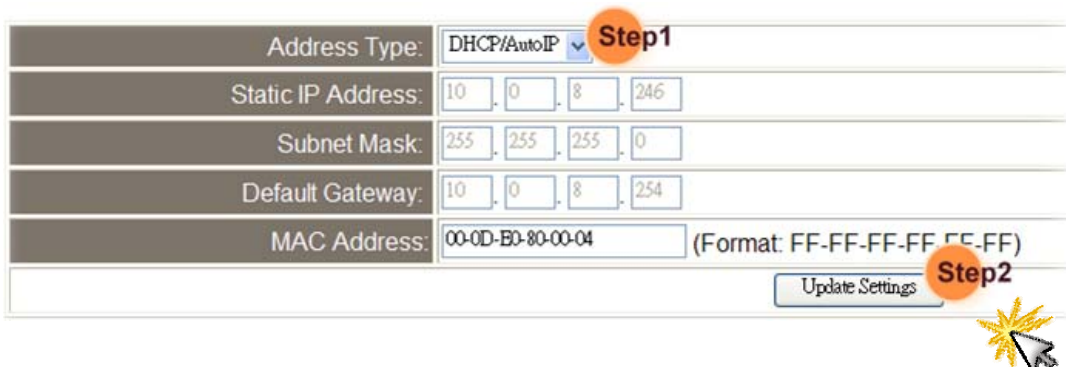

Address Type:	DHCP/AutoIP
Static IP Address:	10 . 0 . 8 . 246
Subnet Mask:	255 . 255 . 255 . 0
Default Gateway:	10 . 0 . 8 . 254
MAC Address:	00-0D-E0-80-00-04 (Format: FF-FF-FF-FF-FF-FF)
<input type="button" value="Update Settings"/>	

4.3.3 General Configuration Settings

The General Configuration Settings provides functions allowing items such as the Alias Name, System Timeout value, and Auto-logout value to be configured.

General Configuration Settings

System Address (ID)	<input type="text" value="0x00"/>
Enable Checksum	<input type="text" value="0"/> (0: Disable, 1: Enable)
Enable Response Prefix	<input type="text" value="0"/> (0: Disable, 1: Enable)
Alias Name:	<input type="text" value="Tiny"/> (Max. 18 chars)
System Timeout: (Network Watchdog)	<input type="text" value="300"/> (30 ~ 65535 seconds, Default= 300, Disable= 0)
Web Auto-logout	<input type="text" value="10"/> (1 ~ 65535 minutes, Default= 10, Disable= 0)
<input type="button" value="Update Settings"/>	

■ Item Descriptions:

Item	Description	Default
System Address	A Net ID for tM-752N series module	0
Enable Checksum	Add a checksum in the last field of message 0 = Disable (default); 1 = Enable	0
Enable Response Prefix	Add the prefix code in front of response message	0
Alias Name	Each tM-752N can be allocated a unique Alias name so that it can be identified the network.	Tiny
System Timeout (Network Watchdog)	If no communication occurs for a certain period in serial port, the system will be rebooted based on the configured system timeout value. Settings range: 30 ~ 65535 (seconds); Disabled = 0;	300
Web Auto-logout	If there is no action for a certain period in the web server, user account will be logout. Settings range: 1 ~ 65535 (minutes); Disable = 0;	10
Update Settings	Click this button to save the new settings to the tM-752N.	


4.3.4 Restore Factory Defaults

- To reset the settings to their factory defaults, follow these steps:

Step 1: Click the “**Restore Defaults**” button to reset the configuration.

Step 2: Click the “**OK**” button in the message dialog box.

Step 3: Check whether the tM-752N is reset to factory default settings for use with the eSearch.exe. Refer to [Section 3 “Setting up the tM-752N”](#).

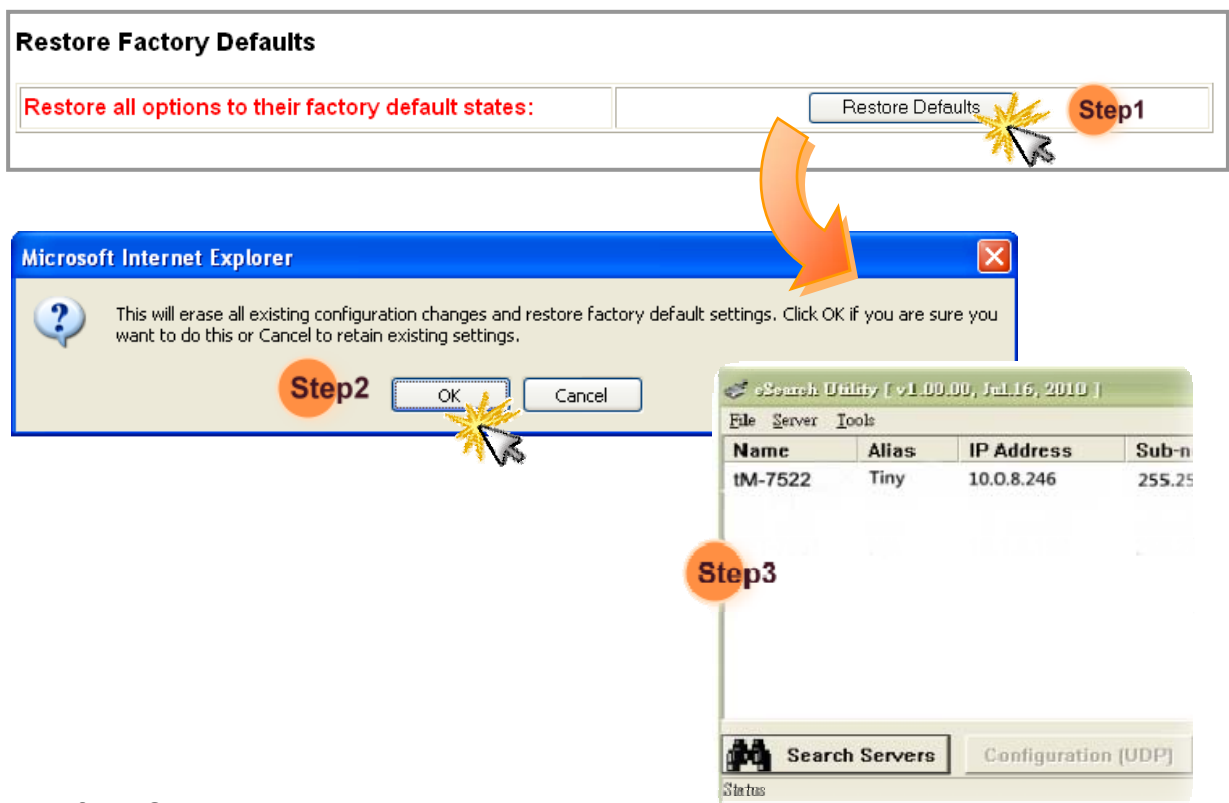

- Default Settings:

Item	Factory Default Settings
IP	192.168.255.1
Gateway	192.168.0.1
Mask	255.255.0.0

4.4 Serial Port Settings

tM-752N Series

[Home](#) | [Port1](#) | [Port2](#) | [Network Setting](#) | [Filter](#) | [Change Password](#) | [Logout](#)

4.4.1 Port1 Settings

Check the tM-752N hardware and software information.

Model Name:	tM-7521	Alias Name:	Tiny
Firmware Version:	v1.0.0 [Sep.02, 2011]	MAC Address:	00-0D-E0-80-12-22
IP Address:	10.1.0.47	System Address:	0x00 (0)
Initial Switch:	OFF	System Timeout (Serial Watchdog, Seconds)	300

The port settings provide the following functions:

These are 5 modes in ending-chars pattern.

Mode 0: 0x0D ; Mode 1: 0x0D,0x0A ; Mode 2: 0x0A,0x0D ; Mode 3: 0x0A ;

Mode 4: No Ending-Chars; Mode 5: User-defined (Byte count, Chars)

Port Settings	Current	Updated
Baud Rate (bps):	115200	<input type="text" value="115200"/> bits/S
Data Size (bits):	8	<input type="text" value="8"/> bits/character
Parity:	None	<input type="text" value="None"/>
Stop Bits(bits):	1	<input type="text" value="1"/>
Flow Control:	None	<input type="text" value="None"/>
Serial Ending Chars:	4	<input type="text" value="None"/> <input type="text" value="0"/> (e.g.
Delimiter:	:	<input type="text" value=":"/> (Can't use "\$%#@!~?>")
Port ID:	0x00	(=System ID)
Response Timeout(ms):	1000	<input type="text" value="1000"/> ms (Default= 300 ms, Disable=
Continue Response Timeout(ms):	0	<input type="text" value="0"/> ms (Default= 100 ms, Disable=
<input type="button" value="Submit"/>		

■ Item Descriptions:

Item	Description	Default
Baud Rate (bps)	Sets the Baud Rate for the COM ports.	115200
Data Size (bits)	Sets the Data Size for the COM ports.	8
Parity	Sets the Parity for the COM ports.	None
Stop Bits (bits)	Sets the Stop Bits for the COM ports.	1
Flow Control	Sets the Flow Control for the COM ports.	None
Serial Ending Chars	<p>The tM-752N can determine the end of the data immediately after the ending-chars pattern is identified from the incoming serial data.</p> <p>There are some different modes can be used: Mode 0 → 0x0D (CR) Mode 1 → 0x0D+0x0A (CR+LF) Mode 2 → 0x0A+0x0D (LF+CR) Mode 3 → 0x0A (LF) Mode 4 → None (Disabled) Mode 5 → User-Defined (Note: Mode 5 can only set in web configuration)</p> <p>The number of User-defined ending-char can be 1~2 chars. For example: 1 char: 1,0x0D; 2 chars: 2,0x0D,0x0A</p>	4
Delimiter	This is a special symbol, placed in the front of command/response message, can be used to identify the legality of message.	:
Port ID	The Port ID can be used to identify each RS-232 port; the value is the increasing value of System ID	0
Response Timeout	<p>For Port 1 (RS-485) in end character mode is “4” (it means that No end character), wait for this timeout to elapse without receiving any further data in order to determine the end of the command.</p> <p>For Port 2 and 3 (RS-232), wait for this timeout to elapse without receiving any data.</p>	1000
Continue Response Timeout	<p>Only used for Port 2 and 3 (RS-232) in end character mode is “4” (it means that No end character),</p> <p>If the time between receiving a new character and last one is smaller this timeout, this character can be seem as part of a response.</p>	0

4.5 Change Password

tM-752N Series

[Home](#) | [Port1](#) | [Port2](#) | [Network Setting](#) | [Filter](#) | **Change Password** | [Logout](#)

Change Password
The length of the password is 12 characters maximum.

Current password:

New password:

Confirm new password:

■ Item Descriptions:

Item	Description
Current password	Enter the old password (default is admin)
New password	Enter the new password
Confirm new password	Enter the new password again
Submit	Click this button to save the new settings to the tM-752N.

4.6 Logout

Click the “**Logout**” tag to log out from the system and return to the login page.

tM-752N Series

[Home](#) | [Port1](#) | [Port2](#) | [Network Setting](#) | [Filter](#) | [Change Password](#) | **Logout**

The system is logged out.
To enter the web configuration, please type password in the following field.

Login password:

Note:
This web configuration requires JavaScript enabled in your browser (Firefox, IE...).
If the web configuration does not work, please check the JavaScript settings first.

When using IE, please disable its cache as follows.
Menu items: Tools \ Internet Options... \ General \ Temporary Internet Files \ Settings... \ Every visit to the page

5. Command Sets

5.1 Command sets table

Note: “AA” means the system address.

Section	Command	Response	Description
5.1.1	\$AAA[addr]	!AA	Read/Set the System Address
5.1.2	\$AABN[baud rate]	!AA[baud rate]	Read/Set the Baud Rate for COM-1/2/3
5.1.3	\$AADN[data-bit]	!AA[data-bit]	Read/Set the Data Bit for COM-1/2/3
5.1.4	\$AAPN[parity-bit]	!AA[parity-bit]	Read/Set the Parity Bit for COM-1/2/3
5.1.5	\$AAON[stop-bit]	!AA[stop-bit]	Read/Set the Stop Bit for COM-1/2/3
5.1.6	\$AA6[ID]	!AA	Set the ID-string for COM-2/3
5.1.7	\$AA7	!AA[ID]	Read the ID-string for COM-2/3
5.1.8	\$AAC[delimiter]	!AA[delimiter]	Read/Set the delimiter for COM-2/3
5.1.9	(delimiter)AA(bypass)	Depend on device	Bypass the data string to COM-2/3
5.1.10	\$AAKV	!AA[checksum]	Read/Set the checksum status of COM1 (RS485)
5.1.11	\$AATN[CrLfmode]	!AA[CrLfmode]	Read/Set the end char which is used to judge the end of command/response for COM1/2/3
5.1.12	\$AAM	!AA[name]	Read the module name
5.1.13	\$AAU	[data]	Read data from the RS-232 COM port buffer.
5.1.14	\$AAJN	!AA[timeout]	Reads/Sets the delay time before determining whether the end of a Command/response has been sent/received
5.1.15	\$AAEV	!AA(status)	Read/Set prefixed address status on the response

5.1.1 \$AAA[addr]

■ Description:

This function reads/sets the system address.

■ Syntax:

\$AAA[chk](CrLf)	Reads the system address stored in the Flash
\$AAA[addr][chk](CrLf)	Sets the system address

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Byte 9-10	Note
\$	AA	A	[chk]	(CrLf)	-	Read
			[addr]	[chk]	(CrLf)	Write
\$	Delimiter character					
AA	2-character system address in Hex format. The valid range is from 00~FF					
[chk]	2-character checksum. If the checksum is disabled → no [chk]					
(CrLf)	End Character					

[Response]

Byte 1	Byte 2-3	Byte 4-5	Byte 6-7	Note
!	AA	[chk]	(CrLf)	Valid
?				Invalid
!	Delimiter character indicating a valid command			
?	Delimiter character indicating an invalid command			
AA	2-character system address in Hex format			
[chk]	2-character checksum. If the checksum is disabled → no [chk]			
(CrLf)	End Character			
If No response → syntax error, communication error, or address error				

■ **Example:**

e.g.	Command	Response
1	\$01A02(CrLf)	!01(CrLf)
	The system Address 01 is changed to 02.	
2	\$02AA0(CrLf)	!02(CrLf)
	The system address 02 is changed to A0.	
3	\$A0A(CrLf)	!A0(CrLf)
	The system address is A0.	

5.1.2 \$AABN[baud rate]

■ Description:

This function reads/sets the Baud Rate for COM 1/2/3.

■ Syntax:

\$AABN[chk](CrLf)	Reads the Baud Rate for COM 1/2/3 stored in the Flash
\$AABN[baud rate][chk](CrLf)	Sets the Baud rate for COM 1/2/3

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6-7	Byte 8-9	Byte 10-11	Note
\$	AA	B	N	[chk]	(CrLf)	-	Read
				[baud rate]	[chk]	(CrLf)	Write
\$	Delimiter character						
AA	2-character port address in Hex format. The valid range is from 00~FF						
N	0 = Read/Set the Baud Rate for the COM 1 1 = Read/Set the Baud Rate for the COM 2/3						
[baud rate]	Valid values are 1200/2400/4800/9600/19200/38400/57600/115200						
[chk]	2-character checksum. If the checksum is disabled → no [chk]						
(CrLf)	End Character						

[Response]

Byte 1	Byte 2-3	Byte 4-6	Byte 7-8	Byte 9-10	Note
!	AA	[baud rate]	[chk]	(CrLf)	Read
Byte 1	Byte 2-3	Byte 4-5	Byte 6-7		Note
!	AA	[chk]	(CrLf)		Valid
?					Invalid
!	Delimiter character indicating a valid command				
?	Delimiter character indicating an invalid command				
AA	2-character port address in Hex format				
[baud rate]	Valid values are 1200/2400/4800/9600/19200/38400/57600/115200				
[chk]	2-character checksum. If the checksum is disabled → no [chk]				
(CrLf)	End Character				
If No response → syntax error, communication error, or address error					

■ **Example:**

(Assume the AA address value of the tM-752N module is 01)

e.g.	Command	Response
1	\$01B19600(CrLf)	!01(CrLf)
	Changes the COM2 (RS-232) Baud Rate to 9600 bps.	
2	\$02B138400(CrLf)	!02(CrLf)
	Changes the COM3 (RS-232) Baud Rate to 38400 bps.	
3	\$01B0(CrLf)	!0157600(CrLf)
	Read the COM1 (RS-485) Baud Rate.	

5.1.3 \$AADN[data-bit]

■ **Description:**

This function reads/sets the data bit for COM 1/2/3.

■ **Syntax:**

\$AADN[chk](CrLf)	Reads the data bit for COM 1/2/3 stored in the Flash
\$AADN[data-bit][chk](CrLf)	Sets the data bit for COM 1/2/3

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6-7	Byte 8-9	Byte 10-11	Note
\$	AA	D	N	[chk]	(CrLf)	-	Read
				[data-bit]	[chk]	(CrLf)	Write
<p>\$ Delimiter character</p> <p>AA 2-character port address in Hex format. The valid range is from 00~FF</p> <p>N 0 = Reads/Sets the data bit for the COM 1 1 = Reads/Sets the data bit for the COM 2/3</p> <p>[data-bit] Valid values are 5/6/7/8</p> <p>[chk]: 2-character checksum. If the checksum is disabled → no [chk]</p> <p>(CrLf): End Character</p>							

[Response]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Note
!	AA	[data-bit]	[chk]	(CrLf)	Read
Byte 1	Byte 2-3	Byte 4-5	Byte 6-7		Note
!	AA	[chk]	(CrLf)		Valid
?					Invalid
<p>! Delimiter character indicating a valid command</p> <p>? Delimiter character indicating an invalid command</p> <p>AA 2-character port address in Hex format</p> <p>[chk] 2-character checksum. If the checksum is disabled → no [chk]</p> <p>(CrLf) End Character</p> <p>If no response → syntax error, communication error, or address error</p>					

■ **Example:**

(Assume the AA address value of the tM-752N module is 01)

e.g.	Command	Response
1	\$01D08(CrLf)	!01(CrLf)
	Changes the data bit to 8 for the COM1 (RS-485)	
2	\$01D17(CrLf)	!01(CrLf)
	Changes the data bit to 7 for the COM2 (RS-232)	
3	\$02D17(CrLf)	!02(CrLf)
	Changes the data bit to 7 for the COM3 (RS-232)	

5.1.4 \$AAPN[parity-bit]

■ Description:

This function reads/sets the parity bit for COM 1/2/3.

■ Syntax:

\$AAPN[chk](CrLf)	Reads the parity bit for COM 1/2/3 stored in the Flash
\$AAPN[parity-bit][chk](CrLf)	Sets the parity bit for COM 1/2/3

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6-7	Byte 8-9	Note	
\$	AA	P	N	[chk]	(CrLf)	Read	
Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6	Byte 7-8	Byte 9-10	Note
\$	AA	P	N	[parity-bit]	[chk]	(CrLf)	Write
\$	Delimiter character						
AA	2-character port address in Hex format. The valid range is from 00~FF						
N	0 = Reads/Sets the parity bit for the COM 1 1 = Reads/Sets the parity bit for the COM 2/3						
[parity-bit]	0=NONE, 1=EVEN, 2=ODD, 3=MARK, 4=SPACE						
[chk]	2-character checksum. If the checksum is disabled → no [chk]						
(CrLf)	End Character						

[Response]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Note
!	AA	[parity-bit]	[chk]	(CrLf)	Read

Byte 1	Byte 2-3	Byte 4-5	Byte 6-7	Byte 8-9	Note
!	AA	[chk]	(CrLf)	-	Valid
?					Invalid

!	Delimiter character indicating a valid command
?	Delimiter character indicating an invalid command
AA	2-character port address in Hex format
[chk]	2-character checksum. If the checksum is disabled → no [chk]
(CrLf)	End Character

If No response → syntax error, communication error, or address error

■ **Example:**

(Assume the AA address value of the tM-752N module is 01)

e.g.	Command	Response
1	\$01P00(CrLf)	!01(CrLf)
	Changes parity-bit to NONE for COM1 (RS-485)	
2	\$01P10(CrLf)	!01(CrLf)
	Changes parity-bit to NONE for COM2 (RS-232)	
3	\$02P11(CrLf)	!02(CrLf)
	Changes parity-bit to EVEN for COM3 (RS-232)	

5.1.5 \$AAON[stop-bit]

■ Description:

This function reads/sets the stop bit for COM 1/2/3.

■ Syntax:

\$AAON[chk](CrLf)	Reads the stop bit of COM 3 stored in the Flash
\$AAON[stop-bit][chk](CrLf)	Sets the stop bit for COM 3

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6-7	Byte 8-9	Note
\$	AA	O	N	[chk]	(CrLf)	Read

Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6	Byte 7-8	Byte 9-10	Note
\$	AA	O	N	[stop-bit]	[chk]	(CrLf)	Write

\$	Delimiter character						
AA	2-character port address in Hex format. The valid range is from 00~FF						
N	0 = Reads/Sets the stop bit for the COM 1 1 = Reads/Sets the stop bit for the COM 2/3						
[stop-bit]	Valid values are 1/2						
[chk]	2-character checksum. If the checksum is disabled → no [chk]						
(CrLf)	End Character						

[Response]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Note
!	AA	[stop-bit]	[chk]	(CrLf)	Read

Byte 1	Byte 2-3	Byte 4-5	Byte 6-7	Byte 8-9	Note
!	AA	[chk]	(CrLf)	-	Valid
?					Invalid

!	Delimiter character indicating a valid command
?	Delimiter character indicating an invalid command
AA	2-character port address in Hex format
[chk]	2-character checksum. If the checksum is disabled → no [chk]
(CrLf)	End Character

If no response → syntax error, communication error, or address error

■ **Example:**

(Assume the AA address value of the tM-752N module is 01)

e.g.	Command	Response
1	\$01012(CrLf)	!02(CrLf)
	Changes the stop bit to 2 for the COM2 (RS-232)	
2	\$02012(CrLf)	!03(CrLf)
	Changes the stop bit to 2 of the COM3 (RS-232)	

5.1.6 \$AA6[ID]

■ Description:

This function sets the ID string for COM 2/3.

Max-number of characters = 15.

■ Syntax:

\$AA6[ID][chk](CrLf)	Sets the ID string for COM 2/3
----------------------	--------------------------------

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5-12	Byte 13-14	Byte 15-16
\$	AA	6	[ID]	[chk]	(CrLf)
\$	Delimiter character				
AA	2-character port address in the Hex format. The valid range is from 00~FF				
[ID]	ID string, (Max-number of character is 15)				
[chk]	2-character checksum. If the checksum is disabled → no [chk]				
(CrLf)	End Character				

[Response]

Byte 1	Byte 2-3	Byte 4-5	Byte 6-7	Note
!	AA	[chk]	(CrLf)	Valid
?				Invalid
!	Delimiter character indicating a valid command			
?	Delimiter character indicating an invalid command			
AA	2-character port address in Hex format			
[chk]	2-character checksum. If the checksum is disabled → no [chk]			
(CrLf)	End Character			
If no response → syntax error, communication error, or address error				

■ **Example:**

(Assume the AA address value of the tM-752N module is 01)

e.g.	Command	Response
1	\$016Temperature1(CrLf)	!01(CrLf)
	The ID for the COM2 (RS-232) is Temperature1	
2	\$026HP34401A-1(CrLf)	!02(CrLf)
	The ID for the COM3 (RS-232) is HP34401A-1	

5.1.7 \$AA7

■ Description:

This function reads the ID string for COM 2/3.

■ Syntax:

\$AA7[chk](CrLf)	Reads the ID string for COM 2/3
------------------	---------------------------------

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8
\$	AA	7	[chk]	(CrLf)
\$	Delimiter character			
AA	2-character port address in Hex format. The valid range is from 00~FF			
[chk]	2-character checksum. If the checksum is disabled → no [chk]			
(CrLf)	End Character			

[Response]

Byte 1	Byte 2-3	Byte 4-10	Byte 11-12	Byte 13-14	Note
!	AA	[ID]	[chk]	(CrLf)	Read
Byte 1	Byte 2-3	Byte 4-5	Byte 6-7	Note	
?	AA	[chk]	(CrLf)	Invalid	
!	Delimiter character indicating a valid command				
?	Delimiter character indicating an invalid command				
AA	2-character port address in Hex format				
(ID)	ID string. Maximum number of characters=15				
[chk]	2-character checksum. If the checksum is disabled → no [chk]				
(CrLf)	End Character				
If no response → syntax error, communication error, or address error					

■ **Example:**

(Assume the AA address value of the tM-752N module is 01)

e.g.	Command	Response
1	\$017(CrLf)	!01Temperature1(CrLf)
	The ID for the RS-232 (COM2) is Temperature1	
2	\$027(CrLf)	!02HP34401A-1(CrLf)
	The ID for the RS-232 (COM3) is HP34401A-1	

5.1.8 \$AAC[delimiter]

■ Description:

This reads/sets the delimiter for COM 2/3.

■ Syntax:

\$AAC[chk](CrLf)	Reads the delimiter for COM 2/3 stored in the Flash
\$AAC[delimiter][chk](CrLf)	Sets the delimiter for COM 2/3

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Note
\$	AA	C	[chk]	(CrLf)	Read

Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6-7	Byte 8-9	Note
\$	AA	C	[delimiter]	[chk]	(CrLf)	Write

\$	Delimiter character				
AA	2-character port address in Hex format. The valid range is from 00~FF				
[delimiter]	Default delimiter is :				
[chk]	2-character checksum. If the checksum is disabled → no [chk]				
(CrLf)	End Character				

[Response]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Note
!	AA	[delimiter]	[chk]	(CrLf)	Read

Byte 1	Byte 2-3	Byte 4-5	Byte 6-7	Note
!	AA	[chk]	(CrLf)	Valid
?				Invalid

!	Delimiter character indicating a valid command				
?	Delimiter character indicating an invalid command				
AA	2-character port address in Hex format				
[chk]	2-character checksum. If the checksum is disabled → no [chk]				
(CrLf)	End Character				

If no response → syntax error, communication error ,or address error

■ **Example:**

(Assume the AA address value of the tM-752N module is 01)

e.g.	Command	Response
1	\$01C(CrLf)	!01:(CrLf)
	Reads the delimiter for the COM2 (RS-232)	
2	\$02C*(CrLf)	!02:(CrLf)
	Changes the delimiter for the COM3 (RS-232)	
<p>Notes:</p> <p>(1) The delimiter of COM 2/3 can be different.</p> <p>(2) The default delimiter is “ : ”</p> <p>(3) The delimiter cannot be “ \$ ”, “ ~ ”, “ # ”, “ @ ”, “ % ”, “ CR & LF ”</p>		

5.1.9 [delimiter]AA[bypass]

■ Description:

This function bypasses the data string to COM 2/3.

■ Syntax:

(delimiter)AA(pass)[chk](CrLf) Bypasses the data string to COM 2/3

[Request]

Byte 1	Byte 2-3	Byte 4 - n	Byte (n+1) - (n+2)	Byte (n+3) - (n+4)
(delimiter)	AA	(bypass)	[chk]	(CrLf)
AA	2-character port address in Hex format. The valid range is from 00~FF			
(bypass)	The data string sent to COM 2/3			
[chk]	2-character checksum. If the checksum is disabled → no [chk]			
(CrLf)	End Character			

[Response]

The response received will depend on the device used.

■ Example:

(Assume the AA address value of the tM-752N module is 01. The delimiters for COM2/3 are “:” and “*”, respectively)

e.g.	Command	Response
1	:01abcde(CrLf)	Depends on the device
	Send abcde to COM2	
2	*02test(CrLf)	Depends on the device
	Send test to COM3	

5.1.10 \$AAKV

■ Description:

This function reads/sets the checksum status.

■ Syntax:

\$AAK[chk](CrLf)	Reads the checksum status stored in the Flash
\$AAKV[chk](CrLf)	Sets the checksum status

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Note
\$	AA	K	[chk]	(CrLf)	Read

Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6-7	Byte 8-9	Note
\$	AA	K	[V]	[chk]	(CrLf)	Write

\$	Delimiter character					
AA	2-character module address in Hex format. The valid range is from 00~FF					
K	0 = checksum disabled 1 = checksum enabled					
[chk]	2-character checksum. If the checksum is disabled → no [chk]					
(CrLf)	End Character					

[Response]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Note
!	AA	[K]	[chk]	(CrLf)	Read

Byte 1	Byte 2-3	Byte 4-5	Byte 6-7	Note
!	AA	[chk]	(CrLf)	Valid
?				Invalid

!	Delimiter character indicating a valid command
?	Delimiter character indicating an invalid command
AA	2-character module address in Hex format
K	0 = checksum disabled 1 = checksum enabled
[chk]	2-character checksum. If the checksum is disabled → no [chk]
(CrLf)	End Character

If no response: → syntax error, communication error, or address error

■ **Example:**

(Assume the first AA address value of the tM-752N module is 01)

e.g.	Command	Response
1	\$01K000(CrLf)	!0182(CrLf)
	Disables the checksum chk: 00,82	
2	\$01K1(CrLf)	!01(CrLf)
	The checksum is enabled	

Notes:
The checksum enable/disable function is valid for COM1, since the checksum is used in communication between tm-752N and host PC. Not for serial devices!

5.1.11 \$AATN[CrLfmode]

■ Description:

This function reads/sets what the characters are as judging the end of command or response string.

■ Syntax:

\$AATN[chk](CrLf)	Reads the setting value of CrLfmode stored in the Flash
\$AATN(CrLfmode)[chk](CrLf)	Sets the setting value of CrLfmode for the command/response string

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6-7	Byte 8-9	Note
\$	AA	T	N	[chk]	(CrLf)	Read

Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6	Byte 7-8	Byte 9-10	Note
\$	AA	T	N	[CrLfmode]	[chk]	(CrLf)	Write

\$	Delimiter character					
AA	2-character port address in Hex format. The valid range is from 00~FF					
N	0 = Reads/Sets the CrLfmode value of the COM 1 1 = Reads/Sets the CrLfmode value of the COM 2/3					
(CrLfmode)	0 = (CrLf)=0x0D (CR) 1 = (CrLf)=0x0D+0x0A (CR+LF) 2 = (CrLf)=0x0A+0x0D (LF+CR) 3 = (CrLf)=0x0A (LF) 4 = No end character					
[chk]	2-character checksum. If the checksum is disabled →no [chk]					
(CrLf)	End Character					

[Response]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Note
!	AA	[CrLfmode]	[chk]	(CrLf)	Read

Byte 1	Byte 2-3	Byte 4-5	Byte 6-7	Note
!	AA	[chk]	(CrLf)	Valid
?				Invalid

!	Delimiter character indicating a valid command
?	Delimiter character indicating an invalid command
AA	2-character port address in Hex format
[chk]	2-character checksum. If the checksum is disabled →no [chk]
(CrLf)	End Character

If No response → syntax error, communication error, or address error

■ **Example:**

(Assume the AA address value of the tM-752N module is 01)

e.g.	Command	Response
1	\$01T0(CrLf)	!014(CrLf)
	The end char for COM1 is no end character	
2	\$01T1(CrLf)	!011(CrLf)
	The end char for COM2 is 0x0D+0x0A	
3	\$02T1(CrLf)	!022(CrLf)
	The end char for COM3 is 0x0A	

Notes:
The default CrLfmode = 4 → ie.the default (CrLf)=NONE for all port.

5.1.12 \$AAM

■ Description:

This function reads the module name.

■ Syntax:

\$AAM[chk](CrLf)	Reads the module name
------------------	-----------------------

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Note
\$	AA	M	[chk]	(CrLf)	Read
\$	Delimiter character				
AA	2-character Hex module address, The valid range is from 00~FF				
[chk]	2-character checksum. If the checksum is disabled → no [chk]				
(CrLf)	End Character				

[Response]

Byte 1	Byte 2-3	Byte 4-6	Byte 7-8	Byte 9-10	Note
!	AA	(name)	[chk]	(CrLf)	Read
Byte 1	Byte 2-3	Byte 4-5	Byte 6-7	Note	
?	AA	[chk]	(CrLf)	Invalid	
!	Delimiter character indicating a valid command				
?	Delimiter character indicating an invalid command				
AA	2-character Hex module address				
(name)	4 or 5-character value/string denoting the module name				
[chk]	2-character checksum. If the checksum is disabled → no [chk]				
(CrLf)	End Character				
If no response → syntax error, communication error, or address error					

■ **Example:**

e.g.	Command	Response
1	\$01M(CrLf)	!017521(CrLf)
	The name of module 01 is 7521	
2	\$02M(CrLf)	!027522(CrLf)
	The name of module 02 is 7522	

5.1.13 \$AAU

■ Description:

This function reads data from the RS-232 COM port buffer. There is 1Kb queue buffer for its local RS-232 device. All input data from RS-232 COM port can be stored in the queue buffer until the Host PC has time to read it. These features allow the Host PC to be linked to thousands of RS-232 devices without any loss of data. Any RS-232 device should obey the rules of the request-reply protocol. In other words, RS-232 devices are passive. If they do not receive any commands, they will not send any messages out. However, since active devices are frequently developed, ICPDAS controllers are designed with a buffer to receive these messages in situations such as this. Buffer operation rules:

Rule 1: The buffer is enabled after being powered-on.

Rule 2: The (delimiter) AA command disables the buffer operation for that port

Rule 3: After disabling the buffer, the controller will wait for X seconds (=Response timeout,) for a response from the RS-232 device. The response will then be transferred to COM1. If no message is received, the buffer will be re-enabled.

■ Syntax:

\$AAU[chk](CrLf)	Reads data from the RS-232 COM port buffer
------------------	--

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Note
\$	AA	U	[chk]	(CrLf)	Read
\$	Delimiter character				
AA	2-character port address in Hex format. The valid range is from 00~FF				
[chk]	2-character checksum. If the checksum is disabled → no [chk]				
(CrLf)	End Character				

[Response]

Byte 1 – n	Byte (n+1) – (n+2)	Byte (n+3) – (n+4)	Note
!	AA	(name)	Read

Byte 1	Byte 2-3	Byte 4-5	Byte 6-7	Note
?	AA	[chk]	(CrLf)	Invalid

!	Delimiter character indicating a valid command		
?	Delimiter character indicating an invalid command		
AA	2-character port address in Hex format		
[chk]	2-character checksum. If the checksum is disabled → no [chk]		
(CrLf)	End Character		

If no response → The buffer is empty, syntax error or communication error, or address error

■ **Example:**

e.g.	Command	Response
1	\$01U(CrLf)	data1(CrLf)
	Retrieves “data1” from the buffer of the port that is addressed 01	
2	\$01U(CrLf)	data2
	Retrieves another data: “data2” from the buffer of the port that is addressed 01	
3	\$02U(CrLf)	
	No data in the buffer of the port that is addressed 02	

5.1.14 \$AAJN[timeout]

■ Description:

The function reads/sets the delay time before determining whether the end of a Command/response has been sent and received.

■ Syntax:

\$AAJN [chk] (CrLf)	Reads the timeout value
\$AAJN[timeout] [chk] (CrLf)	Sets the timeout value

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6-7	Byte 8-9	Note
\$	AA	J	N	[chk]	(CrLf)	Read

Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6 - n	Byte (n+1) - (n+2)	Byte (n+3) - (n+4)	Note
\$	AA	J	N	[timeout]	[chk]	(CrLf)	Write

\$	Delimiter character						
AA	2-character port address in Hex format. The valid range is from 00~FF						
N	0 = COM 1 timeout 1 = COM 2/3 Response timeout 2 = COM 2/3 Continuous response timeout						
[timeout]	Delay time value (ms). Valid range is 0 to 4294967259.						
[chk]	2-character checksum. If the checksum is disabled → no [chk]						
(CrLf)	End Character						

[Response]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Note
!	AA	[timeout]	[chk]	(CrLf)	Read

Byte 1	Byte 2-3	Byte 4-5	Byte 6-7	Note
!	AA	[chk]	(CrLf)	Valid
?				Invalid

!

?

AA

[chk]

(CrLf)

Delimiter character indicating a valid command

Delimiter character indicating an invalid command

2-character port address in Hex format

2-character checksum. If the checksum is disabled → no [chk]

End Character

If no response → buffer is empty, syntax error, communication error, address error

■ **Example:**

(Assume the AA address value of the tM-752N module is 01)

e.g.	Command	Response
1	\$01J01000(CrLf)	!01(CrLf)
	Sets the timeout value for the COM1 (RS-485) to 1000ms	
2	\$01J11500(CrLf)	!01(CrLf)
	Sets the timeout value of the COM2 (RS-232) to 1500ms	
3	\$01J1(CrLf)	!011500(CrLf)
	Reads the Response timeout value of COM2 The Response timeout value of COM2 is 1500ms.	

Notes:

The default Response timeout value for all RS-232 COM ports is 1000 ms.

5.1.15 \$AAEV

■ Description:

This function reads/sets the status of the prefixed address byte **on the response**, which lets the host know RS-232 device the response comes from.

■ Syntax:

\$AAEV [chk] (CrLf)	Reads the status of the prefixed address byte on the response
---------------------	---

[Request]

Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6-7	Byte 8-9	Note
\$	AA	E	V	[chk]	(CrLf)	Read
\$	Delimiter character					
AA	2-character port address in Hex format. The valid range is from 00~FF					
V	0 = Prefixed address byte disabled 1 = Prefixed address byte enabled					
[chk]	2-character checksum. If the checksum is disabled → no [chk]					
(CrLf)	End Character					

[Response]

Byte 1	Byte 2-3	Byte 4	Byte 5-6	Byte 7-8	Note
!	AA	[V]	[chk]	(CrLf)	Read
Byte 1	Byte 2-3	Byte 4-5	Byte 6-7	Note	
!	AA	[chk]	(CrLf)	Valid	
?				Invalid	
!	Delimiter character indicating a valid command				
?	Delimiter character indicating an invalid command				
AA	2-character port address in Hex format				
V	0 = Prefixed address byte disabled 1 = Prefixed address byte enabled				
[chk]	2-character checksum. If the checksum is disabled → no [chk]				
(CrLf)	End Character				
If no response → syntax error, communication error, or address error					

■ **Example:**


(Assume the AA address value of the tM-752N module is 01)

e.g.	Command	Response
1	\$01E(CrLf)	!010(CrLf)
	Reads the status of the prefixed address byte for COM1. The prefixed address byte is disabled.	
2	\$01E1(CrLf)	!01(CrLf)
	Sets the status of the prefixed address byte to enable.	

Notes:

If the prefixed address byte is enabled, the response for [delimiter]AA[bypass data] and \$AAU will be prefixed with !AA.

Example 1: [delimiter]AA[bypass data]

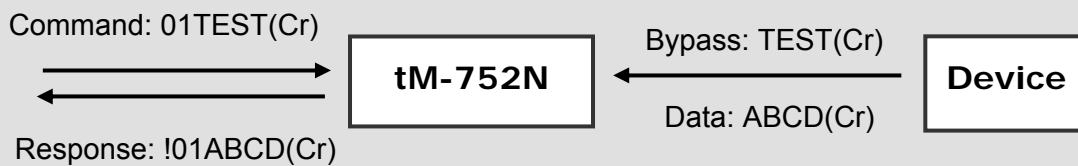

Example 2: \$AAU




6. Typical Applications

6.1 Application 1

Addressable RS-232 Controller (Command Type)


- Each tM-752N module has a unique address.
- The Host PC first sends a command to all tM-752N module.
- The destination tM-752N module will pass the command to its local RS-232 device.
- The destination tM-7522 module will then send the response from the RS-232 device back to the Host PC.

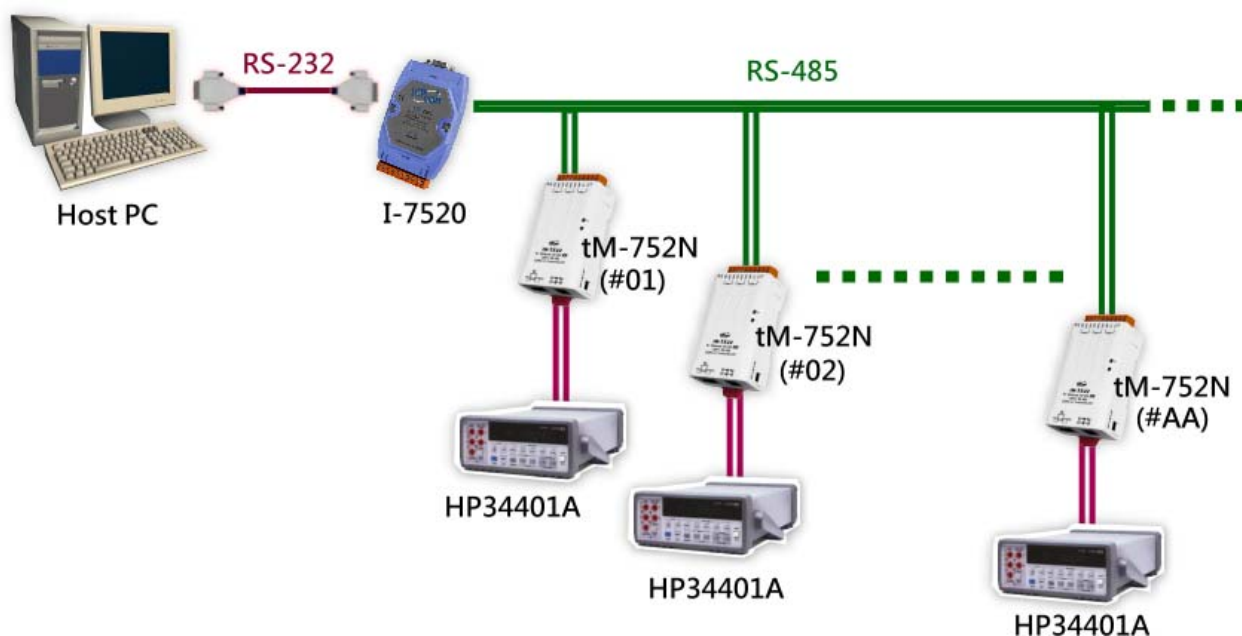

6.2 Application 2

Addressable RS-232 Controller (Receive Data only Type)-Barcode Reader

- The barcode-reader can scan a barcode at anytime, and the tM-752N module will store these barcodes in an internal buffer (1 K bytes).
- The Host PC first sends \$AAU command to each tM-752N modules one-by-one. The destination tM-752N module will check its internal buffer. If there are any barcodes in the buffer, the tM-752N module will then send a single barcode back to the Host PC.

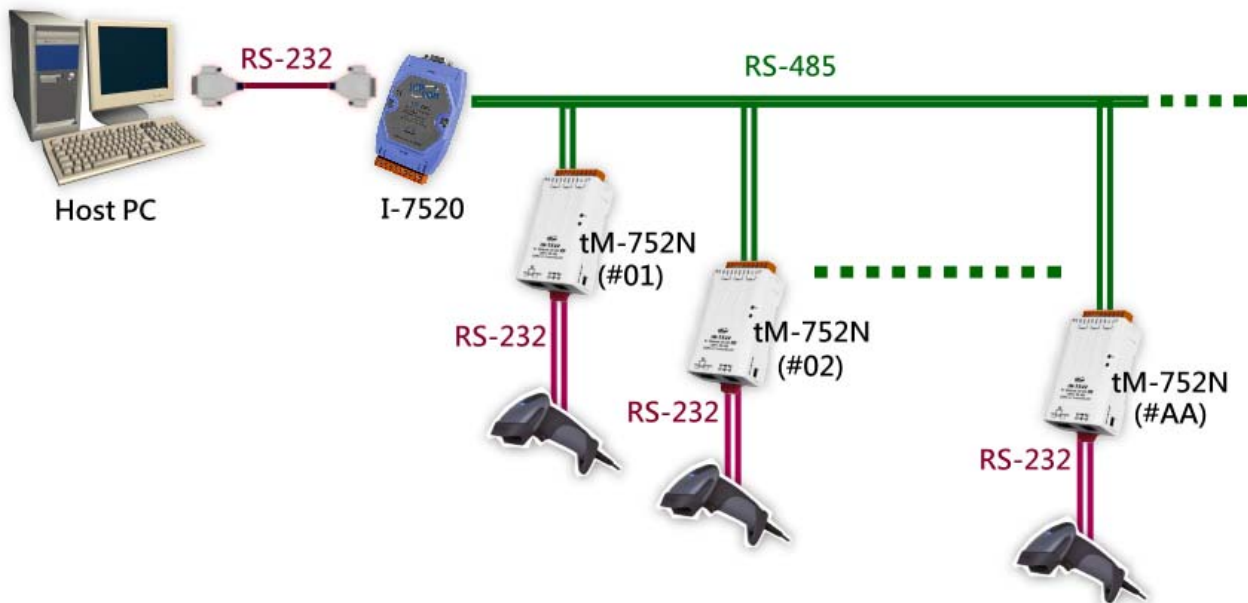

6.3 Application 3

Addressable RS-232 Controller (Dual-channel)

- Each tM-7522 module has a unique address
- Each tM-7522 module can support two RS-232 devices, AA and AA+1.
- The Host PC first sends a command to each tM-7522 modules one-by-one.
- The destination tM-752N module will pass the command to its local RS-232 device 1 or RS-232 device 2.
- The tM-752N module then sends the response from the RS-232 device back to the Host PC.
- The RS-232 device can be used for command (Application 1) or null command (Application 2) type controller applications.

