

PIO-D96 Series Card

User Manual

96-channel OPTO-22 compatible DIO board

Version 1.9, Apr. 2013

SUPPORTS

Board includes PIO-D96, PIO-D96U and PIO-D96SU.

WARRANTY

All products manufactured by ICP DAS are warranted against defective materials for a period of one year from the date of delivery to the original purchaser.

WARNING

ICP DAS assumes no liability for damages consequent to the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, nor for any infringements of patents or other rights of third parties resulting from its use.

COPYRIGHT

Copyright © 2013 by ICP DAS. All rights are reserved.

TRADEMARK

Names are used for identification only and may be registered trademarks of their respective companies.

CONTACT US

If you have any question, please feel to contact us. We will give you quick response within 2 workdays.

Email: service@icpdas.com, service.icpdas@gmail.com

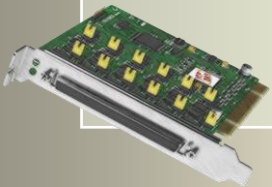
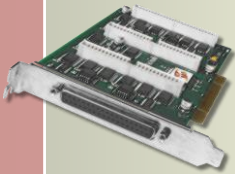
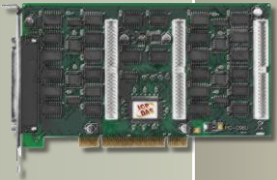


TABLE OF CONTENTS

1.	INTRODUCTION	3
1.1	PACKING LIST	4
1.2	FEATURES	4
1.3	SPECIFICATIONS	5
2.	HARDWARE CONFIGURATION	6
2.1	BOARD LAYOUT	6
2.2	I/O PORT LOCATION	7
2.3	CARD ID SWITCH.....	8
2.4	PIN ASSIGNMENTS.....	9
2.5	ENABLE I/O OPERATION.....	11
2.6	D/I/O ARCHITECTURE.....	12
2.7	INTERRUPT OPERATION	13
3.	HARDWARE INSTALLATION	14
4.	SOFTWARE INSTALLATION.....	18
4.1	DRIVER INSTALLING PROCEDURE	18
4.1.1	<i>UniDAQ SDK Driver</i>	<i>19</i>
4.1.2	<i>PIO-DIO Series Classic Driver</i>	<i>20</i>
4.2	PNP DRIVER INSTALLATION	23
4.3	CONFIRM THE SUCCESSFUL INSTALLATION	26
5.	TESTING PIO-D96 SERIES CARD	27
5.1	SELF-TEST WIRING	27
5.2	EXECUTE THE TEST PROGRAM.....	29
6.	I/O CONTROL REGISTER.....	31
6.1	HOW TO FIND THE I/O ADDRESS.....	31
6.2	THE ASSIGNMENT OF I/O ADDRESS	33
6.3	THE I/O ADDRESS MAP.....	35
6.3.1	<i>RESET Control Register.....</i>	<i>36</i>
6.3.2	<i>AUX Control Register.....</i>	<i>36</i>
6.3.3	<i>Aux Data Register.....</i>	<i>37</i>

6.3.4	<i>INT Mask Control Register</i>	37
6.3.5	<i>Aux Status Register</i>	38
6.3.6	<i>Interrupt Polarity Register</i>	38
6.3.7	<i>I/O Selection Control Register</i>	39
6.3.8	<i>Card ID Register</i>	40
6.3.9	<i>Read/Write 8-bit Data Register</i>	40
7.	DEMO PROGRAMS	41
7.1	DEMO PROGRAM FOR WINDOWS.....	41
7.2	DEMO PROGRAM FOR DOS.....	43
	APPENDIX: DAUGHTER BOARD	44
A1.	<i>DB-37, DN-37, DN-50 and DN-100</i>	44
A2.	<i>DB-8125</i>	45
A3.	<i>ADP-37/PCI and ADP-50/PCI</i>	45
A4.	<i>DB-24P and DB-24PD Isolated Input Board</i>	46
A5.	<i>DB-24R and DB-24RD Relay Board</i>	47
A6.	<i>DB-24PR, DB-24POR and DB-24C</i>	48
A7.	<i>Daughter Boards Comparison Table</i>	49


1. Introduction

The PIO-D96U/D96SU card is the new generation product that ICP DAS provides to meet RoHS compliance requirement. The new PIO-D96U/D96SU card is designed as a drop-in replacement for the PIO-D96, and users can replace the PIO-D96 by the PIO-D96U/D96SU directly without software/driver modification.

The PIO-D96U/D96SU universal PCI card supports 3.3 V/5 V PCI bus while the PIO-D96 supports 5 V PCI bus. These cards provide 96 TTL digital I/O lines that consist of twelve 8-bit bi-direction ports. Every three ports on a connector are grouped and named as port A (PA), port B (PB) and port C (PC) respectively. All ports are configured as inputs upon power-up or reset.

The PIO-D96U/D96SU also adds a Card ID switch on-board. Users can set Card ID and then recognize the board by the ID via software when using two or more PIO-D96U/D96SU cards in one computer.


These cards support various OS such as Linux, DOS, Windows 98, Windows NT, Windows 2000, 32-/64-bit Windows XP/2003/2008/Vista/7 and Windows 8. It also provides the DLL and Active X control, and various language sample programs in Turbo C++, Borland c++, Microsoft C++, Visual C++, Borland Delphi, Borland C++ Builder, Visual Basic, C#.NET, Visual Basic.NET and LabVIEW to help users to quickly and easily develop their applications.

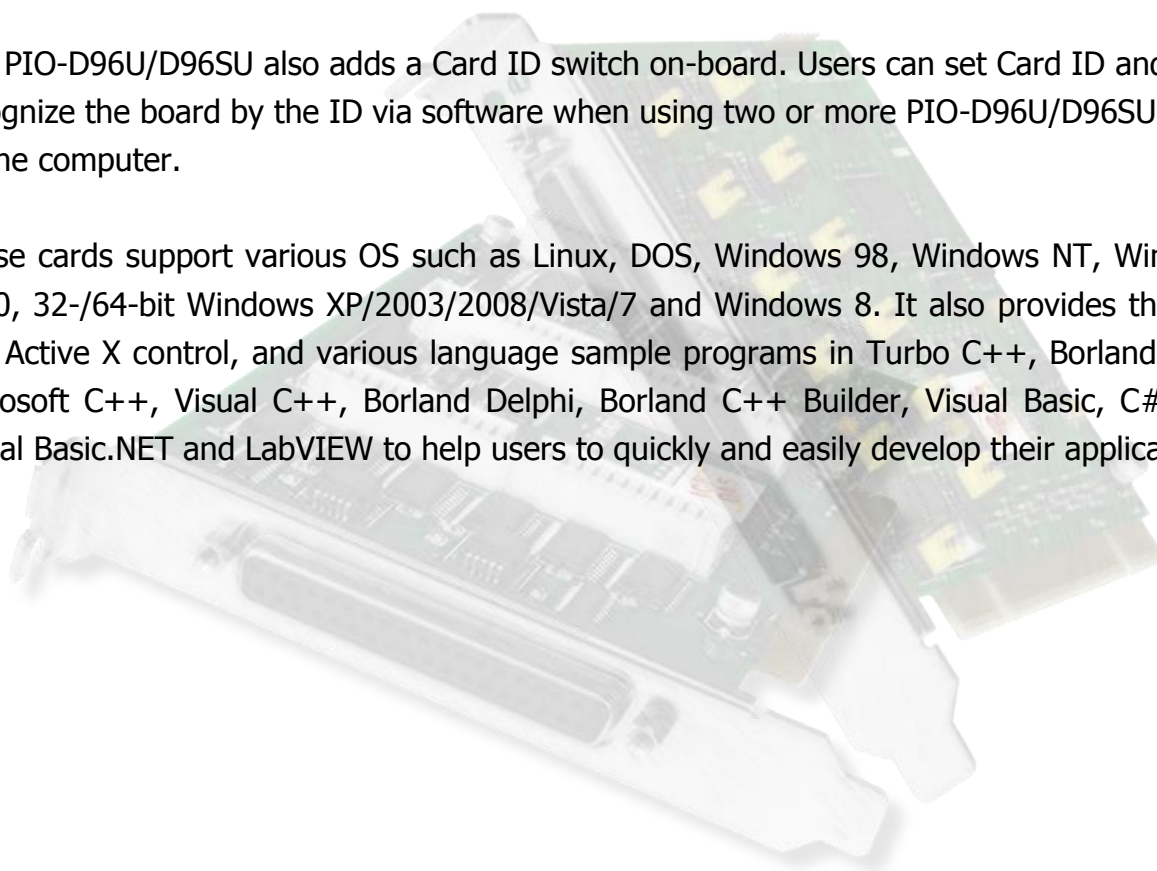

1.1 Packing List

The shipping package includes the following items:

- One PIO-D96 series card hardware
- One printed Quick Start Guide
- One software utility CD

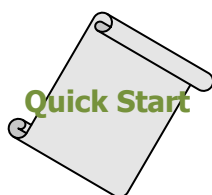

Note!!

If any of these items is missing or damaged, contact the dealer from whom you purchased the product. Save the shipping materials and carton in case you want to ship or store the product in the future.

1.2 Features

- Support the +5V PCI bus for PIO-D96
- Support the +3.3/+5 V PCI bus for PIO-D96U/D96SU
- 96 channels of digital I/O
- Bi-direction programmable I/O ports under software control
- All I/O lines buffered on the board
- Twelve 8-bit bi-direction I/O ports
- Connects directly to DB-24PR, DB-24PD, DB-24RD, DB-24PRD, DB-16P8R, DB-24POR, DB-24SSR, DB-24C or any OPTO-22 Compatible daughter boards
- 4 Interrupt source: P2C0, P5C0, P8C0, P11C0
- Card ID function for PIO-D96U/D96SU
- PIO-D96/D96U: one DB37 connector and three 50-pin box headers
- PIO-D96SU: one SCSI II 100-pin connector
- Buffer output for higher driving capability
- DIO response time is about 0.77 μ s (1.3 MHz max.)
- SMD, short card, power saving


1.3 Specifications

Model Name	PIO-D96	PIO-D96U	PIO-D96SU
Programmable Digital I/O			
Channels	96		
Digital Input			
Compatibility	5 V/TTL		5 V/CMOS
Input Voltage	Logic 0: 0.8 V max. Logic 1: 2.0 V min.		
Response Speed	1.2 MHz (Typical)		
Digital Output			
Compatibility	5 V/TTL		5 V/CMOS
Output Voltage	Logic 0: 0.4 V max. Logic 1: 2.4 V min.		Logic 0: 0.1 V max. Logic 1: 4.4 V min.
Output Capability	Sink: 64mA @ 0.8 V Source: 32 mA @ 2.0 V		Sink: 6 mA @ 0.33 V Source: 6 mA @ 4.77 V
Response Speed	1.2 MHz (Typical)		
General			
Bus Type	5 V PCI, 32-bit, 33 MHz	3.3 V/5 V Universal PCI, 32-bit, 33 MHz	
Data Bus	8-bit		
Card ID	No	Yes(4-bit)	
I/O Connector	Female DB37 x 1 50-pin box header x 3		Female SCSI II 100 pin x 1
Dimensions (L x W x D)	180 mm x 105 mm x 22mm		124 mm x 97 mm x 22 mm
Power Consumption	600 mA @ +5 V		
Operating Temperature	0 ~ 60 °C		
Storage Temperature	-20 ~ 70 °C		
Humidity	5 ~ 85% RH, non-condensing		


2. Hardware Configuration

2.1 Board Layout

Board layout of the PIO-D96/D96U:

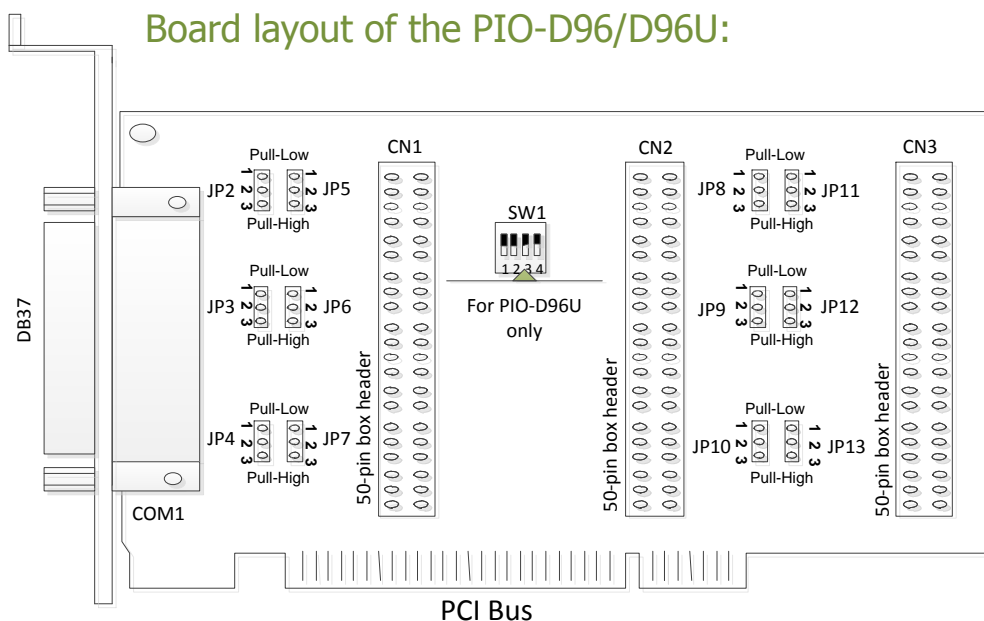


Board layout of the PIO-D96SU:

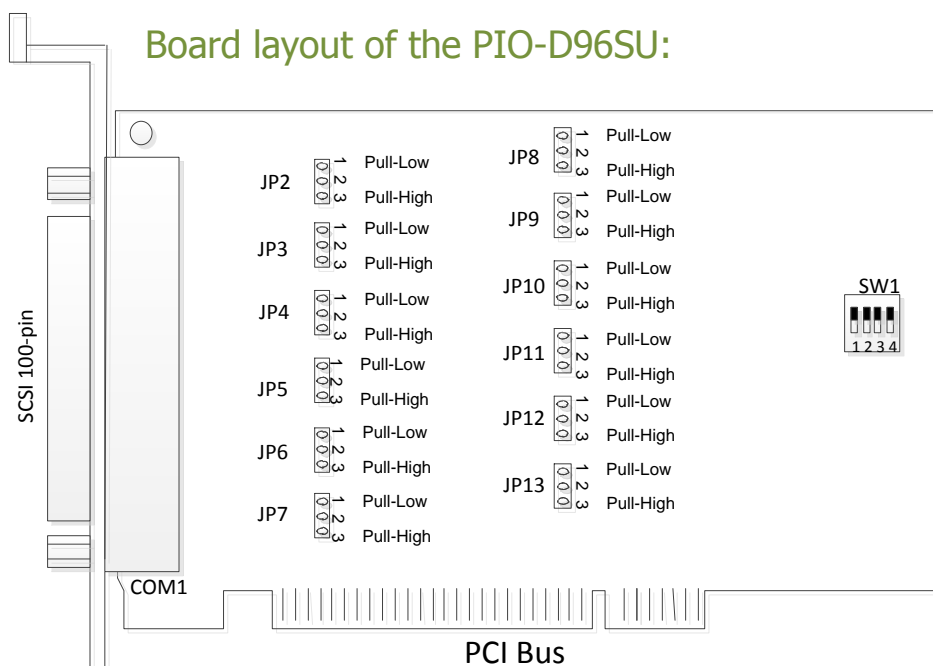

Note!!

JPx Default Setting:

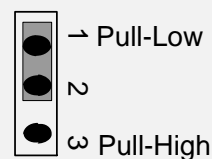

JP2/3/4/5/6/7 /9/10/11/12/13= 1-2 short = Pull-Low

2.2 I/O Port Location

There are twelve 8-bit I/O ports in the PIO-D96/D96U/D96SU. Each I/O port can be programmed as a D/I or D/O port. When the PC is first powered-on or reset, all the ports are configured as D/I ports. These D/I ports can be selected to either pull-high or pull-low via placement of the JP2 ~ JP13 jumpers. These I/O port locations are given as follows:

Connector of <u>PIO-D96/D96U</u>		CON1	CN1	CN2	CN3
PA0 ~ PA7	Port	Port0	Port3	Port6	Port9
	Pull-high/Low	JP2	JP5	JP8	JP11
PB0 ~ PB7	Port	Port1	Port4	Port7	Port10
	Pull-high/Low	JP3	JP6	JP9	JP12
PC0 ~ PC7	Port	Port2	Port5	Port8	Port11
	Pull-high/Low	JP4	JP7	JP10	JP13

Connector of <u>PIO-D96SU</u>	CON1
PA0~ PA7	Port0 (pull-high/low by JP2)
PB0 ~ PB7	Port1 (pull-high/low by JP3)
PC0 ~ PC7	Port2 (pull-high/low by JP4)
PA10~PA17	Port3 (pull-high/low by JP5)
PB10~PB17	Port4 (pull-high/low by JP6)
PC10~PC17	Port5 (pull-high/low by JP7)
PA20~PA27	Port6 (pull-high/low by JP8)
PB20~PB27	Port7 (pull-high/low by JP9)
PC20~PC27	Port8 (pull-high/low by JP10)
PA30~PA37	Port9 (pull-high/low by JP11)
PB30~PB37	Port10 (pull-high/low by JP12)
PC30~PC37	Port11 (pull-high/low by JP13)

Refer to [Sec. 2.1](#) for the board layout and I/O port locations.

Note!! Each PC0 can be used as an interrupt signal source. Refer to [Sec. 2.7](#) for more information.

2.3 Card ID Switch

The PIO-D96U and PIO-D96SU has a Card ID switch (SW1) with which users can recognize the board by the ID via software when using two or more PIO-D96U and PIO-D96SU cards in one computer. The default Card ID is 0x0. For detail SW1 Card ID settings, please refer to Table 2.1.

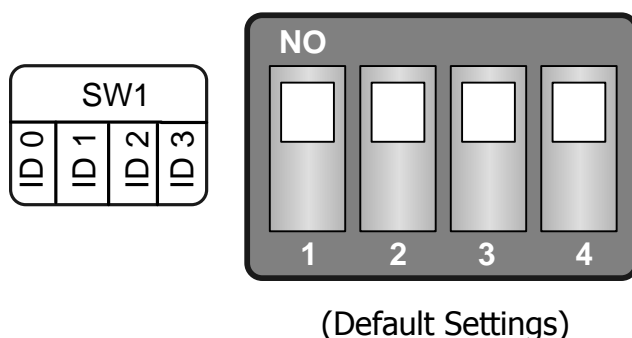


Table 2.1 (*) Default Settings; OFF → 1; ON → 0

Card ID (Hex)	1 ID0	2 ID1	3 ID2	4 ID3
(*) 0x0	ON	ON	ON	ON
0x1	OFF	ON	ON	ON
0x2	ON	OFF	ON	ON
0x3	OFF	OFF	ON	ON
0x4	ON	ON	OFF	ON
0x5	OFF	ON	OFF	ON
0x6	ON	OFF	OFF	ON
0x7	OFF	OFF	OFF	ON
0x8	ON	ON	ON	OFF
0x9	OFF	ON	ON	OFF
0xA	ON	OFF	ON	OFF
0xB	OFF	OFF	ON	OFF
0xC	ON	ON	OFF	OFF
0xD	OFF	ON	OFF	OFF
0xE	ON	OFF	OFF	OFF
0xF	OFF	OFF	OFF	OFF

2.4 Pin Assignments


The Pin assignments for all connectors on the PIO-D96/D96U/D96SU are represented in Figure 2-1 and Figure 2-2. All signal sources for each digital input or output pin (channel) is TTL compatible.

Pin Assignments of the PIO-D96/D96U:

CON1: 37-pin D-type female connector (for Port0, Port1, Port2).

CN1/CN2/CN3: 50-pin flat-cable connector (for Port3 ~ Port11).


Pin Assignment	Terminal No.	Pin Assignment
N.C	01	
N.C.	02	20 +5V
PB_7	03	21 GND
PB_6	04	22 PC_7
PB_5	05	23 PC_6
PB_4	06	24 PC_5
PB_3	07	25 PC_4
PB_2	08	26 PC_3
PB_1	09	27 PC_2
PB_0	10	28 PC_1
GND	11	29 PC_0
N.C.	12	30 PA_7
GND	13	31 PA_6
N.C.	14	32 PA_5
GND	15	33 PA_4
N.C.	16	34 PA_3
GND	17	35 PA_2
+5V	18	36 PA_1
GND	19	37 PA_0



Female DB37 (CON1)

Figure 2-1

Pin Assignment	Terminal No.	Pin Assignment
PC_7	01	02 GND
PC_6	03	04 GND
PC_5	05	06 GND
PC_4	07	08 GND
PC_3	09	10 GND
PC_2	11	12 GND
PC_1	13	14 GND
PC_0	15	16 GND
PB_7	17	18 GND
PB_6	19	20 GND
PB_5	21	22 GND
PB_4	23	24 GND
PB_3	25	26 GND
PB_2	27	28 GND
PB_1	29	30 GND
PB_0	31	32 GND
PA_7	33	34 GND
PA_6	35	36 GND
PA_5	37	38 GND
PA_4	39	40 GND
PA_3	41	42 GND
PA_2	43	44 GND
PA_1	45	46 GND
PA_0	47	48 GND
+5V	49	50 GND



50-pin box header
(CN1/CN2/CN3)

■ Pin Assignments of the PIO-D96SU:

CON1: 100-pin SCSI connector (for Port0~ Port11).

Pin Assignment	Terminal No.	Terminal No.	Pin Assignment
PA_00	01	51	PA_10
PA_01	02	52	PA_11
PA_02	03	53	PA_12
PA_03	04	54	PA_13
PA_04	05	55	PA_14
PA_05	06	56	PA_15
PA_06	07	57	PA_16
PA_07	08	58	PA_17
PB_00	09	59	PB_10
PB_01	10	60	PB_11
PB_02	11	61	PB_12
PB_03	12	62	PB_13
PB_04	13	63	PB_14
PB_05	14	64	PB_15
PB_06	15	65	PB_16
PB_07	16	66	PB_17
PC_00	17	67	PC_10
PC_01	18	68	PC_11
PC_02	19	69	PC_12
PC_03	20	70	PC_13
PC_04	21	71	PC_14
PC_05	22	72	PC_15
PC_06	23	73	PC_16
PC_07	24	74	PC_17
GND	25	75	GND
PA_20	26	76	PA_30
PA_21	27	77	PA_31
PA_22	28	78	PA_32
PA_23	29	79	PA_33
PA_24	30	80	PA_34
PA_25	31	81	PA_35
PA_26	32	82	PA_36
PA_27	33	83	PA_37
PB_20	34	84	PB_30
PB_21	35	85	PB_31
PB_22	36	86	PB_32
PB_23	37	87	PB_33
PB_24	38	88	PB_34
PB_25	39	89	PB_35
PB_26	40	90	PB_36
PB_27	41	91	PB_37
PC_20	42	92	PC_30
PC_21	43	93	PC_31
PC_22	44	94	PC_32
PC_23	45	95	PC_33
PC_24	46	96	PC_34
PC_25	47	97	PC_35
PC_26	48	98	PC_36
PC_27	49	99	PC_37
+5 V	50	100	+5 V

Female SCSI 100-pin (CON1)

Figure 2-2

2.5 Enable I/O Operation

When the PC is first turned on, all operations involved with digital I/O channels are disabled. Note that the digital I/O channel of each port is enabled or disabled by the RESET\ signal, refer to [Sec. 6.3.1](#) for more information related to this. The power-on states for all DI/O ports are given as follows:

- D/I/O operations for each port are disabled.
- D/I/O ports are all configured as Digital input ports.
- D/O latch register outputs are all high impedance. (Refer to [Sec. 2.6](#))

The user has to perform some initialization before using these digital I/O ports. The recommended steps are given below:

Step 1: Find the address-mapping for PIO/PISO cards. (Refer to [Sec.6.1](#))

Step 2: Enable all Digital I/O operations. (Refer to [Sec. 6.3.1](#)).

Step 3: Configure the first three ports to their expected D/I/O state & send their initial values to every D/O port (Refer to [Sec. 6.3.7](#))

Step 4: Configure the other three ports to their expected D/I/O states & send their initial values to every D/O port (Refer to [Sec. 6.3.7](#))


For more information on the initial procedure for digital I/O ports, please refer to the DIO demo program.

2.6 D/I/O Architecture

The digital I/O control architecture for the PIO-D96/D96U/D96SU is demonstrated in Figure 2.3. The operation method used for the control signal is presented below.

- RESET\ is in the Low-state → all D/I/O operation is disabled
- RESET\ is in the High-state → all D/I/O operation is enabled.
- If D/I/O is configured as a D/I port → D/I= external input signal
- If D/I/O is configured as a D/O port → D/I = read back D/O

If the D/I/O is configured as a D/I port → sending data to a Digital input port will only change the D/O latch register. The latched data will be output when the port is configured as digital output and is activated right away.

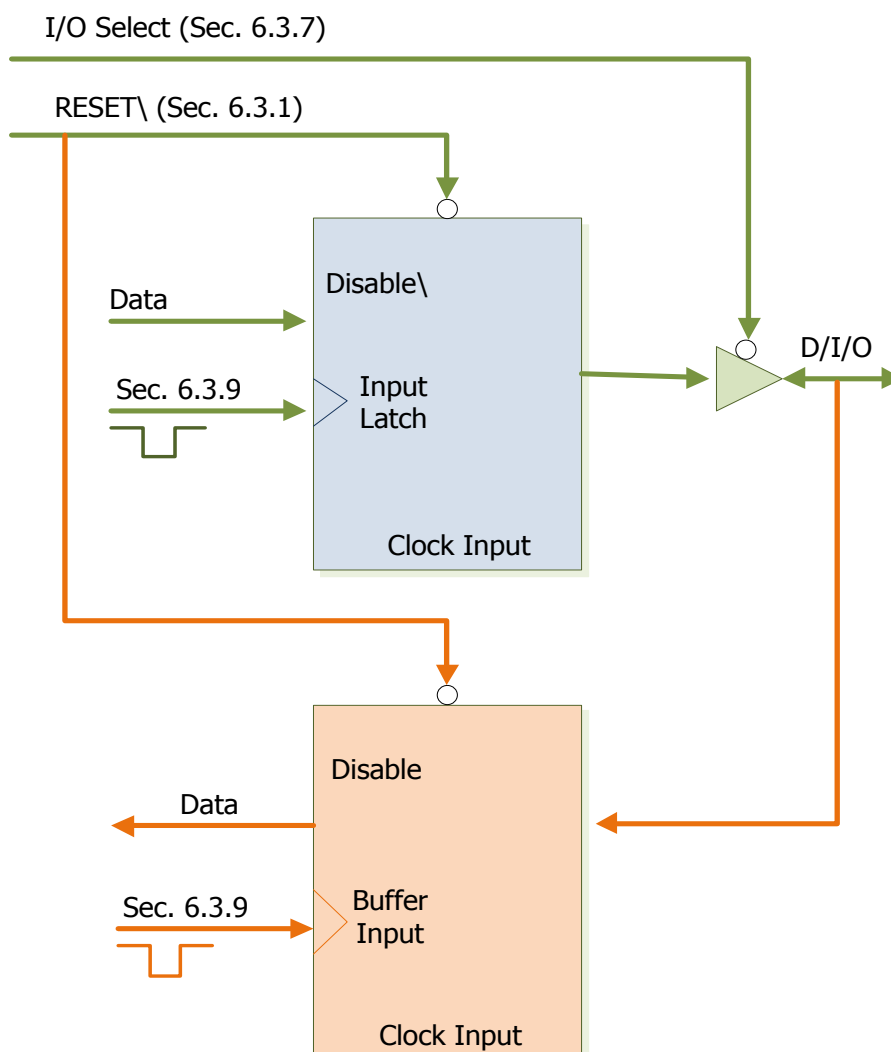

2.7 Interrupt Operation

The P2C0, P5C0, P8C0 and P11C0 can be used as interrupt signal source. Refer to [Sec. 2.1](#) and [Sec. 2.4](#) for P2C0/P5C0/P8C0/P11C0 location. The interrupt of PIO-D96/D96U/D96SU is **level-trigger and Active_High**. The interrupt signal can be programmable as **inverted or non-inverted**. The procedures for how to configure the interrupt signal source are given as follows:

1. Make sure **the initial level is high or Low from the signal source**.
2. If the initial state is High, please select the **inverted** setting for interrupt signal source ([Sec. 6.3.6](#)). If the initial state is Low, please select the **non-inverted** setting for interrupt signal source ([Sec. 6.3.6](#))
3. Enable the interrupt function ([Sec. 6.3.4](#))
4. If the interrupt signal is active, the interrupt service routine will be started up.

Note that DEMO3.C and DEMO4.C are demo programs for a single interrupt source and DEMO5.C is the demo program for four interrupt sources in the DOS operating system. If only one interrupt signal source is used, the interrupt service routine does not need to identify the interrupt source. (Refer to DEMO3.C and DEMO4.C). However, if there are more than one interrupt source, the interrupt service routine has to identify the active signals in the following manner: (refer to DEMO5.C)

1. Read the new status of the interrupt signal sources.
2. Compare the new status with the old status to identify the active signals.
3. If P2C0 is active, service P2C0 and non-inverter/inverted the P2C0 signal.
4. If P5C0 is active, service P5C0 and non-inverted/inverted the P5C0 signal.
5. If P8C0 is active, service P8C0 and non-inverted/inverted the P8C0 signal.
6. If P11C0 is active, service P11C0 and non-inverted/inverted the P11C0 signal.
7. Update the interrupt status.

Limitation!!

If the interrupt signal is too short, the new status may be the same as the old status. So the interrupt signal must be held active until the interrupt service routine has been executed. This hold time is different for differing operating systems. The hold time can be as short as a micro-second or as long as 1 second. In general, 20 ms is enough for all O.S.

3. Hardware Installation

Note!!

It's recommended to install driver first, since some operating system (such as Windows 2000) may ask you to restart the computer again after driver installation. This reduces the times to restart the computer.

To install your PIO-D96 series card, complete the following steps:

Step 1: Installing PIO-D96 series card driver on your computer first.



For detailed information about the driver installation, please refer to [Chapter 4 Software Installation](#).

Step 2: Configuring Card ID by the SW1 DIP-Switch.




For detailed information about the card ID (SW1), please refer to [Sec. 2.3 Car ID Switch](#).




Step 3: Shut down and power off your computer.



Step 4: Remove all covers from the computer.

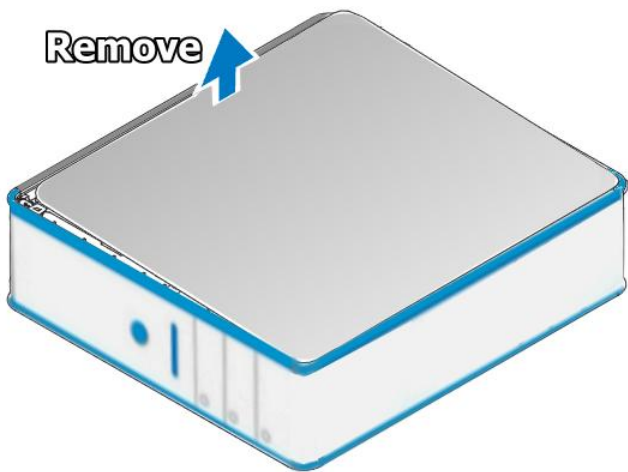

Step 5: Select an empty PCI slot.

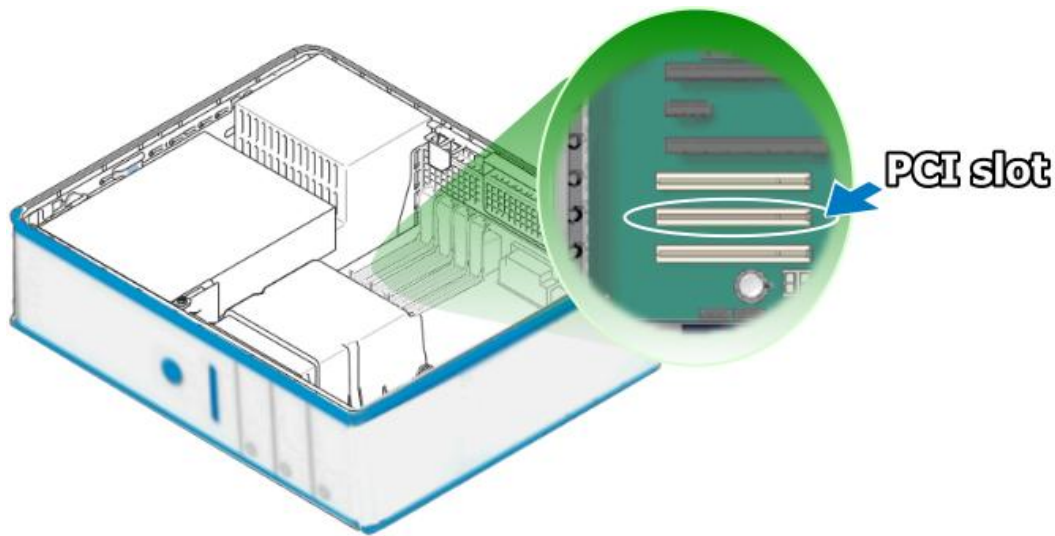



Step 6: Remove the PCI slot cover form the PC.

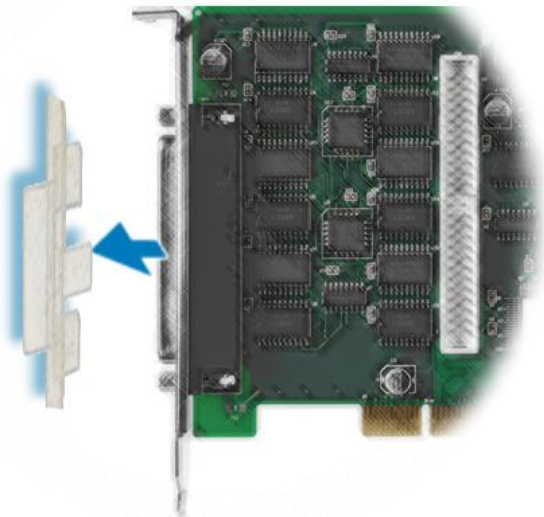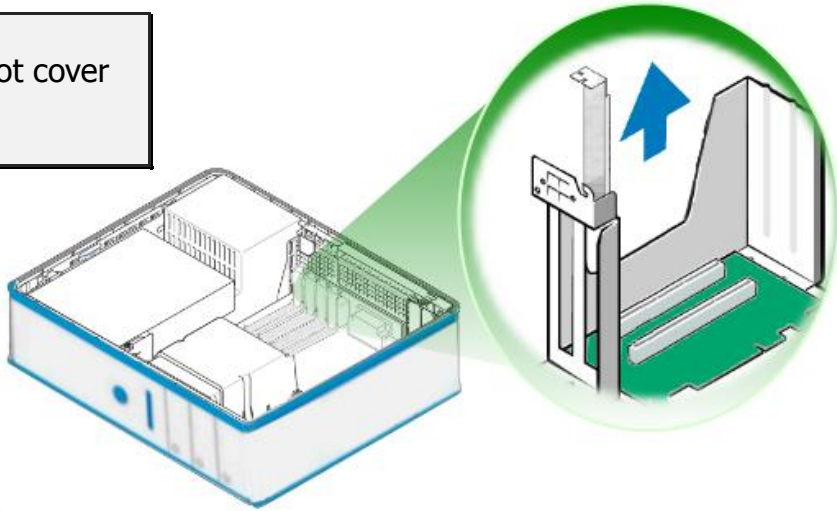

Step 7: Remove the connector cover form the PIO-D96 series card.

Step 8: Carefully insert your PIO-D96 series card into the PCI slot.

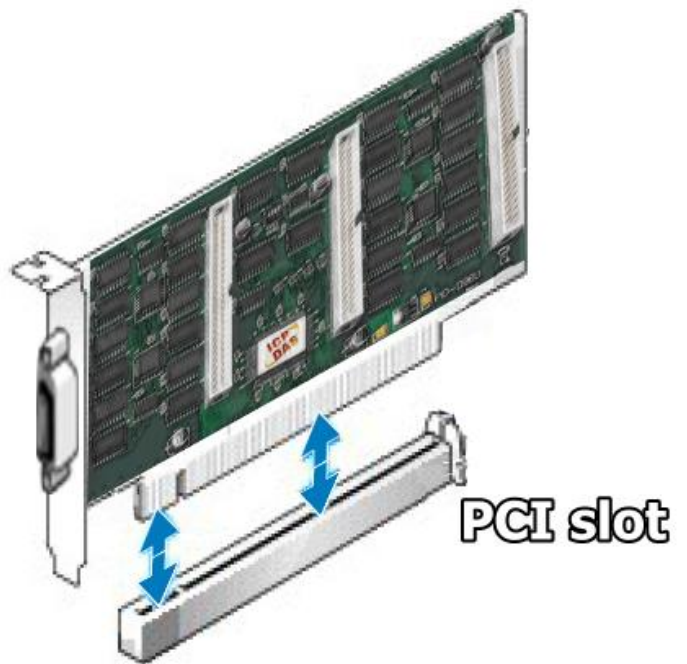


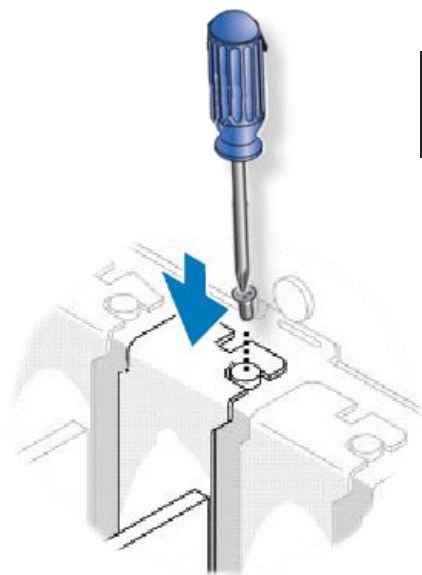

Step 9: Tighten the captive Phillips screw.

Confirm the PIO-D96 series card is mounted on the motherboard.

Step 10: Replace the computer cover.

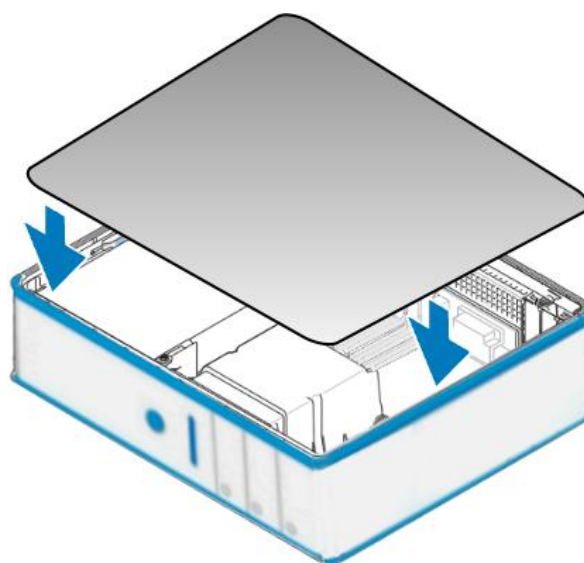

Step 11: Power on the computer.



Follow the prompt message to finish the Plug&Play steps, please refer to [Chapter 4 Software Installation](#).


4. Software Installation

The PIO-D96 series can be used in DOS, Linux and Windows 98/NT/2K and 32-bit/64-bit Windows XP/2003/Vista/7/8. This chapter shows you the detail steps to install these drivers. The recommended installation procedure for **Windows** is given in Sec. 4.1 ~ 4.3. or refer to Quick Start Guide ([CD:\NAPDOS\PCI\PIO-DIO\Manual\QuickStart\](#)).

4.1 Driver Installing Procedure

Follow these steps:

Step 1: Run the companion CD.

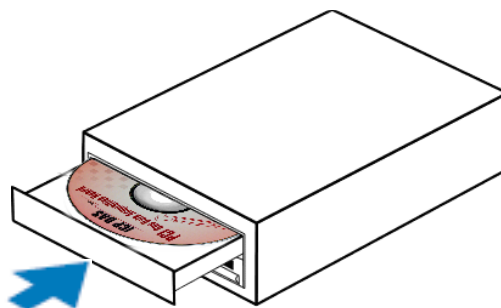

Insert the companion CD into the CD-ROM driver and wait a few seconds until the installation program starts automatically. If it does not start automatically for some reason, then please double-click the file [\NAPDOS\AUTO32.EXE](#) on the CD.

Step 2: Click the item:
PCI Bus DAQ Card.




Step 3: Please install the appropriate driver for your OS.


4.1.1 UniDAQ SDK Driver

(32-bit/64-bit Windows XP/ 2003/ Vista/7 and Windows 8)

1. Click the item: **“UniDAQ”**.

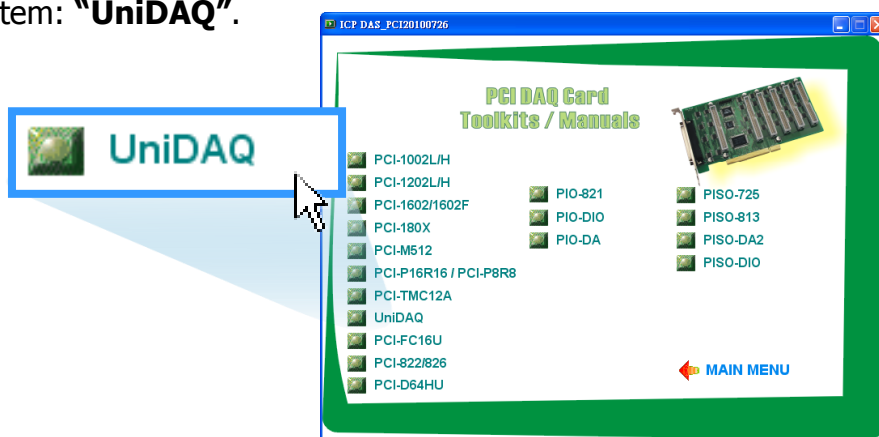

2. Click the item: **“DLL for Windows 2000 and XP/2003/Vista 32-bit”**.

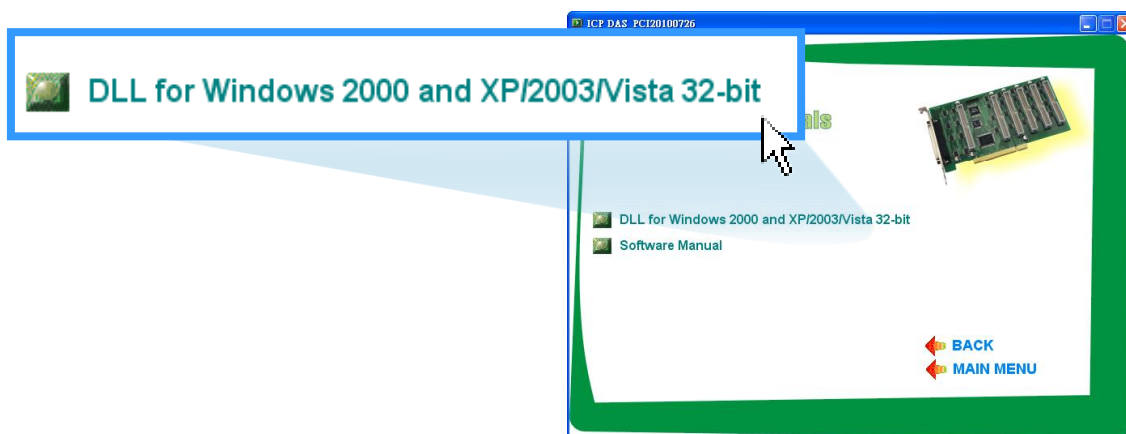

3. Double-Click **“UniDAQ_Win_Setup_x.x.x.x_xxxx.exe”** file in the **“Driver”** folder.




4. Click the "**Next>**" button to start the installation.
5. Check your DAQ Card is or not on supported list, Click the "**Next>**" button.
6. Select the installed folder, the default path is C:\ICPDAS\UniDAQ, confirm and click the "**Next>**" button.
7. Check your DAQ card on list, then click the "**Next>**" button.
8. Click the "**Next>**" button on the **Select Additional Tasks** window.
9. The demo program can be obtained from the following link and then click the "**Next>**" button.
10. Select "**No, I will restart my computer later**" and then click the "**Finish**" button. *Note: After clicking the "Finish" button, please skip to [Sec. 4.2](#) continues to complete the installation*

For detailed information about the UniDAQ driver installation, please refer to UniDAQ DLL Software Manual. The user manual is contained in: CD:\NAPDOS\PCI\UniDAQ\Manual\
<http://ftp.icpdas.com/pub/cd/iocard/pci/napdos/pci/unidaq/manual/>


4.1.2 PIO-DIO Series Classic Driver

(Windows 98/NT/2K and 32-bit Windows XP/2003/Vista/7/8)

1. Click the item: "**PIO-DIO**".

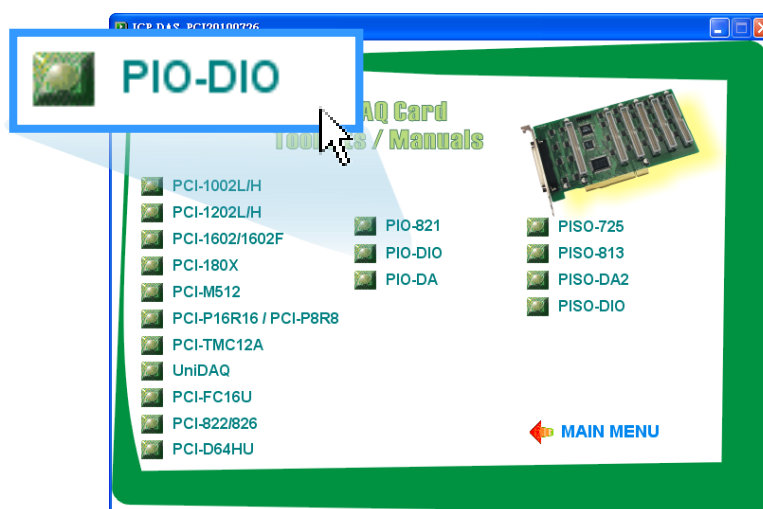


2. Click the item: **"DLL and OCX for Windows 98/NT/2K/XP/2003"**.

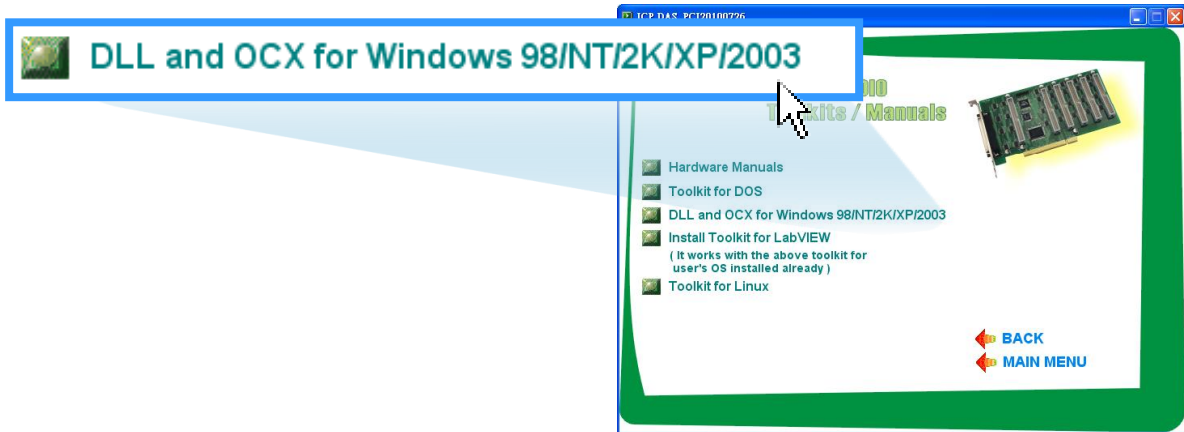


3. Double-Click **"PIO_DIO_Win_Vxxx.exe"** file in the **"Driver"** folder.




4. Click the **"Next>"** button to start the installation on the **Setup-PIO_DIO_Win** window.

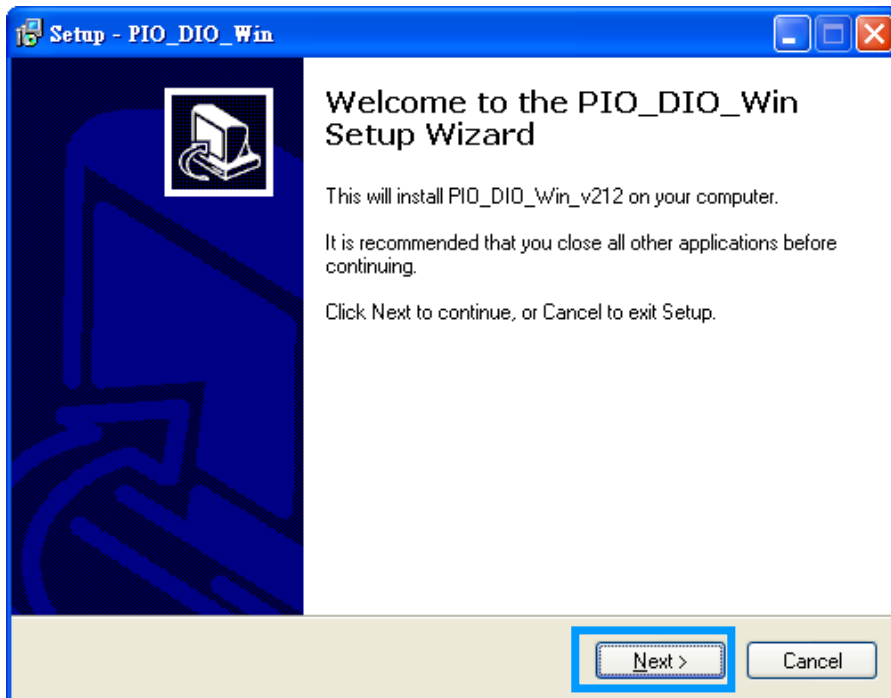


5. Click the **"Next>"** button to install the driver into the **default** folder.

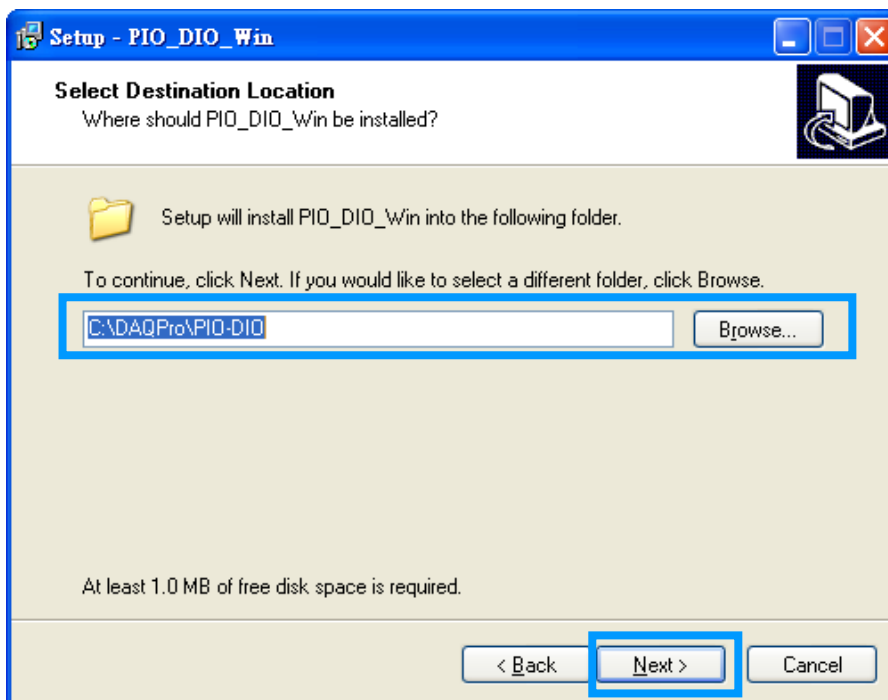

6. Click the **"Install"** button to continue the installation.

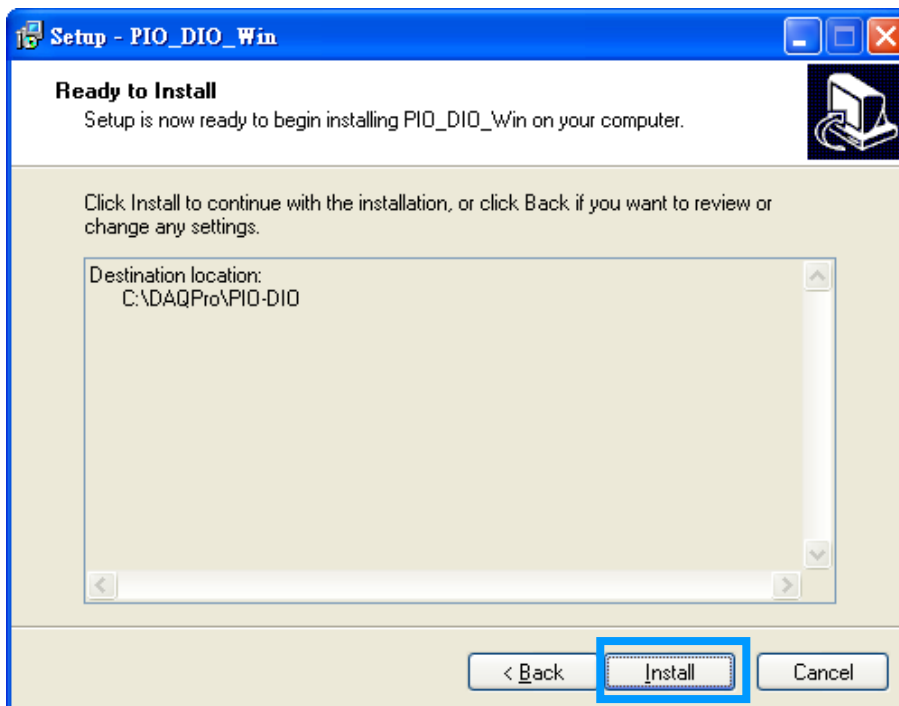


7. Selection **“No, I will restart my computer later”** and then click the **“Finish”** button.

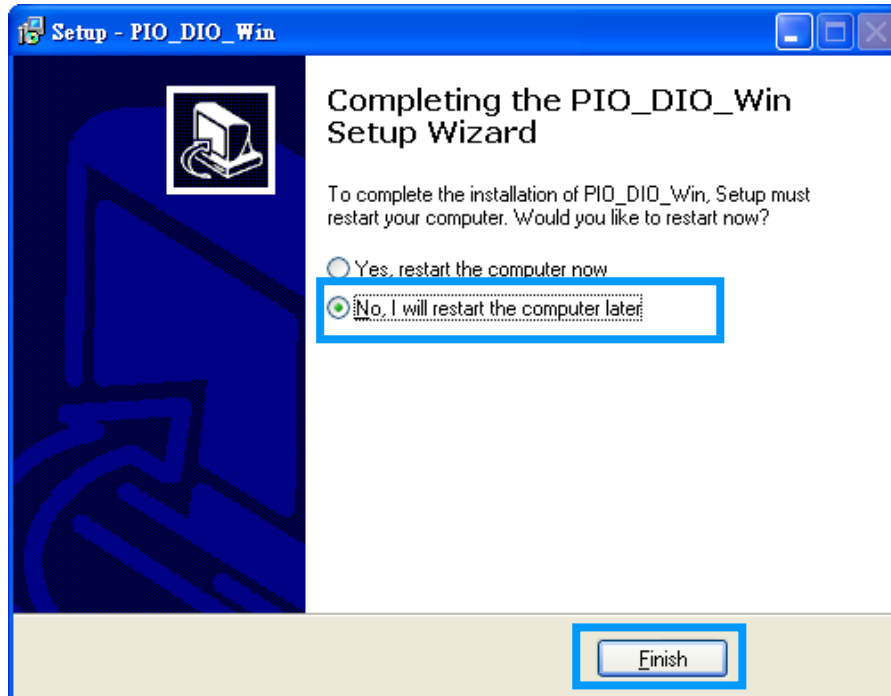

4.2 PnP Driver Installation

Step 1: Turn off the computer and install the PIO-D96 series card into the computer.

For detailed information about the hardware installation of PIO-D96 series card, please refer to [Chapter 3 Hardware Installation](#).

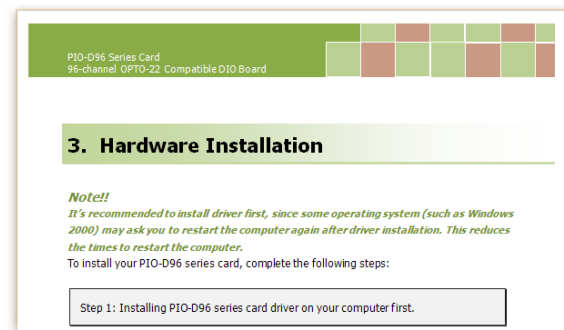


Step 2: Power on the computer and system should find the new card and then continue to finish the Plug&Play steps.


Note: Some Windows OS will load the driver automatically to complete the installation at boot.



Step 3: Select **"Install the software automatically [Recommended]"** and click the **"Next>"** button.

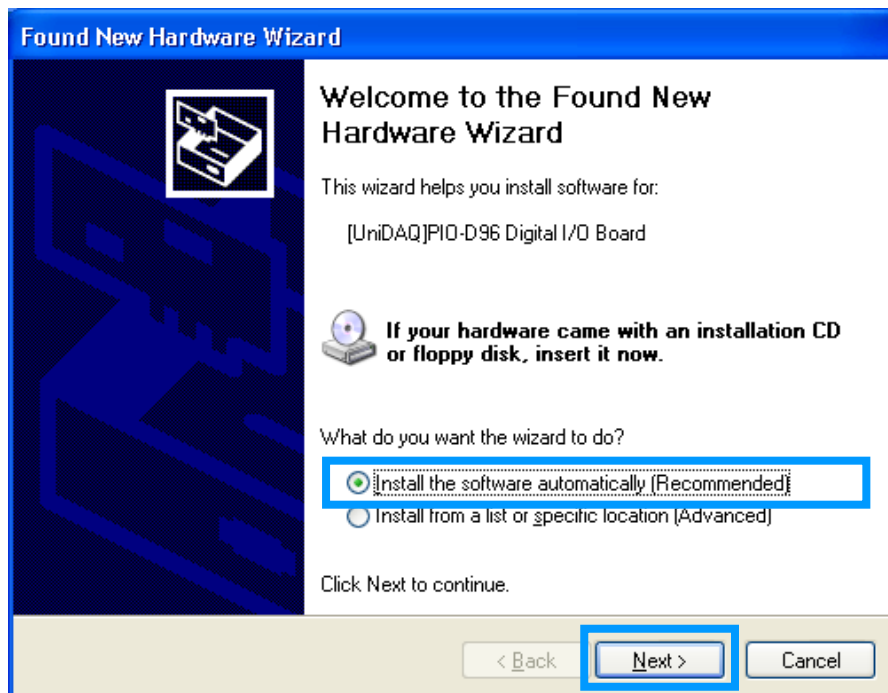

Step 4: Click the **“Finish”** button.

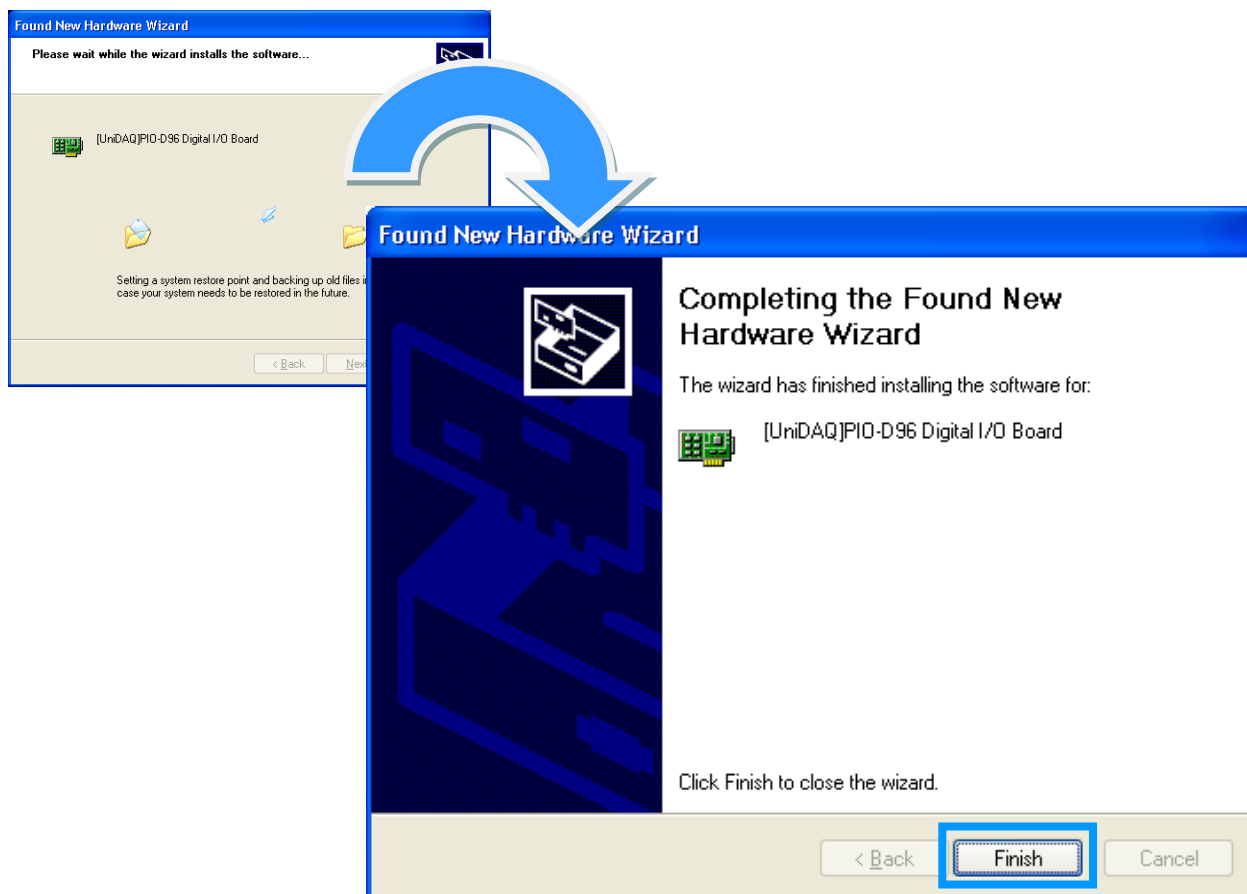

Step 5: Windows pops up **“Found New Hardware”** dialog box again.




4.3 Confirm the Successful Installation

Make sure the PIO-D96 series cards installed are correct on the computer as follows:

Step 1: Select the **"Start"** → **"Control Panel"** and then double click the **"System"** icon on Windows.

Step 2: Click the **"Hardware"** tab and then click the **"Device Manager"** button.

Step 3: Check the PIO-D96 series card which listed correctly or not, as illustrated below.

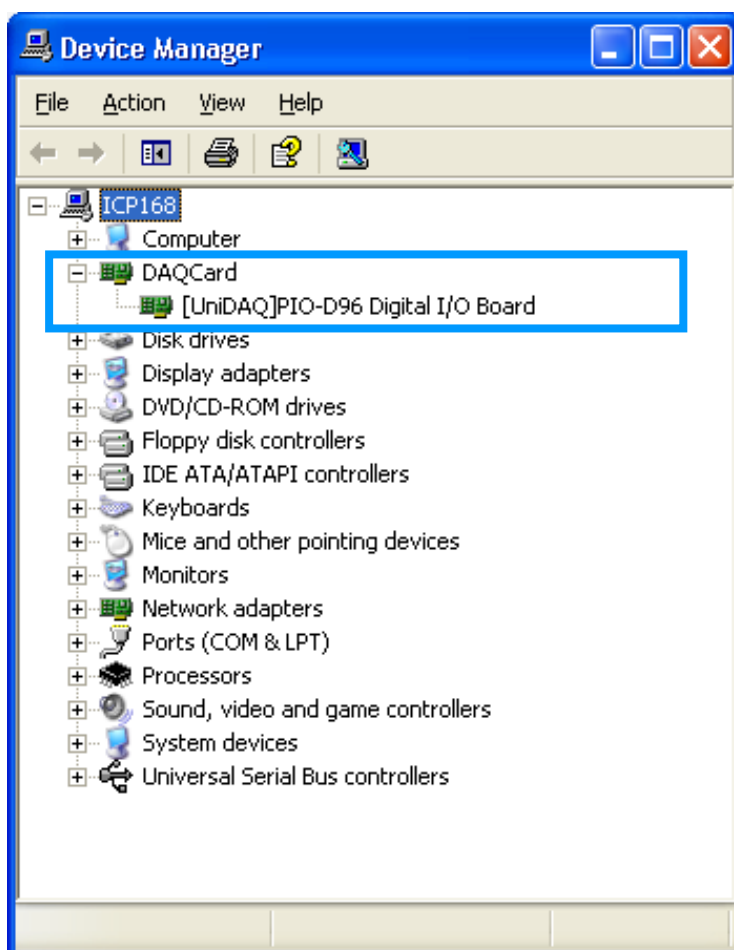


5. Testing PIO-D96 Series Card

This chapter can give you the detail steps about self-test. In this way, user can confirm that PIO-D96 series card well or not. Before the self-test, you must complete the hardware and driver installation. For detailed information about the hardware and driver installation, please refer to [Chapter 3 Hardware Installation](#) and [Chapter 4 Software Installation](#).


5.1 Self-Test Wiring

■ *PIO-D96 and PIO-D96U:*

1. Use the DN-37 (optional) to connect the CON1 on the PIO-D96/D96U card.

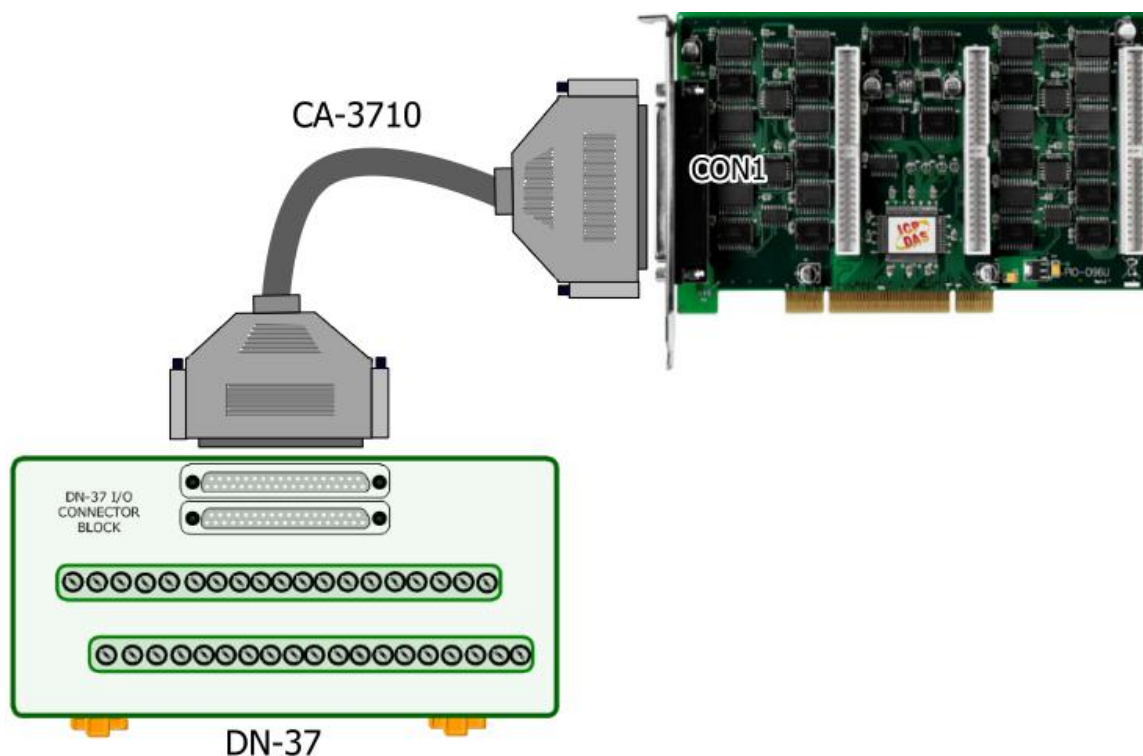


2. Connect the Port0 (PA0 ~ PA7) with Port1 (PB0 ~ PB7).

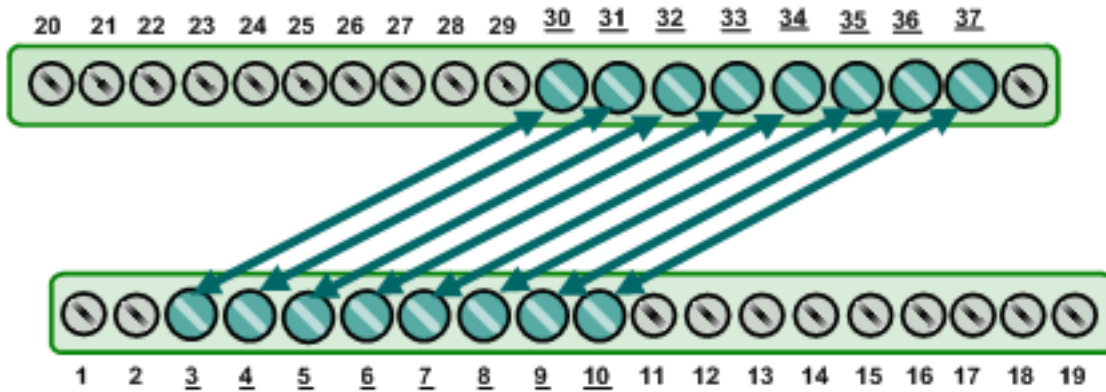


■ **PIO-D96SU:**

1. Use DN-100 wiring terminal board (optional) to connect the CON1 on the PIO-D96SU card.

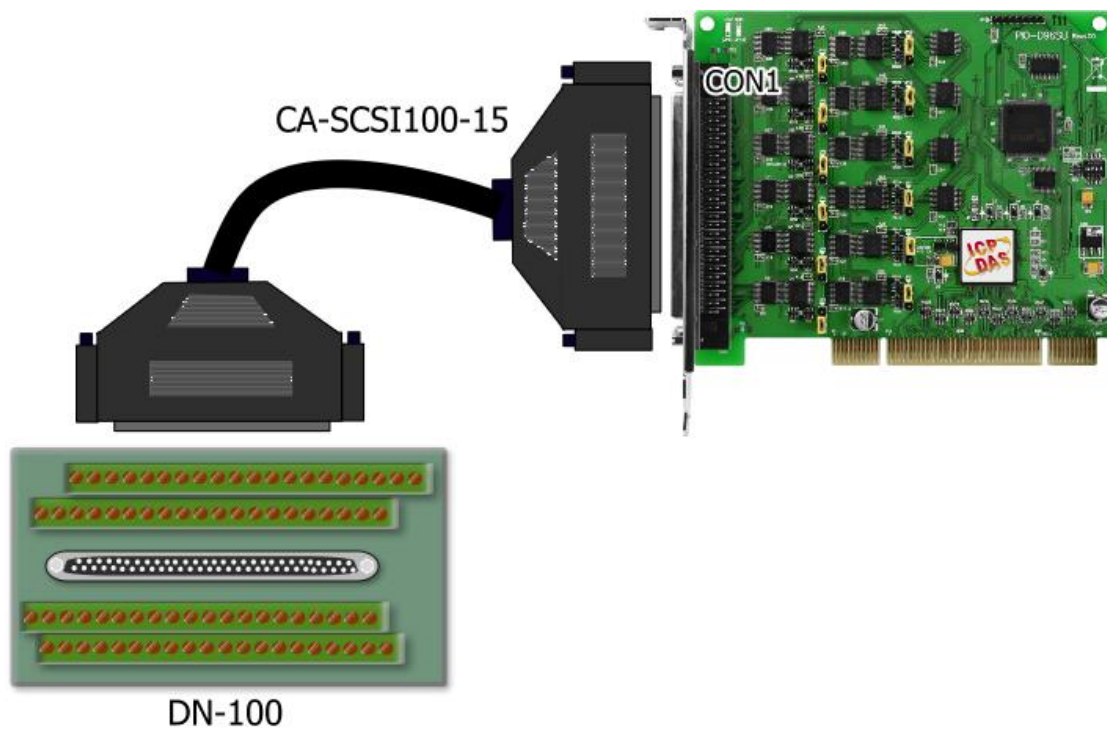

2. Connect the Port0 (PA00 ~ PA07) with Port1 (PB00 ~ PB07).


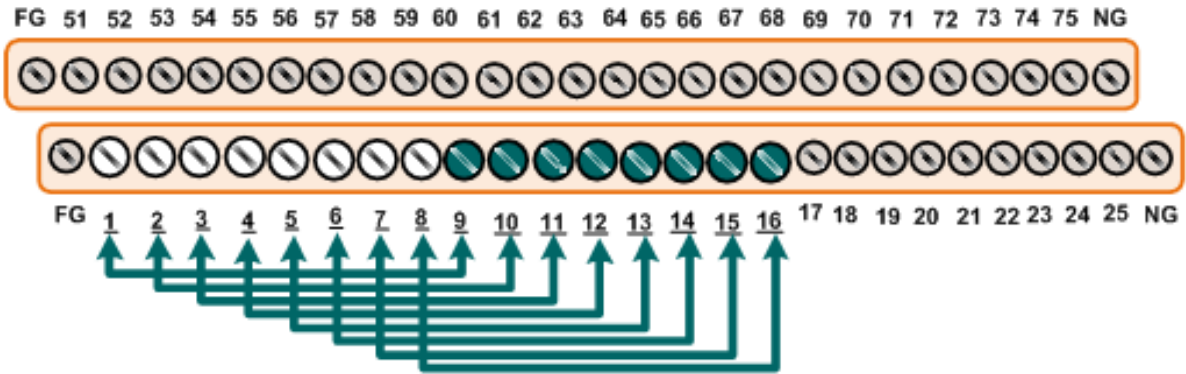


5.2 Execute the Test Program



The following example use UniDAQ driver to perform self-test. If you install the PIO-DIO series classic driver, please refer to Quick Start Guide of the PIO-D96 (http://ftp.icpdas.com/pub/cd/iocard/pci/napdos/pci/pio-dio/manual/quickstart/d96/pio_d96_quickstart_eng.pdf) to execute the self-test.

3. Execute the UniDAQ Utility Program. The UniDAQ Utility.exe will be placed in the default path after completing installation.

Default Path: C:\ICPDAS\UniDAQ\Driver\
Double click the "UniDAQUtility.exe"

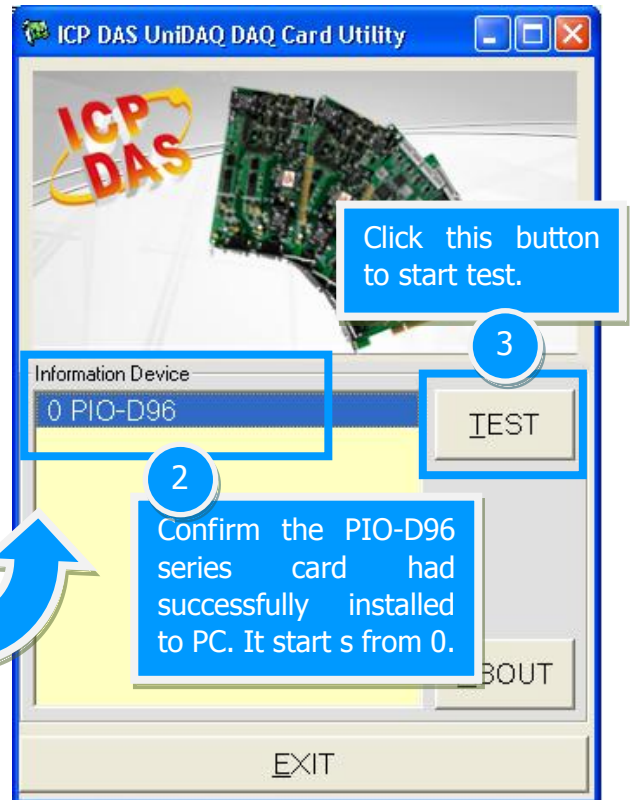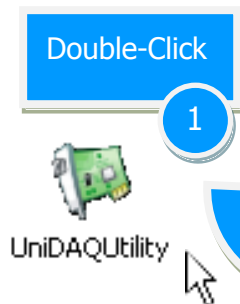

4. Get DIO function test result.

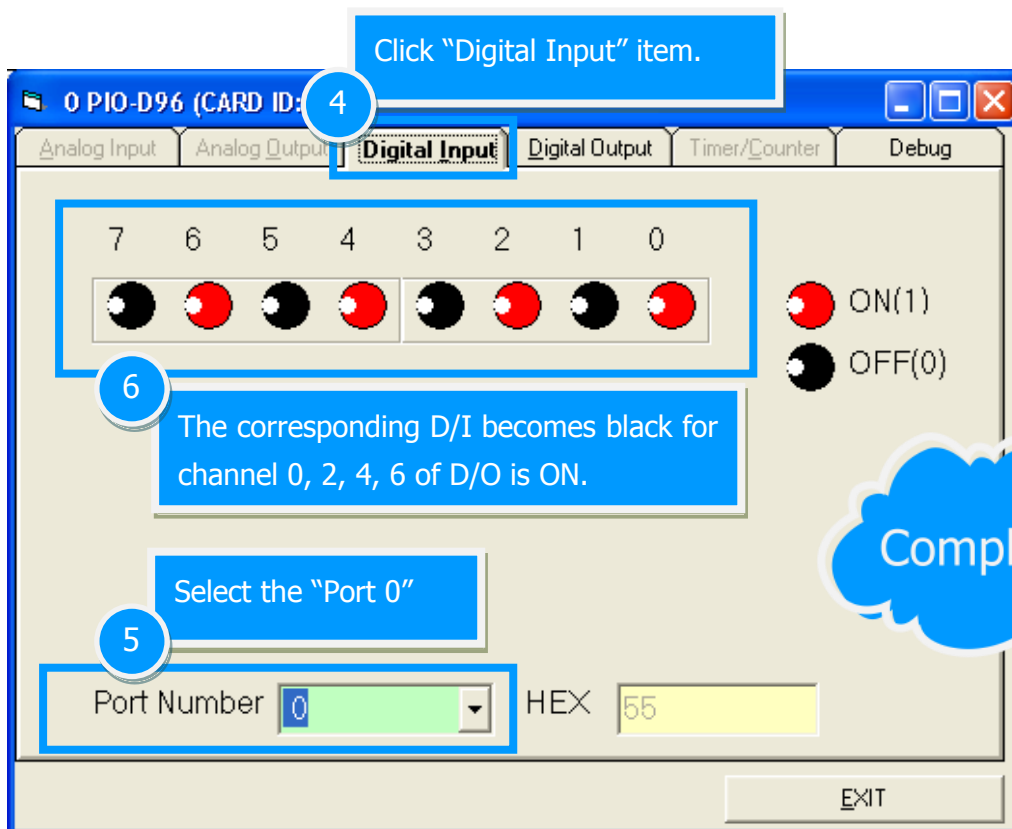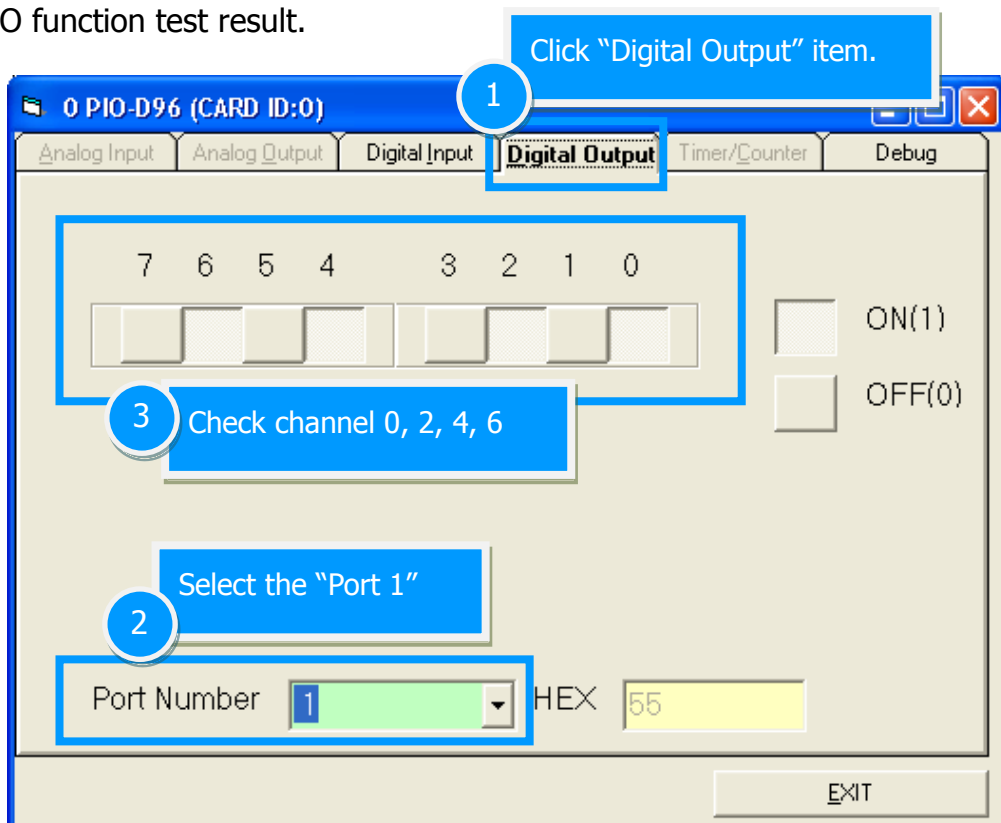

6. I/O Control Register

6.1 How to Find the I/O Address

The plug&play BIOS will assign a proper I/O address to every PIO/PISO series card in the power-on stage. The fixed IDs for the PIO-D96 series cards are given as follows:

Table 6-1:

PIO-D96 (Rev 1.0 ~3.0)		PIO-D96 (Rev 4.0 or above)	
Vendor ID	0xE159	Vendor ID	0xE159
Device ID	0x0002	Device ID	0x0001
Sub-Vendor ID	0x80	Sub-Vendor ID	0x5880
Sub-Device ID	0x01	Sub-Device ID	0x01
Sub-Aux ID	0x10	Sub-Aux ID	0x10

Table 6-2:

PIO-D96U (Rev 1.0 or above)		PIO-D96SU (Rev 1.0 or above)	
Vendor ID	0xE159	Vendor ID	0xE159
Device ID	0x0001	Device ID	0x0001
Sub-Vendor ID	0x5880	Sub-Vendor ID	0x1880
Sub-Device ID	0x01	Sub-Device ID	0x0001
Sub-Aux ID	0x10	Sub-Aux ID	0x0010


The PIO_PISO.EXE utility program will detect and present all information for PIO/PISO cards installed in the PC, as shown in the following Figure6-1. Details of how to identify the PIO-D96 series cards of ICPDAS data acquisition boards based on the **Sub-vendor**, **Sub-device** and **Sub-Aux ID** are given in Table 6-1 and 6-2.

The PIO_PISO.exe utility is located on the CD as below and is useful for all PIO/PISO series cards.

CD:\NAPDOS\PCI\Utility\Win32\PIO_PISO\

http://ftp.icpdas.com/pub/cd/iocard/pci/napdos/pci/utility/win32/pio_piso/

Figure 6-1:

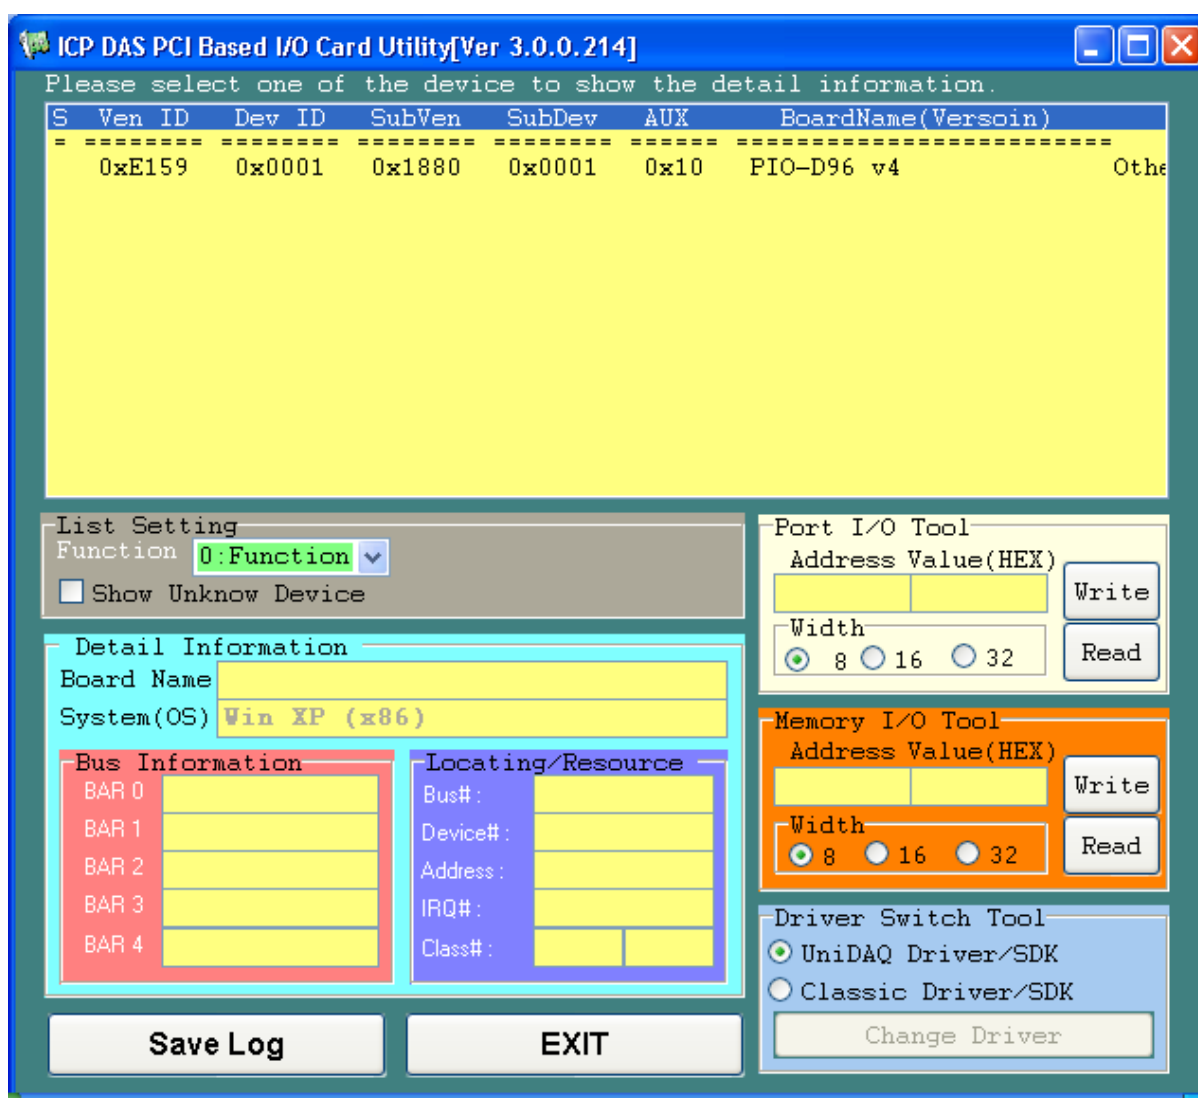

6.2 The Assignment of I/O Address

The Plug&Play BIOS will assign the proper I/O address to a PIO/PISO series card. If there is only one PIO/PISO board, the user can identify the board as card_0. If there are two PIO/PISO boards in the system, it is very difficult to identify which board is card_0. The software driver can support a maximum of 16 boards. Therefore, the user can install 16 PIO/PSIO series cards onto one PC system. The methods used to find and identify card_0 and card_1 is demonstrated below.

The simplest way to identify which card is card_0 is to use wSlotBus and wSlotDevice in the following manner:

Step 1: Remove all PIO-D96 series boards from the PC.

Step 2: Install one PIO-D96 series into the PC's PCI_slot1, run PIO_PISO.EXE.

Then record the wSlotBus1 and wSlotDevice1 information.

Step 3: Remove all PIO-D96 series boards from the PC.

Step 4: Install one PIO-D96 series into the PC's PCI_slot2 and run PIO_PISO.EXE.

Then record the wSlotBus2 and wSlotDevice2 information.

Step 5: Repeat Steps(3) and (4) for every PCI_slot and record all information from wSlotBus and wSlotDevice.

The records may look similar to the table follows:

Table 6-3:

PC's PCI Slot	WslotBus	WslotDevice
Slot_1	0	0x07
Slot_2	0	0x08
Slot_3	0	0x09
Slot_4	0	0x0A
PCI-BRIDGE		
Slot_5	1	0x0A
Slot_6	1	0x08
Slot_7	1	0x09
Slot_8	1	0x07

The above procedure will record all the wSlotBus and wSlotDevice information on a PC. These values will be mapped to this PC's physical slot and this mapping will not be changed for any PIO/PISO cards. Therefore, this information can be used to identify the specified PIO/PISO card by following steps:

- Step1:** Using the wSlotBus and wSlotDevice information from Table 6-3.
- Step2:** Enter the board number into PIO_GetConfigAddressSpace(...) function to get the information for a specific card, especially the wSlotBus and wSlotDevice details.
- Step3:** Identify the specific PIO/PISO card by comparing the data of the wSlotBus and wSlotDevice from Step1 and Step2.

Note: that normally the card installed in slot 0 is card0 and the card installed in slot1 is card1 for PIO/PISO series cards.

6.3 The I/O Address Map

The I/O address for PIO-D96 series cards are automatically assigned by the main board ROM BIOS. The I/O address can also be re-assigned by the user. It is strongly recommended that users do not change the I/O address. The Plug & Play BIOS will effectively perform the assignment of proper I/O addresses to each PIO-D96 series card. The I/O address for the PIO-D96/D96U/D96SU are given in the table below, all of which are based on the base address of each card.

Table 6-4: Refer to [Sec. 6.1](#) for more information about wBase.

Address	Read	Write
wBase+0	-	RESET\ Control Register
wBase+2	Aux control register	Same
wBase+3	Aux data register	Same
wBase+5	INT mask control register	Same
wBase+7	Aux pin status register	Same
wBase+0x2a	INT polarity control register	Same
wBase+0xc0	Read Port0	Write Port0
wBase+0xc4	Read Port1	Write Port1
wBase+0xc8	Read Port2	Write Port2
wBase+0xcc	-	Port0~Port2 Configuration
wBase+0xd0	Read Port3	Write Port3
wBase+0xd4	Read Port4	Write Port4
wBase+0xd8	Read Port5	Write Port5
wBase+0xdc	-	Port3~Port5 Configuration
wBase+0xe0	Read Port6	Write Port6
wBase+0xe4	Read Port7	Write Port7
wbase+0xe8	Read Port8	Write Port8
wBase+0xec	-	Port6~Port8 Configuration
wBase+0xf0	Read Port9	Write Port9
wBase+0xf4	Read Port10	Write Port10
wBase+0xf8	Read Port11	Write Port11
wBase+0xfc	Read Card ID	Port9~Port11 Configuration

6.3.1 RESET\ Control Register

(Write): wBase+0

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	RESET\

When the PC's power is first turned on, RESET\ signal is in a Low-state. **This will disable all D/I/O operations.** The user has to set the RESET\ signal to a High-state before any D/I/O command applications are initiated.

For example:

```

outputb (wBase,1);      /* RESET\=High → all D/I/O are enable now */
outputb (wBase,0);     /* RESET\=Low → all D/I/O are disable now */
    
```

6.3.2 AUX Control Register

(Read/Write): wBase+2

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Aux7	Aux6	Aux5	Aux4	Aux3	Aux2	Aux1	Aux0

Aux?=0 → this Aux is used as a D/I

Aux?=1 → this Aux is used as a D/O

When the PC is first turned on, all Aux signals are in a Low-state. All Aux are designed as D/I for all PIO/PISO series.

6.3.3 Aux Data Register

(Read/Write): wBase+3

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Aux7	Aux6	Aux5	Aux4	Aux3	Aux2	Aux1	Aux0

When the Aux is used for D/O, the output state is controlled by this register. This register is designed for feature extension. Therefore, do not use this register.

6.3.4 INT Mask Control Register

(Read/Write): wBase+5

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	EN3	EN2	EN1	EN0

EN0=0 → Disable P2C0 of CN1 as an interrupt signal (Default).

EN0=1 → Enable P2C0 of CN1 as an interrupt signal

For example:

```

outputb(wBase+5,0);    /*Disable interrupt */
outputb(wBase+5,1);    /* Enable interrupt P2C0 */
outputb(wBase+5,0x0f); /* Enable interrupt P2C0, P5C0,P8C0,P11C0 */
    
```

6.3.5 Aux Status Register

(Read/Write): wBase+7

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Aux7	Aux6	Aux5	Aux4	Aux3	Aux2	Aux1	Aux0

Aux0=P2C0, Aux1=P5C0, Aux2=P8C0, Aux3=P11C0, Aux7~4=Aux-ID. Refer to DEMO5.C for more information. The Aux 0~3 are used as interrupt source. The interrupt service routine has to read this register to identify the interrupt source. Refer to [Sec. 2.7](#) for more information.

6.3.6 Interrupt Polarity Register

(Read/Write): wBase+0x2A

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	INV3	INV2	INV1	INV0

This register provides a function to control invert or non-invert for the interrupt signal source. A detailed application example is given below.

INV0=1 → select the non-inverted signal from P2C0

INV0=0 → select the inverted signal from P2C0

For example:

```

outputb(wBase+0x2a,0x0f); /* select the non-inverted input P2/5/8/11C0 */
outputb(wBase+0x2a,0x00); /* select the inverted input of P2/5/8/11C0 */
outputb(wBase+0x2a,0x0e); /* select the inverted input of P2C0 */
                          /* select the non-inverted input P5/8/11C0 */

outputb(wBase+0x2a,0x0c); /* select the inverted input of P2/5C0 */
                          /* select the non-inverted input P8/11C0 */
    
```

Refer to [Sec. 2.7](#) and DEMO5.C (DOS) for more information.

6.3.7 I/O Selection Control Register

(Write): wBase+0xcc

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	0	Port2	Port1	Port0

(Write): wBase+0xdc

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	0	Port5	Port4	Port3

(Write): wBase+0xec

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	0	Port8	Port7	Port6

(Write): wBase+0xfc

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	0	Port11	Port10	Port9

These registers provide the function for configuration digital input/output port of the PIO-D96 series Card. Every I/O port can be programmed to be a D/I or a D/O port. **Note that all ports are used as D/I ports when the PC is first turned on.**

port?=1 → this port is used as a D/O port

port?=0 → this port is used as a D/I port

For example:

```
outportb(wBase+0xcc,0x03);    /* set port0 ~ port1 as D/O ports */
                             /* set port2 as D/I ports */
```

```
outportb(wBase+0xdc,0x07);    /* set port3 ~ port5 as D/O ports */
outportb(wBase+0xec,0x00);    /* set port6 ~ port8 as D/I ports */
```


6.3.8 Card ID Register

(Read): wBase+0xfc

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	ID3	ID2	ID1	ID0	0	0	0

For example:

```
wCardID = inportb(wBase+0xfc);          /* read Card ID */
```

Note: The Card ID function is only supported by the PIO-D96U and PIO-D96SU (Ver. 1.0 or above)

6.3.9 Read/Write 8-bit Data Register

(Read/Write): wBase+0xc0/0xc4/0xc8/0xd0/0xd4/0xd8
0xe0/0xe4/0xe8/0xf0/0xf4/0xf8

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
D7	D6	D5	D4	D3	D2	D1	D0

There are 12 8-bit I/O ports in the PIO-D96/D96U/D96SU. Every I/O port can be configured as D/I or D/O port. User can send/receive digital data to/from this register for digital input or output. **Note that all ports are used as D/I port when the PC is first turned on.**

For example:

```
outportb(wBase+0xc0,Val);          /* write to Port0 */
Val=inportb(wBase+0xc0);          /* read from Port0 */
```

Note: Make sure the I/O port configuration (DI or DO) before read/write the data register. (Refer to [Sec.6.3.7](#))

7. Demo Programs

7.1 Demo Program for Windows

All demo programs will not work properly if the DLL driver has not been installed correctly. During the DLL driver installation process, the install-shields will register the correct kernel driver to the operation system and copy the DLL driver and demo programs to the correct position based on the driver software package you have selected (Win98/Me/NT/2K and 32-/64-bit winXP/2003/Vista/7/8). Once driver installation is complete, the related demo programs and development library and declaration header files for different development environments will be presented as follows.

■ Demo Program for PIO-DIO Series Classic Driver

The demo program is contained in:

CD:\NAPDOS\PCI\PIO-DIO\DLL_OCX\Demo\

http://ftp.icpdas.com/pub/cd/iocard/pci/napdos/pci/pio-dio/dll_ocx/demo/

⊕ BCB4 → for Borland C++ Builder 4
PIODIO.H → Header files
PIODIO.LIB → Linkage library for BCB only

⊕ Delphi4 → for Delphi 4
PIODIO.PAS → Declaration files

⊕ VC6 → for Visual C++ 6
PIODIO.H → Header files
PIODIO.LIB → Linkage library for VC only

⊕ VB6 → for Visual Basic 6
PIODIO.BAS → Declaration files

⊕ VB.NET2005 → for VB.NET2005
PIODIO.vb → Visual Basic Source files

⊕ CSharp2005 → for C#.NET2005
PIODIO.cs → Visual C# Source files

For detailed information about the DLL function of the PIO-D96 series, please refer to PIO-DIO DLL Software Manual (CD:\NAPDOS\PCI\PIO-DIO\Manual\)

■ Demo Program for UniDAQ SDK Driver

The demo program is contained in:

CD:\NAPDOS\PCI\UniDAQ\DLL\Demo\

<http://ftp.icpdas.com/pub/cd/iocard/pci/napdos/pci/unidaq/dll/demo/>

⊕ BCB6 → for Borland C++ Builder 6 UniDAQ.H → Header files UniDAQ.LIB → Linkage library for BCB only	⊕ Delphi6 → for Delphi 6 UniDAQ.PAS → Declaration files
⊕ VB6 → for Visual Basic 6 UniDAQ.BAS → Declaration files	⊕ CSharp2005 → for C#.NET2005 UniDAQ.cs → Visual C# Source files
⊕ VC6 → for Visual C++ 6 UniDAQ.H → Header files UniDAQ.LIB → Linkage library for VC only	⊕ VB.NET2005 → for VB.NET2005 UniDAQ.vb → Visual Basic Source files
⊕ VC.NET2005 → for VC.NET2005 (32-bit) UniDAQ.H → Header files UniDAQ.LIB → Linkage library for VC only	⊕ VC.NET2005 → for VC.NET2005 (64-bit) UniDAQ.H → Header files UniDAQ.LIB → Linkage library for VC only

For detailed information about the DLL function and demo program of the UniDAQ, please refer to UniDAQ DLL Software Manual (CD: \NAPDOS\PCI\UniDAQ\Manual\)

7.2 Demo Program for DOS

The demo program is contained in:

CD:\NAPDOS\PCI\PIO-DIO\DOS\D96\PIOD96\

<http://ftp.icpdas.com/pub/cd/iocard/pci/napdos/pci/pio-dio/dos/d96/piod96/>

- ⊕ \TC*. * → for Turbo C 2.xx or above
- ⊕ \MSC*. * → for MSC 5.xx or above
- ⊕ \BC*. * → for BC 3.xx or above

- ⊕ \TC\LIB*. * → for TC Library
- ⊕ \TC\DEMO*. * → for TC demo program
- ⊕ \TC\DIAG*. * → for TC diagnostic program

- ⊕ \TC\LIB\PIO.H → TC Declaration File
- ⊕ \TC\LIB\TCPIO_L.LIB → TC Large Model Library File
- ⊕ \TC\LIB\TCPIO_H.LIB → TC Huge Model Library File

- ⊕ \MSC\LIB\PIO.H → MSC Declaration File
- ⊕ \MSC\LIB\MSCPIO_L.LIB → MSC Large Model Library File
- ⊕ \MSC\LIB\MSCPIO_H.LIB → MSC Huge Model Library File

- ⊕ \BC\LIB\PIO.H → BC Declaration File
- ⊕ \BC\LIB\BCPIO_L.LIB → BC Large Model Library File
- ⊕ \BC\LIB\BCPIO_H.LIB → BC Huge Model Library File

For detailed information about the DLL function of the DOS, please refer to PIO-DIO DLL Software Manual (CD:\NAPDOS\PCI\PIO-DIO\Manual\)

Appendix: Daughter Board

A1. DB-37, DN-37, DN-50 and DN-100

- **DB-37:** The DB-37 is a general purpose daughter board for D-sub 37 pins. It is designed for easy wire connection via pin-to-pin. Use a 37-pin cable (e.g. CA-3710 ,etc.) to connect DB-37 to CON1 of the PIO-D96/D96U.



DB-37

- **DN-37 and DN-50:** The DN-37 is a general purpose daughter board for DB-37 pins with DIN-Rail Mountings. The DN-50 is designed for 50-pin flat-cable headers with DIN-Rail mountings. They are also designed for easy wire connection via pin-to-pin. Use a 37-pin cable (e.g. CA-3710 ,etc.) to connect to CON1 of the PIO-D96/D96U by DN-37, and then use a 50-pin cable (e.g. CA-5002 ,etc.) to connect to CN1/CN2/CN3 by DN-50.




DN-50



DN-37


- **DN-100:** The DN-100 is a general purpose daughter board for SCSI II 100 pins. It is designed for easy wire connection via pin-to-pin. Use a 100-pin SCSI II cable (e.g. CA-SCSI100-15 ,etc.) to connect DN-100 to CON1 of the PIO-D96SU.

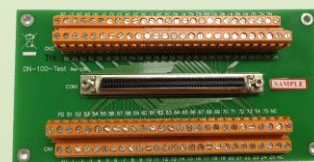

DN-100


A2. DB-8125

The DB-8125 is a general purpose screw terminal board. It is designed for easy wire connection. The DB-8125 consists of one DB-37 and two 20-pin flat-cable headers. Use a 37-pin cable (e.g. CA-3710 ,etc.) to connect DB-8125 to CON1 of the PIO-D96/D96U.

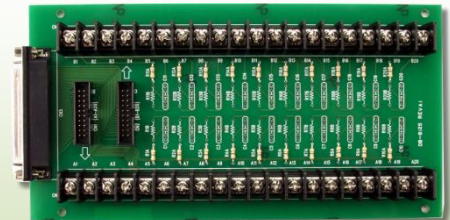

DB-8125

A3. ADP-37/PCI and ADP-50/PCI

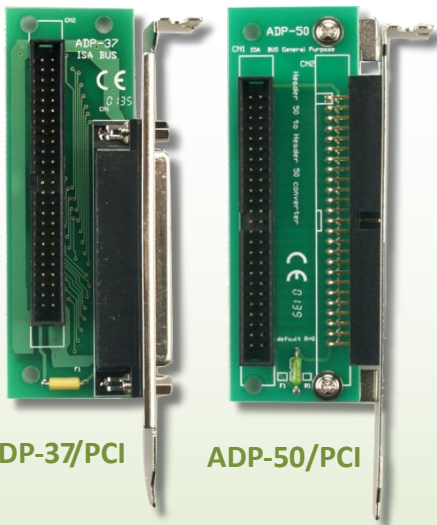


ADP-37/PCI

ADP-50/PCI

The ADP-37/PCI and ADP-50/PCI are extenders for the 50-pin header. The one side of the ADP-37/PCI or the ADP-50/PCI can be connected to a 50-pin header. Note: that ADP-37/PCI is 50-pin header to DB-37 extender and ADP-50/PCI is 50-pin header to 50-pin header extender.

The other side can be mounted onto the PC chassis as is depicted by the following:

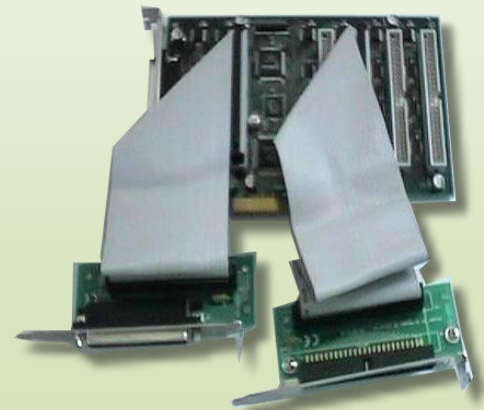

A4. DB-24P and DB-24PD Isolated Input Board

The DB-24P is a 24-channel isolated digital input daughter board. The optically isolated inputs of the DB-24P consist of a bi-directional optocoupler with a resistor for current sensing. You can use the DB-24P to sense DC signals from TTL levels up to 24 V or use the DB-24P to sense a wide range of AC signals. You can also use this board to isolate the computer from large common-mode voltage, ground loops and transient voltage spikes that often occur in industrial environments, as shown in Figure A4-1. Table A4-1 is the comparison of DB-24P and DB-24PD.

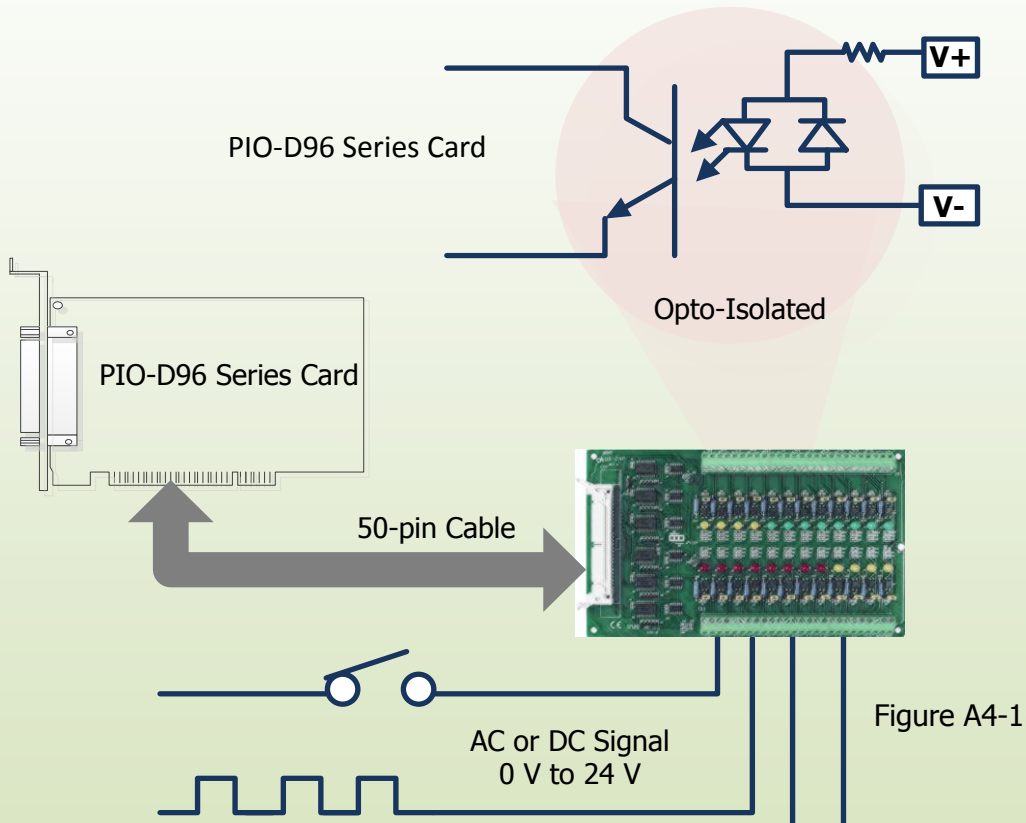
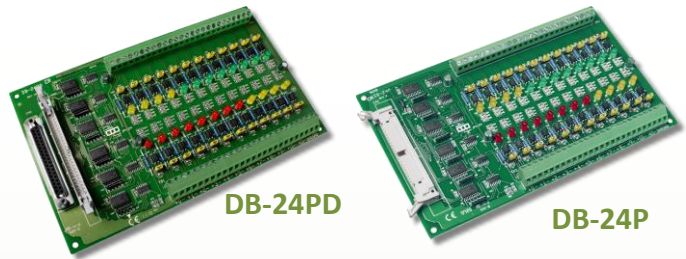


Table A4-1:

	DB-24P	DB-24PD
50-pin Flat-Cable Header	Yes	Yes
D-sub 37-pin Header	No	Yes
Other Specifications	Same	

A5. DB-24R and DB-24RD Relay Board

The DB-24R, 24-channel relay output board, consists of 24 form-C relays for efficiently controlling the switch with the use of an appropriately loaded program. The relays are energized by applying a 12 V/24 V voltage signal to the appropriate relay channel on the 50-pin flat-cable connector. There are 24 enunciator LEDs for each relay channel and the LED light will go on when their associated relay has been activated. The control scheme is illustrated below.

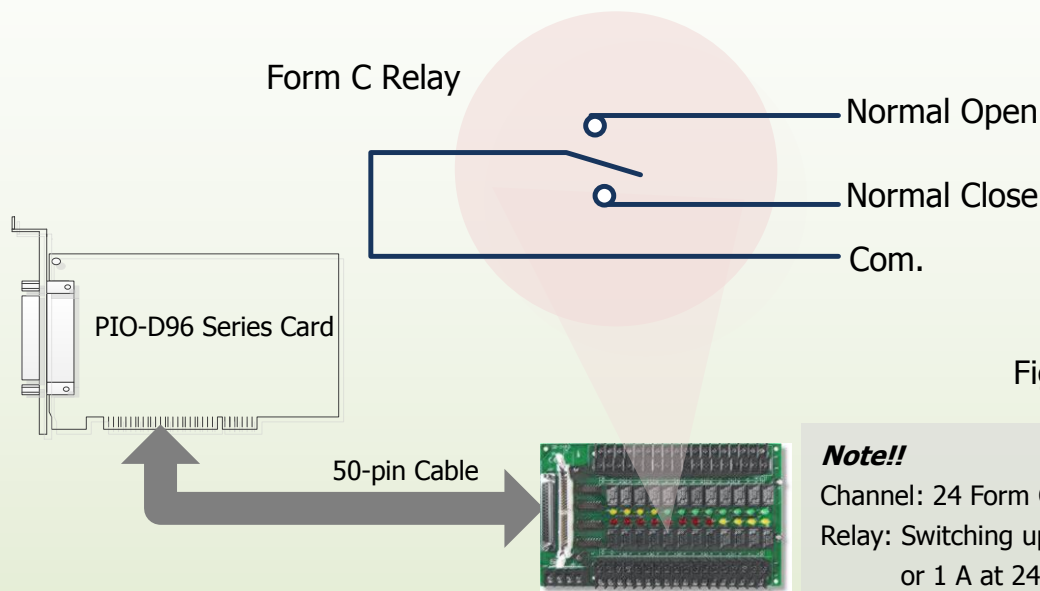
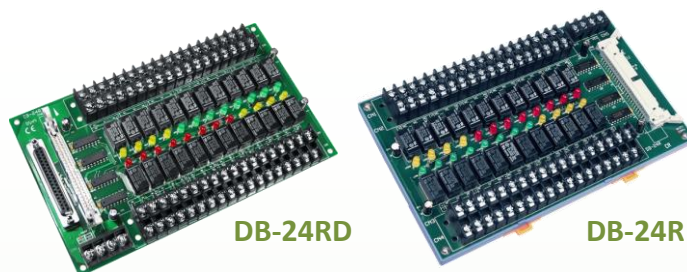


Figure A5-1

Note!!
Channel: 24 Form C Relay
Relay: Switching up to 0.5 A at 110 V_{AC}
or 1 A at 24 V_{DC}

Table A5-1:


	DB-24R	DB24RD
50-pin Flat-Cable Header	Yes	Yes
D-sub 37-pin Header	No	Yes
Other Specifications	Same	

Table A5-2:

DB-24R, DB-24RD	24 * Relay (120 V, 0.5 A)
DB-24PR, DB-24PRD	24 * Power Relay (250 V, 5 A)
DB-24POR	24 * PhotoMOS Relay (350 V, 0.1 A)
DB-24SSR	24 * SSR (250 V _{AC} , 4 A)
DB-24C	24 * Open Collector (30 V, 100 mA)
DB-16P8R	16 * Relay (120 V, 0.5 A) + 8 * Isolated Input

A6. DB-24PR, DB-24POR and DB-24C

The DB-24PR, 24-channel power relay output board, consists of 8 form-C and 16 form-A electromechanical relays for efficiently

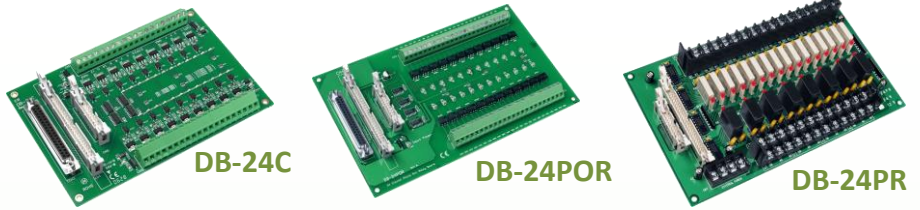

controlling the switch with the use of an appropriately loaded program. The contact of each relay can allow 5 A current load at 250 V_{AC}/30 V_{DC}. The relay is energized by applying a 5 voltage signal to the associate relay channel on the 20-pin flat-cable connector (just used 16 relays) or 50-pin flat-cable connector (OPTO-22 compatible, for DIO-24 series). 24 enunciator LEDs for indicating the status of for each relay and the corresponding LED light will go on when their associated relay has been activated. To avoid overloading your PC's power supply, this board needs a +12 V_{DC} or +24V_{DC} external power supply, as shown in Figure A6-1.

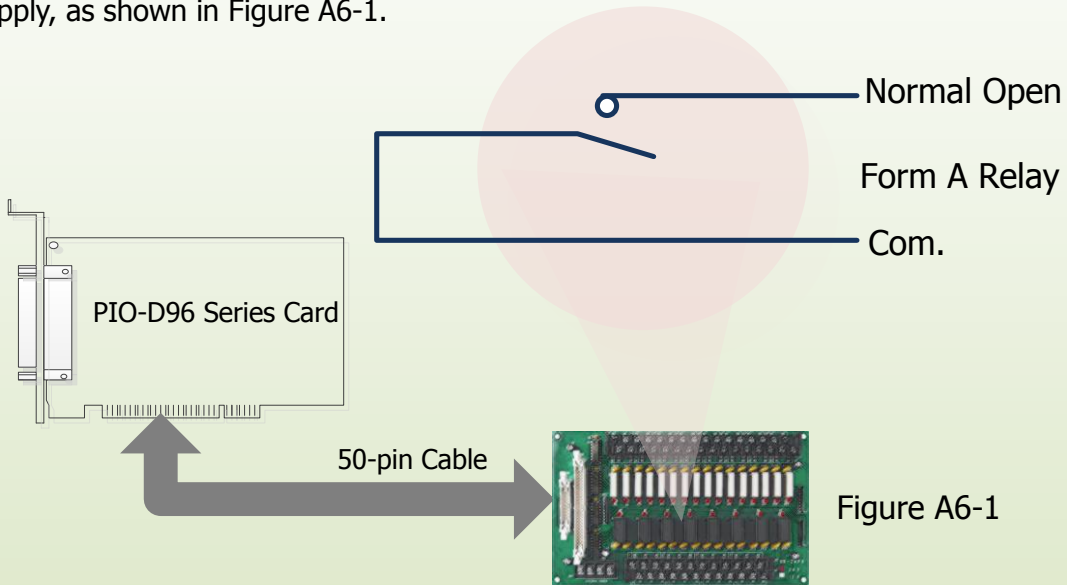


Figure A6-1

Table A6-1:

DB-24PR	24 * Power Relay, 5A/250 V
DB-24POR	24 * PhotoMOS Relay, 0.1 A/350 V _{AC}
DB-24C	24 * Open Collector, 100 mA per channel, 30 V max.

Note!!

1. 50-Pin connector (OPTO-22 compatible) for DIO-24/48/144, PIO-D144/D96/D56/D48/D24/D168.
2. 20-Pin connector for 16 channel digital output (A-82X, A-62X, DIO-64, ISO-DA16/DA8).
3. Channel: 16 Form A Relay, 8 Form C Relay.
4. Relay: switching up to 5 A at 110 V_{AC}/5 A at 30 V_{DC}.

A7. Daughter Boards Comparison Table

Table A7-1 is the comparison table for the daughter application of PIO/PISO series cards.

Table A7-1:

I/O Card	-	PIO-D96 PIO-D96U	PIO-D96 PIO-D96U	PIO-D96SU
Cable/ Daughter Boards	20-Pin Flat-Cable	50-Pin Flat-Cable	37-Pin D-sub	100-Pin SCSI II
DB-37	NO	NO	Yes	NO
DN-37	NO	NO	Yes	NO
ADP-37/PCI	NO	Yes	Yes	NO
ADP-50/PCI	NO	Yes	NO	NO
DB-24P	NO	Yes	NO	NO
DB-24PD	NO	Yes	Yes	NO
DB-16P8R	NO	Yes	Yes	NO
DB-24R	NO	Yes	NO	NO
DB-24RD	NO	Yes	Yes	NO
DB-24C	Yes	Yes	Yes	NO
DB-24PR	Yes	Yes	NO	NO
DB-24PRD	NO	Yes	Yes	NO
DB-24POR	Yes	Yes	Yes	NO
DB-24SSR	NO	Yes	Yes	NO
DN-100	NO	NO	NO	Yes