


GT-530

Intelligent SMS alarm controller

User Manual v1.0

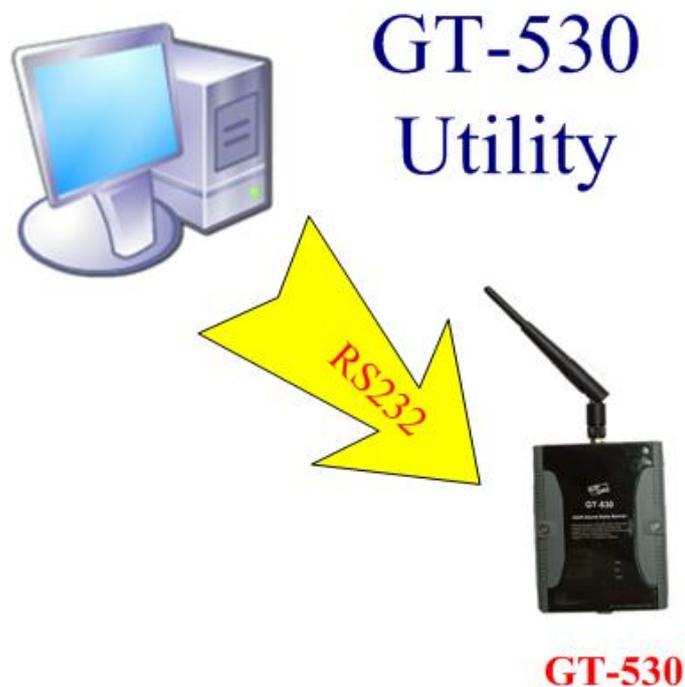

High Quality, Industrial Data Acquisition, and Control Products

Warranty

All products manufactured by ICP DAS are warranted against defective materials for a period of one year from the date of delivery to the original purchaser.

Warning

ICP DAS assumes no liability for damages consequent to the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, or for any infringements of patents or other rights of third parties resulting from its use.

Copyright

Copyright 2009 by ICP DAS CO., LTD. All rights reserved worldwide.

Trademark

The names used for identification only may be registered trademarks of their respective companies.

Version	Date	Author	Description
1.0	2009/8/15	Alung	Release version

Table of Contents

1.	Introduction	1
1.1	Features.....	2
1.2	Applications.....	2
2.	Hardware	4
2.1	Specifications	4
2.2	Appearance and pin assignments.....	6
2.3	Dimensions	7
2.4	DI/DO Internal Structure and Wire Connection	8
2.5	LED indicators.....	10
2.6	Install GT-530.....	11
2.7	How to reset GT-530	11
2.8	The charge and discharge of Li-Battery	12
3.	Install GT-530 Utility	13
3.1	Install .NET Compact Framework.....	13
3.2	Install GT-530 Utility	15
4.	GT-530 Utility operation.....	18
4.1	Main menu.....	19
4.2	Operation Language	21
4.3	Login.....	22
4.4	Main parameter.....	24
4.5	SMS Recorder	30
4.6	Device Time.....	32
4.7	Counter Value	33
4.8	Change Password.....	34
4.9	DO control/DI status.....	35
4.10	Battery information	36
4.11	Signal Quality.....	37
4.12	Version	38
4.13	System	39
5.	SMS Command	40
5.1	@TIME (Time set and inquiry).....	41
5.2	@DOCn (DO control)	42
5.3	@ACTV (Counter value inquiry).....	43
5.4	@DIV (DI/DO inquiry)	44
5.5	@BAT (Battery inquiry).....	45


5.6	@PASS(Password inquiry).....	46
6.	Send/Receive SMS by com port.....	47
6.1	Send data to COM port of GT-530 by SMS command	47
6.2	Send SMS from COM port.....	47
7.	Troubleshooting.....	48

1. Introduction

GT-530 is an intelligent SMS controller for industry applications with the simple commands and SMS tunnel function with powered by the external power or Li-Battery. Also, GT-530 can support UNICODE for users to implement sending SMS messages with various languages. It can provide the SMS report function by setting the return time or DI/counter trigger.

GT-530 can be a remote control and alarm system allowing you to use your mobile phone to monitor and control your business from any location. Its alarm facilities provide a flexible way to distribute critical alarm information to any number of mobile phone users.

GT-530 can monitor total 10 digital inputs (6 counters). A SMS can be sent when these DI are triggered or counters exceed preset limits. The user can also interrogate the status of I/O through SMS messages. The GT-530 also has 2 Digital output which can be activated via DI trigger or SMS to control the lamps, pumps, heaters etc.

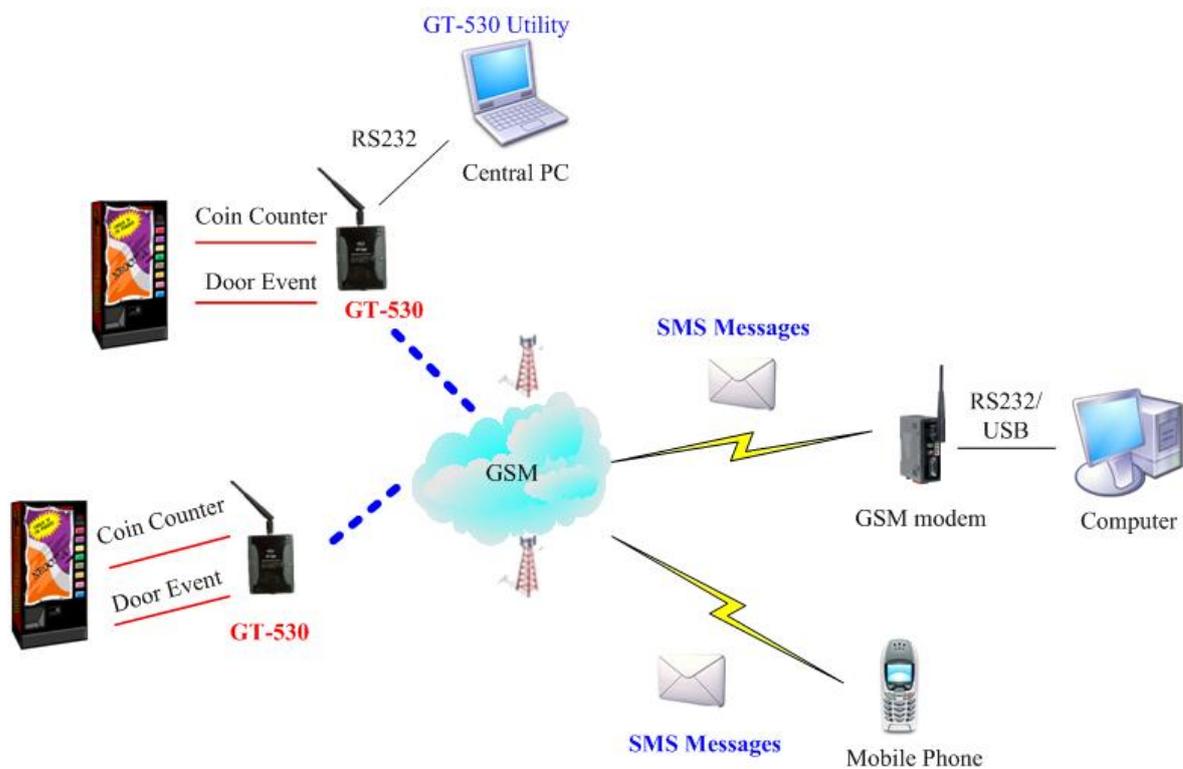

It needs to configure the GT-530 for the first use


1.1 Features

- Support 900/1800/1900 MHz tri-band frequency
- Identify ASCII or Unicode SMS Automatically
- Support max. 140 ASCII Characters
- Support max. 70 Unicode Characters
- Built-in ASCII Commands and SMS tunnel Communication Modes
- Max. 10 Default Phone Numbers
- Built-in Watch-dog Function
- Industrial Design with Surge Protection
- Support SMS setting and control
- 10 DI (6 Counter), 2 DO, 2 RS232 port
- Digital input support NC(normal close)/NO(normal open)/Counter modes
- Peroidic SMS report
- Alarm SMS triggered by DI trigger or exceed Counter preset limits
- Support simple command to send SMS via RS232
- Support DC +10 VDC ~ +30 VDC Power Input
- Supports 3.7 V Li-ion Battery Backup
- DIN Rail design

1.2 Applications

- Remote equipment maintenance and automation
- Vending or Gaming monitor system
- Home/Factory security
- Escalators & Elevators
- Energy Management
- Temperature Monitoring

Application 1: Signal Alarm and SMS communication

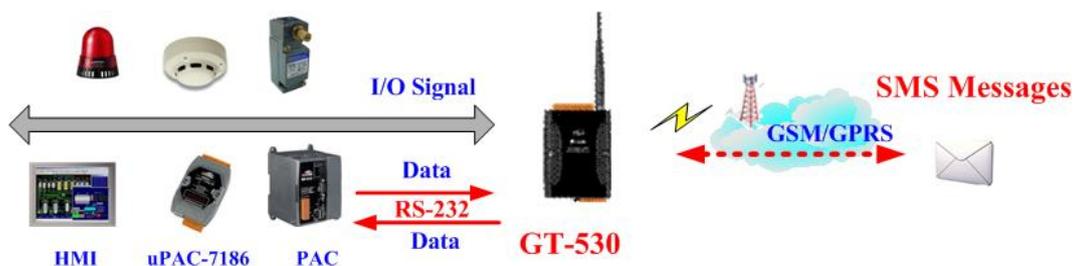

Application 2: Home security



Application 3: Remote maintenance



Application 4: SMS Tunnel Communication



2. Hardware

2.1 Specifications


System	
CPU	32 bit Arm7 CPU, 72M Hz
SRAM	32K Bytes
Flash Memory	512K Bytes
RTC	Gives time(sec, min, hour) & date, leap year compensation from 1980 to 2079
WDT(watchdog)	Yes
Serial ports	
COM2	RS-232 : TXD,RXD,GND for configuration
COM3	RS-232 : TXD,RXD,GND for communication with other devices
DIO	
Input	10 Channel (6 Counter 5~40Hz + 4 Channel Digital input powered by external power or Li-battery) On Voltage : +3.5~24VDC Off Voltage : +1V Max.
Output	D/O :2 Channel Open collector output (500mA@24V _{DC}) 2 digital output channels Output type : Open-Collector (NPN) Load Voltage : +24V Max. Load Current : 500mA Max.
GPRS/GSM Module	
GPRS/GSM	GPRS/GSM Tri-Band 900/1800/1900 MHz GPRS multi-slot : class 10/8 GPRS mobile station : class B GPRS class 10 : Max download speed 85.6 kbps CSD max speed 14.4 kbps Compliant to GSM phase 2/2+ -Class 4(2W @ 900 MHz) -Class 1(1W @ 1800/1900 MHz) Coding schemes : CS 1, CS 2,CS 3,CS 4 SMS: Text and PDU mode
Power	
Protection	Reverse polarity protection

Frame Ground Protection	ESD, Surge, EFT, Hi-Pot
Required Supply Voltage	+10 VDC ~ +30 VDC with 600 mAh Li-ion battery backup (Option : 1200 mAh)
Mechanical	
Casing	Plastic
Flammability	UL 94V-0 materials
Dimensions (W x H x D)	91 mm x 132 mm x 52 mm
Installation	DIN-Rail
Environment	
Operating Temperature	-25 °C ~ +55 °C
Storage Temperature	-40 °C ~ +80 °C
Humidity	5 ~ 95% RH, non-condensing

2.2 Appearance and pin assignments

Pin assignments :


- A. DI0 ~ DI5 support counter function which can not be powered by the external power input
- B. DI6 ~ DI9 can be powered by Li-battery in the absence of the external power input

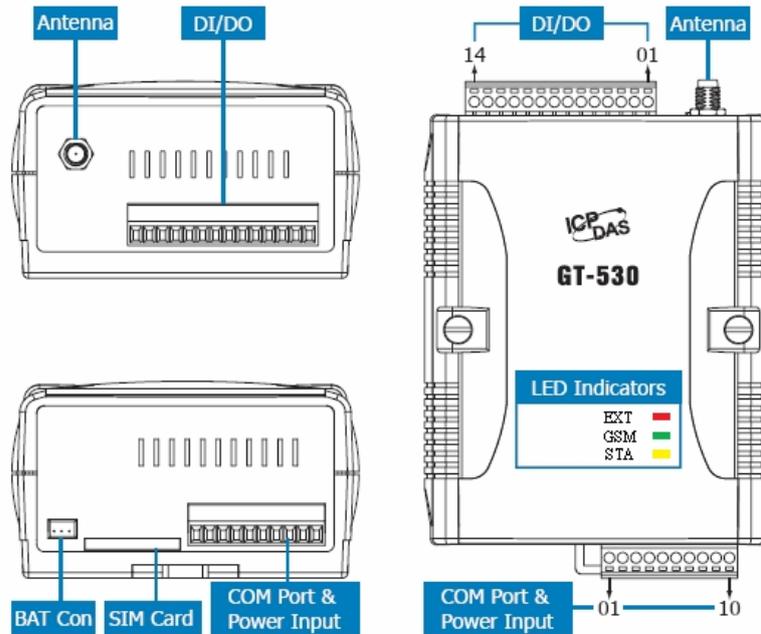

DI/DO		Terminal No.	Pin Assignment
DI		01	DI0
		02	DI1
		03	DI2
		04	DI3
		05	DI4
		06	DI5
		07	DI6
		08	DI7
		09	DI8
		10	DI9
DO		11	DO0
		12	DO1
		13	DO.PWR
DI/DO		14	Ext.GND


COM Port & Power Input		
Terminal No.	Terminal No.	Pin Assignment
COM3 RS-232	01	GND
	02	RxD3
	03	TxD3
COM2 RS-232	04	GND
	05	RxD2
	06	TxD2
N/A	07	N/A
Power Input: +10 ~ 30V _{DC}	08	DC.+VS
	09	DC.GND
Frame Ground	10	F.G

2.3 Dimensions

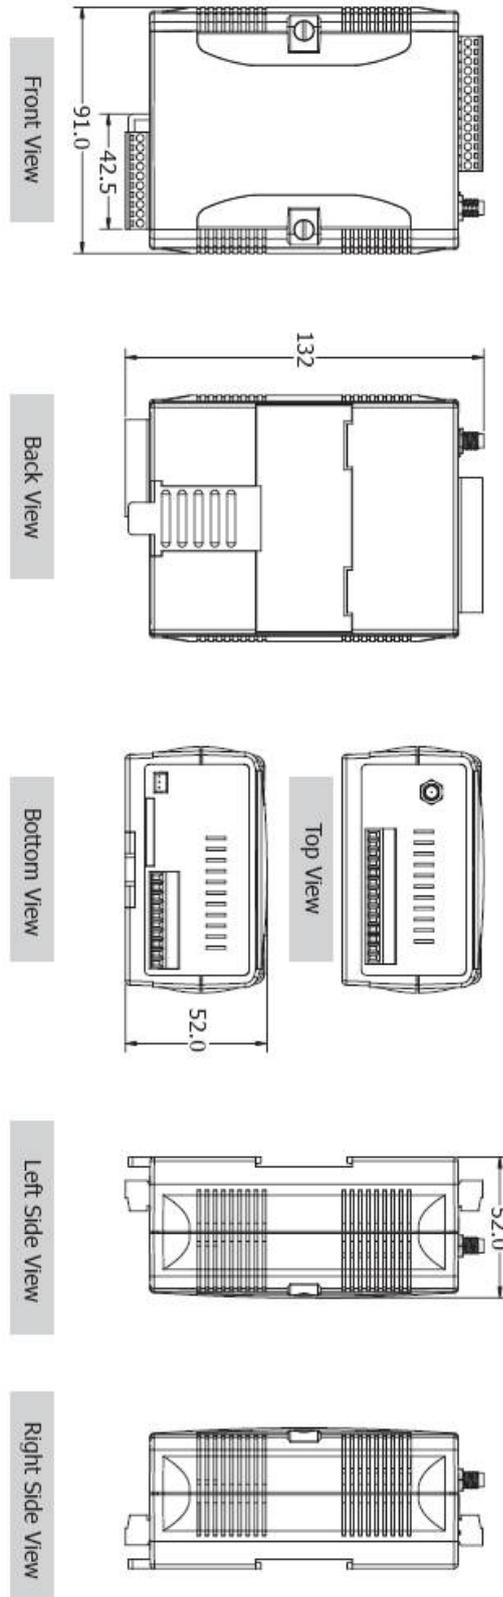

2.4 DI/DO Internal Structure and Wire Connection

2.4.1 DI Internal Structure

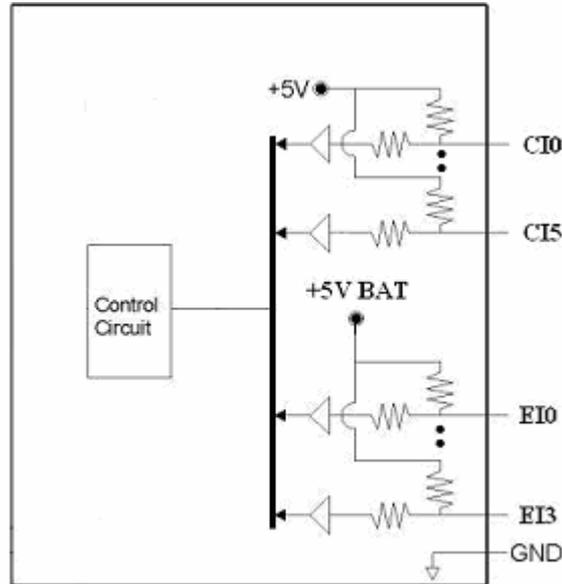




2.4.2 DI mode- NC (normal close)

The NC mode is used as normal close in relay application as follows. The logical value of DI is 1 when the relay is ON in normal use. When the relay is triggered as relay open, the logical value of DI is 0 and the alarm SMS would be sent to the users.


Input Type	Not Trigger	Trigger
	ReadBack as 1	ReadBack as 0
Relay Contact	Relay ON	Relay Off
TTL/CMOS Logic	Voltage < 1V	Voltage > 3.5V
Open Collector	Open Collector On	Open Collector Off

2.4.3 DI mode- NO (normal open) and Counter



The wire connection in counter and NO modes are the same. The NO mode is used as normal open in relay application as follows. The logical value of DI is 0 when the relay is close in normal use. When the relay is triggered as relay close, the logical value of DI is 1 and the SMS would be sent. If the counter mode is set, the trigger signal must be maintained as 25 ms ~ 200 ms.

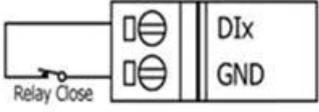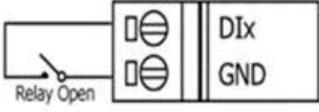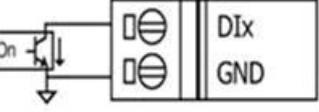Input Type	Trigger	Not Trigger
	ReadBack as 1	ReadBack as 0
Relay Contact	Relay ON 	Relay Off 
	TTL/CMOS Logic	
TTL/CMOS Logic	Voltage < 1V 	Voltage > 3.5V 
	Open Collector	Open Collector On 

2.4.4 DO internal structure

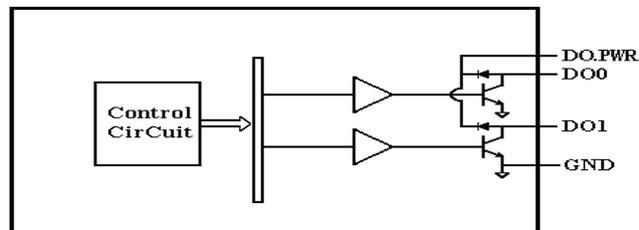

2.4.5 DO wire connection

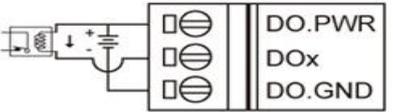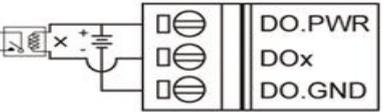	Relay ON	Relay Off
Drive Relay		
Resistance Load		

2.5 LED indicators

There are three LED indicators to help users to judge the various conditions of GT-530. The description is as follows :

- A. EXT(Red) : External Power LED to indicate whether the external power is input or not. The description is as follows:

The external power is active	The external power is not active
on	off

- B. STA(Orange) : System LED is to indicate if the GT-530 is normal or fail.

Condition External power	Normal	GSM Fail	PIN code is wrong
On	Blanking (1 sec)	Always on or off	Blinking per 50 ms
Off	Off (sleep mode) or Blanking (1 sec) (wake up)	Always on	Blanking per 50 ms

- C. GSM (Green) : The modem LED can indicate the status of GSM module.

Modem normal	Modem fail
Blanking (3 sec)	Off or Blanking (not 3 sec)

2.6 Installing GT-530

If users want to start GT-530 normally, it needs to follow these steps to install the GT-530 below:

- A. Install the antenna
- B. Plug in the normal SIM card (Before apply the SIM card, confirm it is OK by mobile phone.)
- C. Pin08 and Pin09 connect to the DC.+VS and DC.GND of the power supply.
- D. Follow the section 2.3 to wire the I/O connection.
- E. If you want to use the backup power, please connect the Li-battery to GT-530.
- F. It is needed to wait for 30 ~ 50 seconds to search the GSM base and register to the ISP. After finishing the process, GT-530 would be in normal operation mode and the STA LED would blank per 3 sec. The start time of GT-530 depends on the strength of signal.



2.7 How to reset GT-530

2.7.1 The Li-Battery is applied :

- (1) Remove Li-Battery from GT-530.
- (2) Turn off the external power and confirm the EXT LED is off.
- (3) Turn on the external power.
- (4) Re-install the Li-Battery.

2.7.2 The Li-Battery is not applied

- (1) Turn off the external power and confirm the EXT LED is off.
- (2) Turn on the power.

2.8 Charge and discharge of Li-Battery

If users apply the Li-Battery on GT-530, the Li-battery would be charged by the external power automatically. When the external power is removed from GT-530, the power supplying to GT-530 is from Li-Battery. If the voltage of Li-Battery is lower than the preset limit, GT-530 can send the SMS message to inform the users.


Note: A new Li-Battery can supply power to GT-530 for 36 hours without the external power. The power volume of Li-Battery would be decreasing for a long time. It is recommended to change the Li-Battery every 6 months.

3. Installing GT-530 Utility


It needs the runtime environment with .NET Framework 2.0 or above to execute the GT-530 Utility in the PC. If there has .NET Framework 2.0 or above in the PC, the section 3.1 can be omitted.

3.1 Installing .NET Compact Framework


- A. Plug shipment CD into the PC
- B. Execute \GT-530\Utility\dotnetfx20.exe
- C. The install figure is as follows:
 - (1) Press “Next” to the next step.

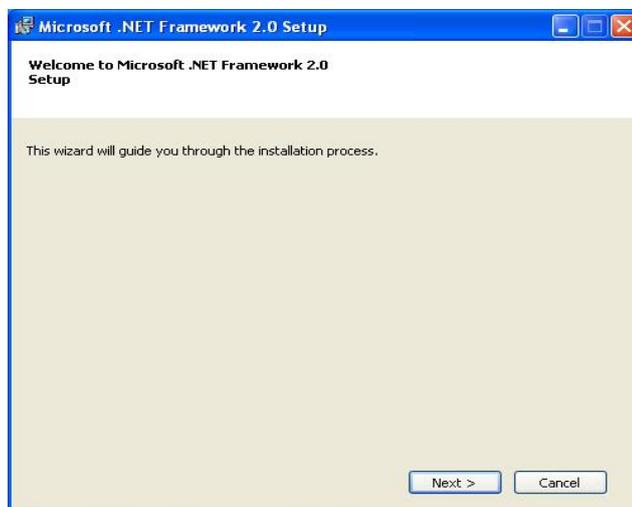


- (2) Select the “I accept the terms of the License Agreement” and “Install ” to the next step.

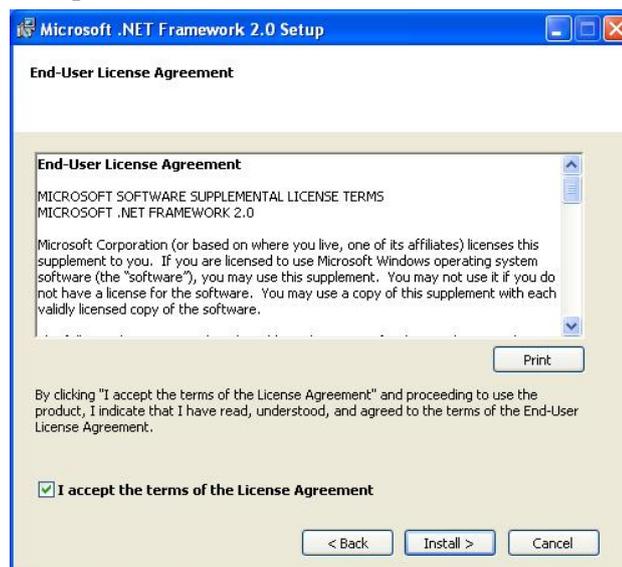

- (3) The installation process would be going

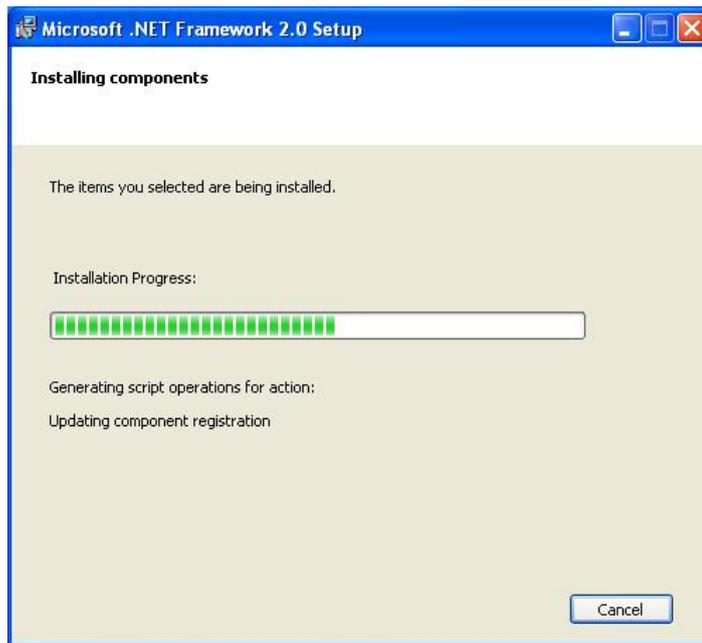


- (4) After finishing the installation, press "Finish" to exit the program.

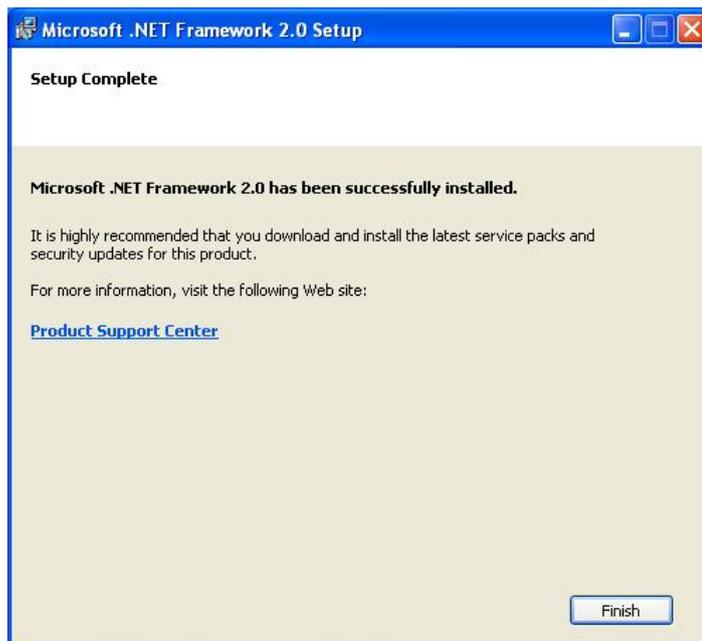


3.2 Installing GT-530 Utility


- A. Plug in the shipment CD into the PC
- B. Execute \GT-530\Utility\SMSUtilitySetup.exe
- C. The installation figure is as follows:
 - (1) Press “Next” to start the installation procedure.

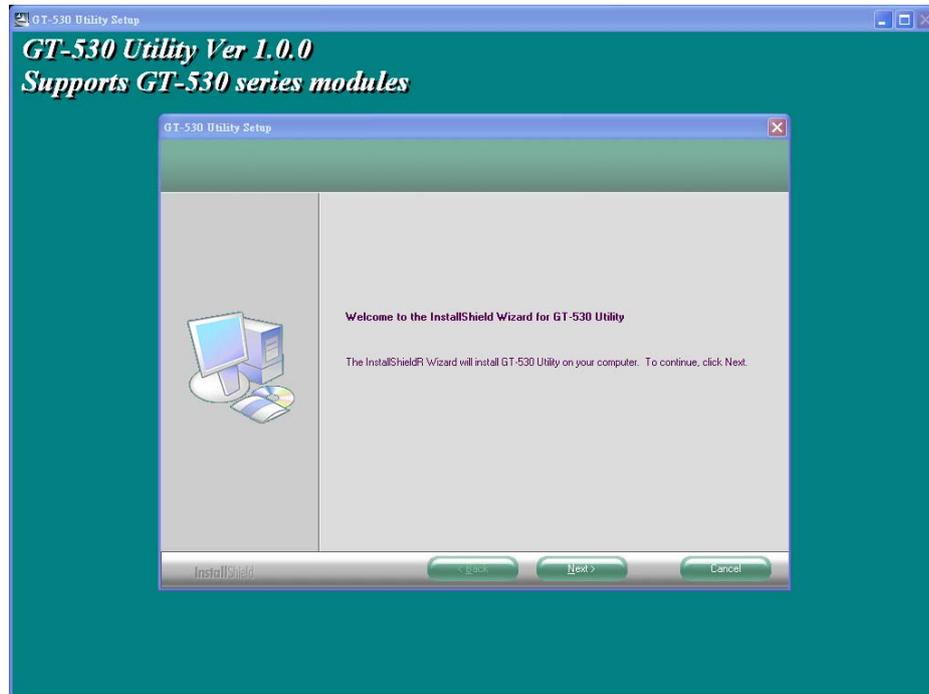


- (2) Select the installation path. The default path is "C:\Program Files\GT-530 Utility". Press “Next” to the next step.

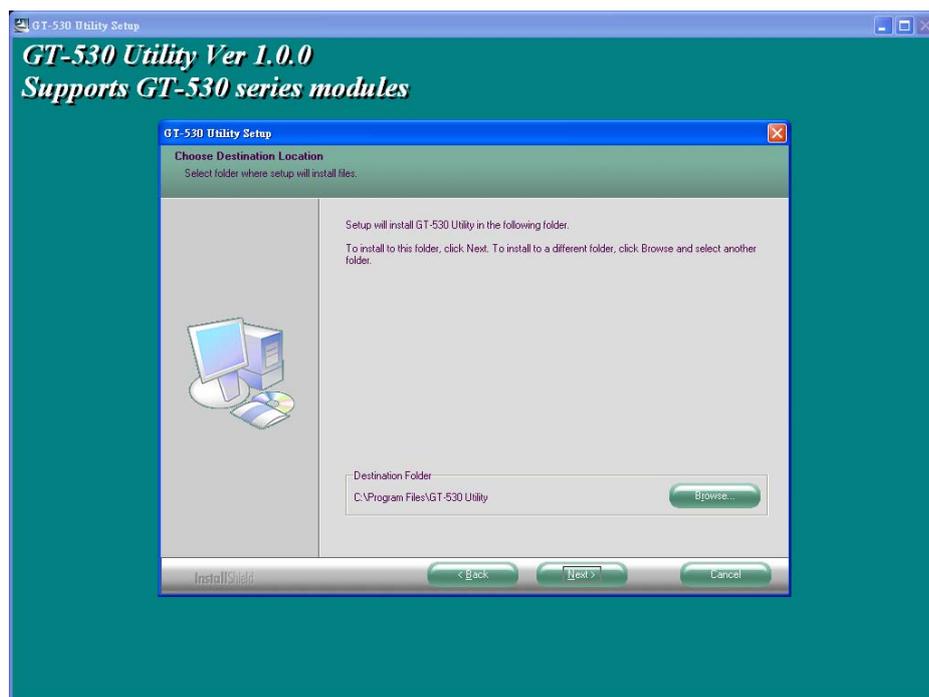


- (3) Input the name shown in “All Programs”. Press “Next” to the next step.

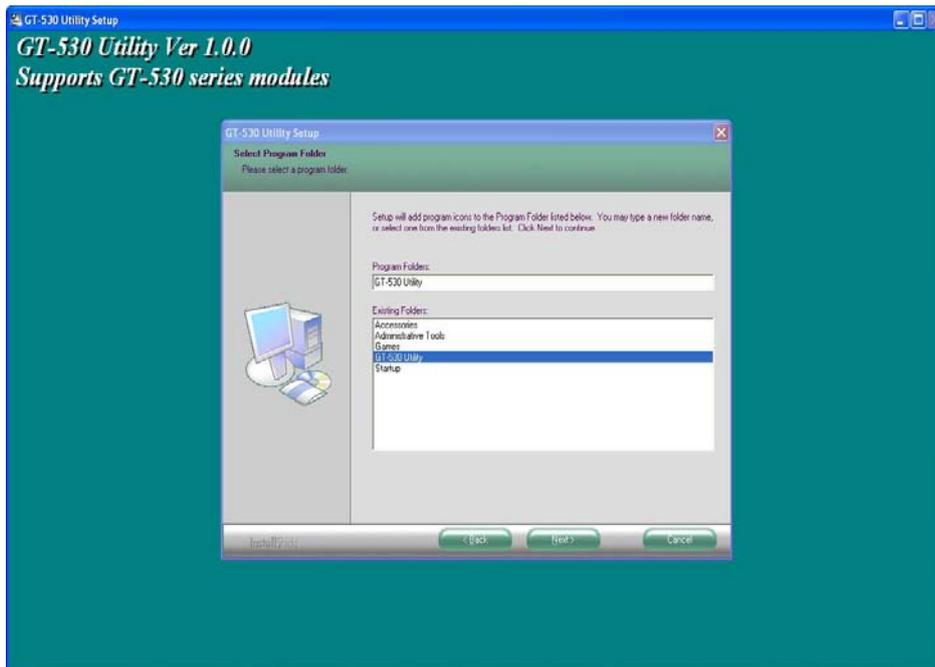


- (4) After finishing the installation procedure, press “OK” to the next step.

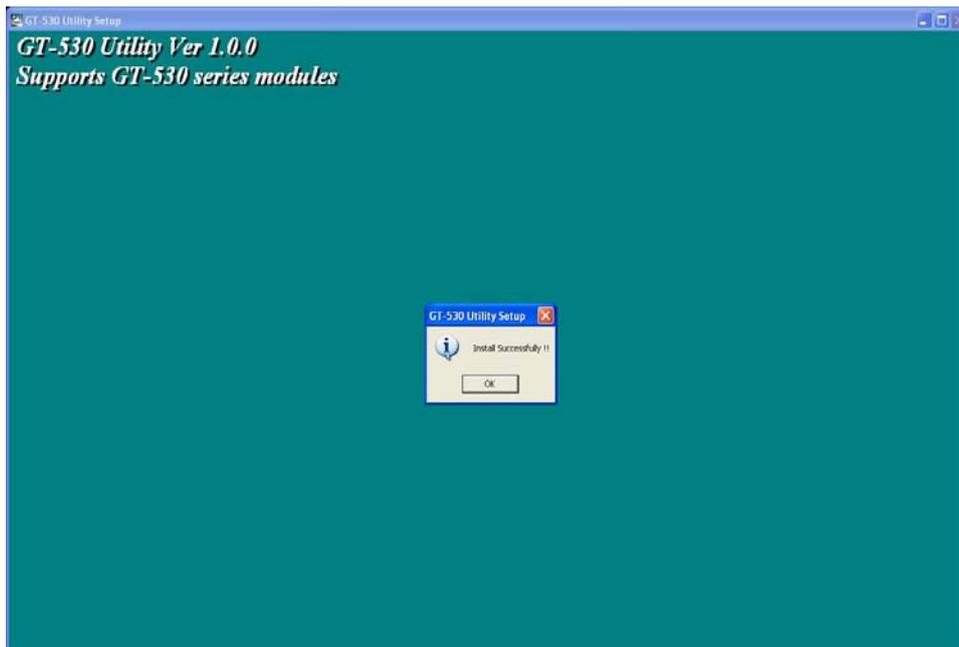

- (5) Press "Finish" to finish the installation procedure.

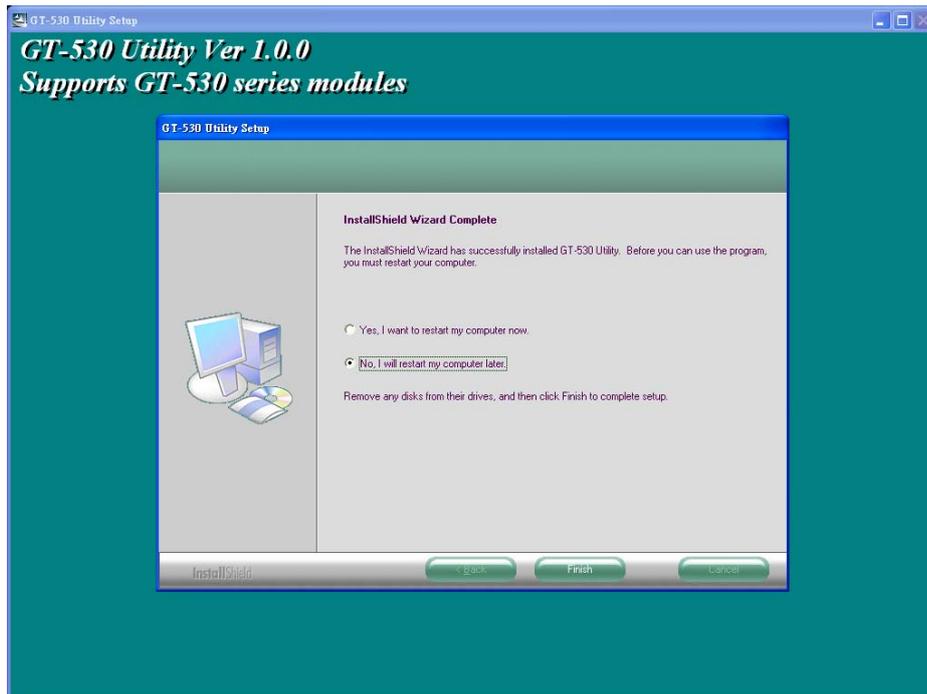

- (6) Launch GT-530 Utility from the start menu "Start→All Programs→GT-530 Utility→GT-530 Utility".

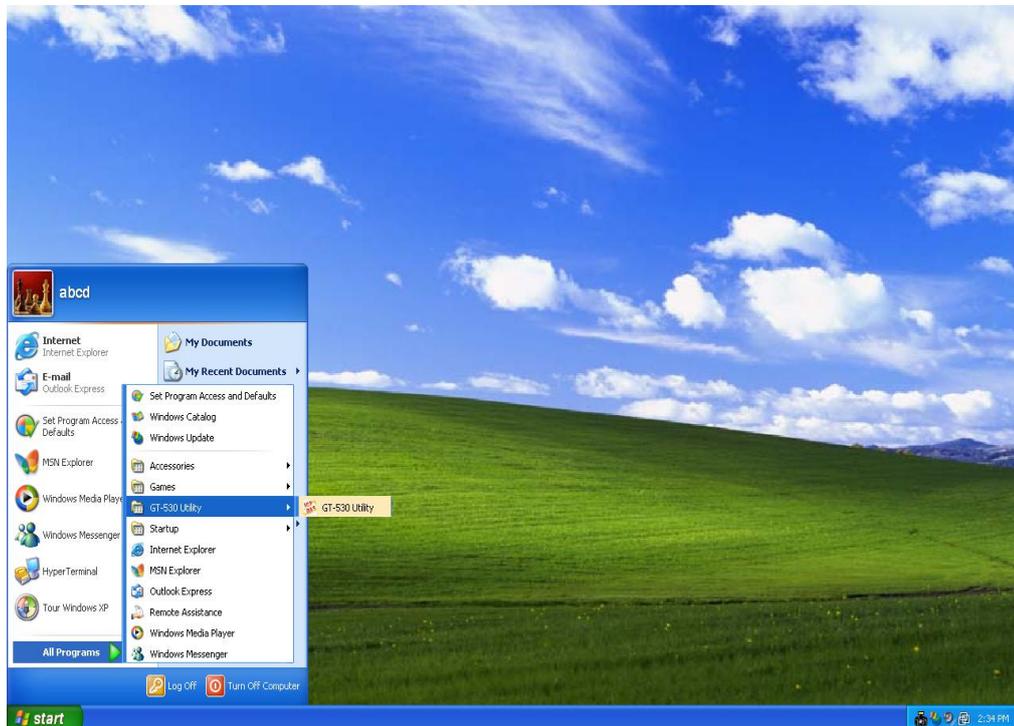

4. GT-530 Utility operation


Before GT-530 utility is connected to the PC correctly, please confirm these following steps:

1. The STA LED is blanking. There are 2 kinds of blanking in GT-530.

STA LED	Description
Blanking per 1 sec	Normal mode
Blanking per 50 ms	The pin code is wrong. The login windows would show the field to input pin or PUK code


2. Confirm the RS232 connection between GT-530 and PC is correct. Users can refer to the following figure.
3. During the setting procedure, the external power must be turn on.

Note: If the STA LED is always on, please reset GT-530. Refer to section 2.6 for the detail.

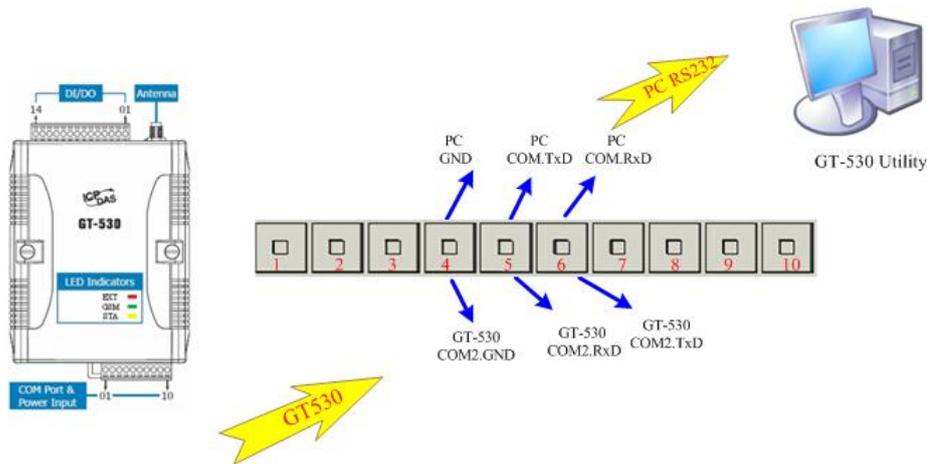

4.1 Main menu

The main menu of GT-530 Utility includes the following sections:

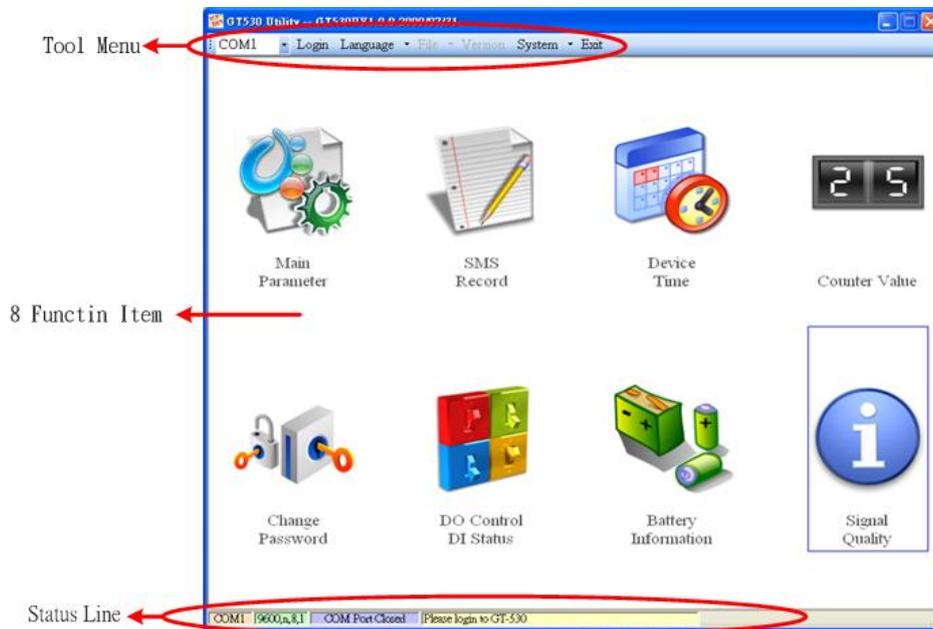

A. Tool menu

- (1) “COM”: Set the COM port number in PC connecting to GT-530.

- (2) Login/Logout

Before operating GT-530, users need to login to GT-530 Utility. After login the system successfully, the menu item “login” would become “logout” and the GT-530 Utility would be operated normally. Once the power is reset, the login procedure needs to do again.

- (3) “Language”

GT-530 Utility supports English, Tradition and Simplified Chinese interface. Users can select which language interface they want from the “Language” item. The language setting would be influencing on the encode of SMS.

- (4) File

There are import and export functions in “File” item. The functions would be enabled when “Main parameters” window is open.

Export: The function can export the parameters as .par file from the “Main parameters” windows.

Import : The parameters would be shown in “Main parameters” window from the specific .par file.

- (5) Version: Including the firmware and Utility version information.

- (6) System : Provide users for recovering GT-530 to factory and resetting GT-530.

(7) Exit: To exit GT-530 utility

B. 8 function item :

- (1) “Main parameter”: The main parameter setting of GT-530 includes ID, SIM number, 10 phone number authority, counter return report, event, DI mode and SMS message.
- (2) “SMS record”: Inquire the report recorder of event and counter. The maximum number of recorder in GT-530 is 64.
- (3) “Device time”: Display and set the RTC time of GT-530. It is also can get the information of the last and next time of the return report.
- (4) “Counter Value”: Inquire and set the counter value.
- (5) “Change Password”: Change the login password
- (6) “DO Control/DI status”: Display the status of I/O and control the DO output.
- (7) “Battery information” Show the voltage and volume of Li-Battery
- (8) “Signal Quality”: Show GSM signal strength in GT-530

C. Status Line


Show the related information during the operation procedure including:

- (1) The com port number of PC
- (2) The communication setting of COM Port
- (3) The status of COM Port
- (4) The result of Utility operation

4.2 Operation Language

GT-530 Utility supports English, Traditional Chinese and Simplified Chinese from the “language” menu bar. The text display in GT-530 Utility and the encode of SMS are depended on the selected language interface.


The format of SMS accords to the selected language. If the 7 BITS format is set, the maximum characters can be sent in SMS is 140. If UCS2, the maximum number is 70 characters. Therefore, if users want to send the Chinese message, it need to select UCS2 encode. After setting the language, it needs to reset GT-530 to enable the setting.

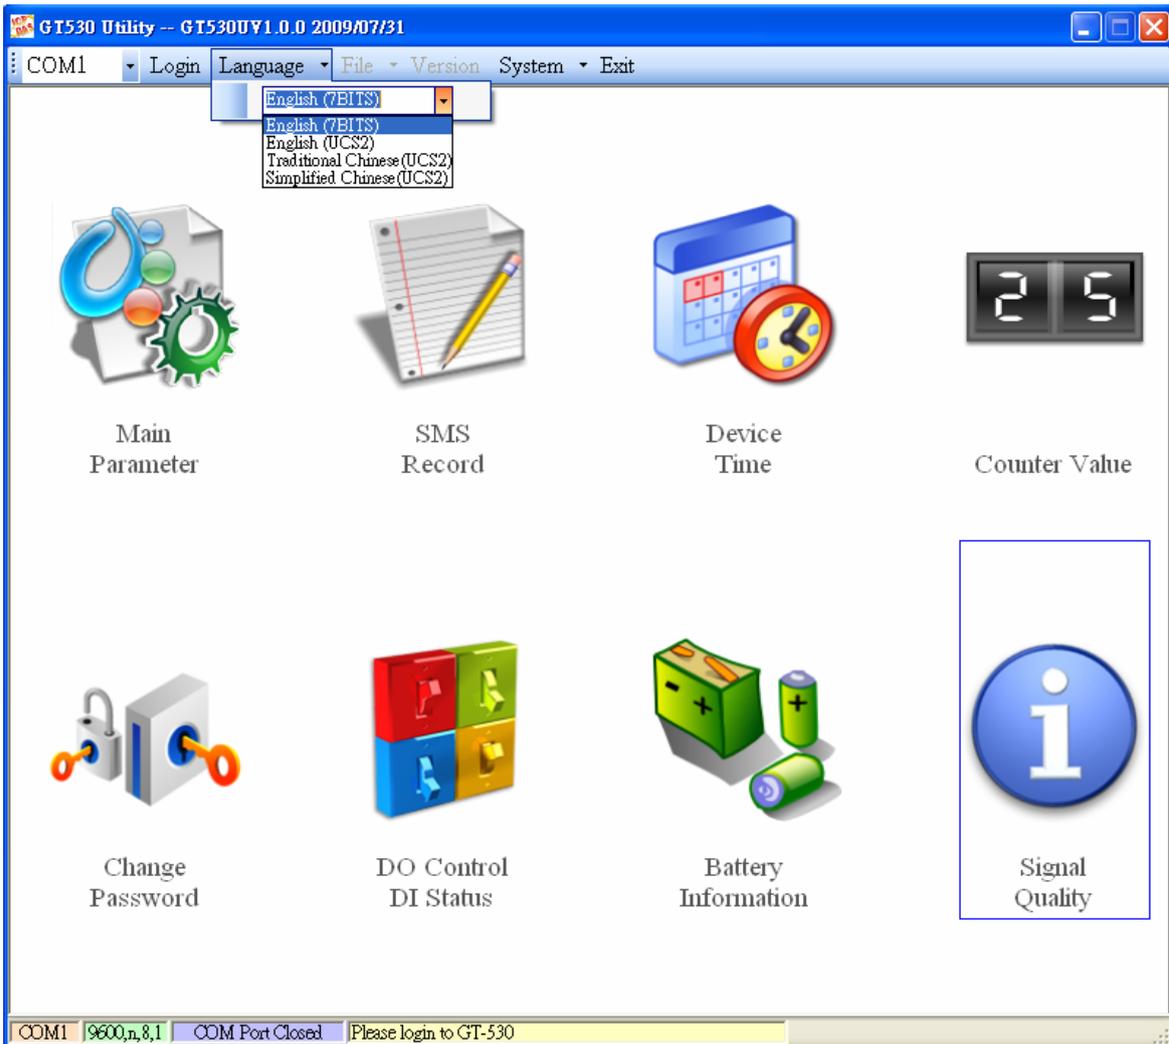

4.3 Login

It needs to login into GT-530 to set its parameters. The description is below:

- (1) Select the COM port number of PC.
- (2) Input the login password. The default is “111111”.
- (3) Press the “login” button
- (4) If you are the first time to login, please set the time of GT-530.

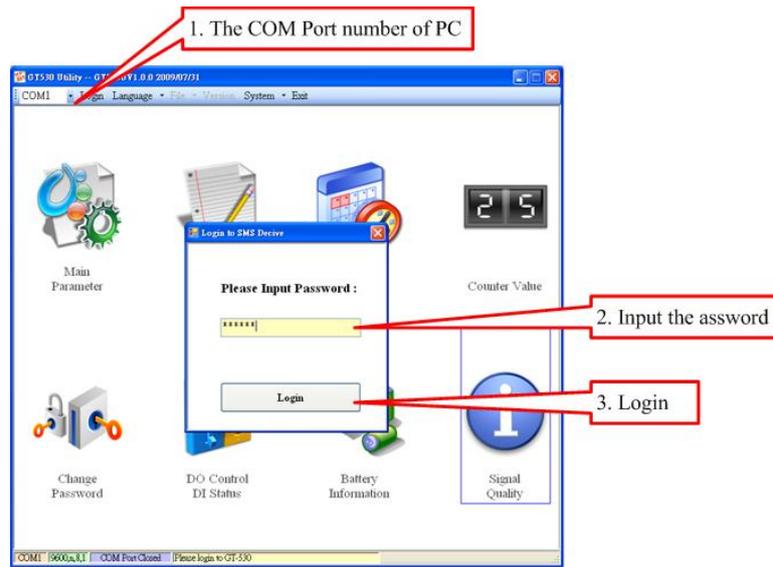

If the pin code in GT-530 is not correct, the STA led would be blanking per 50 ms and GT-530 utility would ask for users to input Pin or PUK code.


- (1) Asking for inputting PIN code:

If the PIN code is effective, the “Enter SIM PIN/SIM PUK” window would pop-up as follows. If the number of times for inputting the wrong PIN code is more than the allowed number, the PIN code would be ineffective. And the “PUK code” window would pop up.



(2) Asking for inputting PUK code

If the PIN code is ineffective, the “PUK code” window would pop-up as follows. As the number of times for inputting the wrong PUK code is more than allowed number, the SIM card would be ineffective forever. Therefore, it is important to input the correct PUK code.

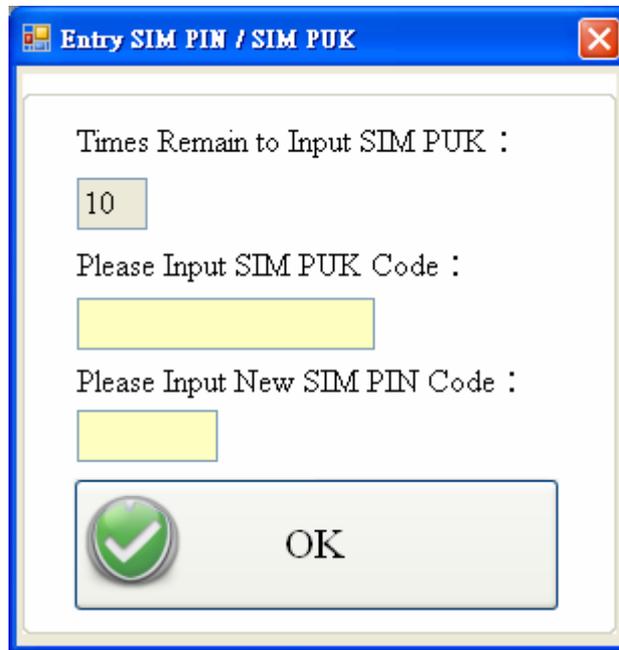

If the PIN or PUK code is correct, the STA led would blank per second. Users can operate other function of GT-530 in this utility.

4.4 Device parameter


There are 2 pages in “Device parameter” window. They are “Phone/Time Report/Alarm” and “DI Type/Text Message” pages.

After configuring the 2 pages, press “Write to Device” button to save these settings to GT-530. Then, reset GT-530 to enable these settings.

The “Read Form Device” button can help users to read back these settings from GT-530. In addition, these setting would be read from GT-530 when the “Main Parameter” window pops up from the main menu.

4.4.1 Phone /Periodic report/Alarm

The following page is “Phone/Periodic Report/Alarm”. Users can refer the explanation below :

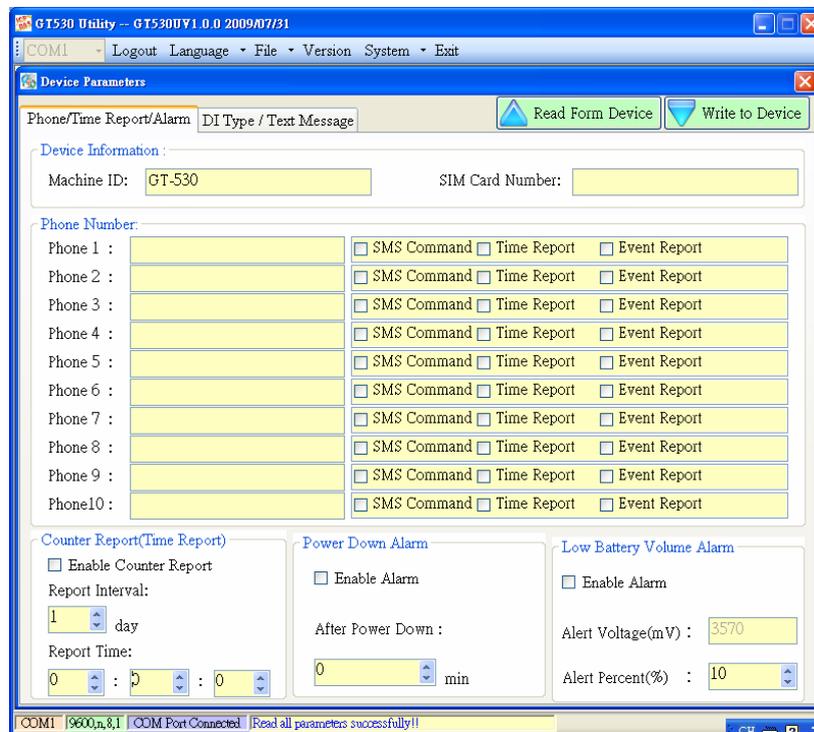

1. **Machine ID**
The device ID would be shown in the report and alarm SMS messages. It can be used for recognizing the GT-530. The length of characters is 20 without supporting unicode and “;” characteristic.
2. **SIM Card Number**
This text field can show or input the phone number of the plug-in SIM card. Take Taiwan for example: 0928xxxxxx.
3. **1~ 10 Phone umbers**
This field is used to set which phone numbers to receive SMS message or send SMS command. Every phone number can be set the authority as follows.

-
- (1) SMS command: Authority to send the SMS commands to GT-530
 - (2) Time Report: Authority to receive the counter SMS report periodically.
 - (3) Event Report: Authority to receive the event SMS report
4. Counter Report (Time report)
- (1) Enable Counter Report: Enable the function in this item.
 - (2) Report Interval : The time interval for counter report and it is set by day (1 ~ 31)
 - (3) Report time : Hour/Minute/Second

Note: The SMS format of counter report is fixed. It can not be modified by users:

`CRPT;Machine ID;Report Date;Report Time;DI0;DI1;DI2;DI3;DI4;DI5`

Text field :

CRPT : Counter report

Machine ID : GT-530 ID

Report Date : Report date (The format is YYYYMMDD (YYYY=year, MM=month, DD=day))

Report Time: Report time (The format is HHMMSS (HH=hour, MM=minute, SS=second))

DI0 ~ DI5: The counter values of DI0 ~ DI5.

If these DI channels are not set as counter mode, the counter value would be zero

Note:

If CRPT function is enabled and the return time is changed, the next time to send the SMS report is re-calculated according to the current time of GT-530 and the CRPT time. There would 2 conditions on the day:

- (1) When the GT-530 time is over the CRTP time, GT-530 would send the CRTP SMS after 1 minute.
- (2) If the GT-530 time does not reach the CRTP time, GT-530 would not send the CRTP SMS until GT-530 time reaches the CRTP time.

5. Power Down Alarm


The function supports to send alert SMS when the external power is off. The alert time after the event happened can be set by minutes (0 ~ 60 minutes).

6. Low Battery Volume Alarm

The function supports to send alert SMS when the volume of battery is low. The low battery value can be set as 10%~ 50% less than total volume.

4.4.2 DI mode and SMS content

The another page in “Device parameter” is about DI and event setting.
The explanation is below:

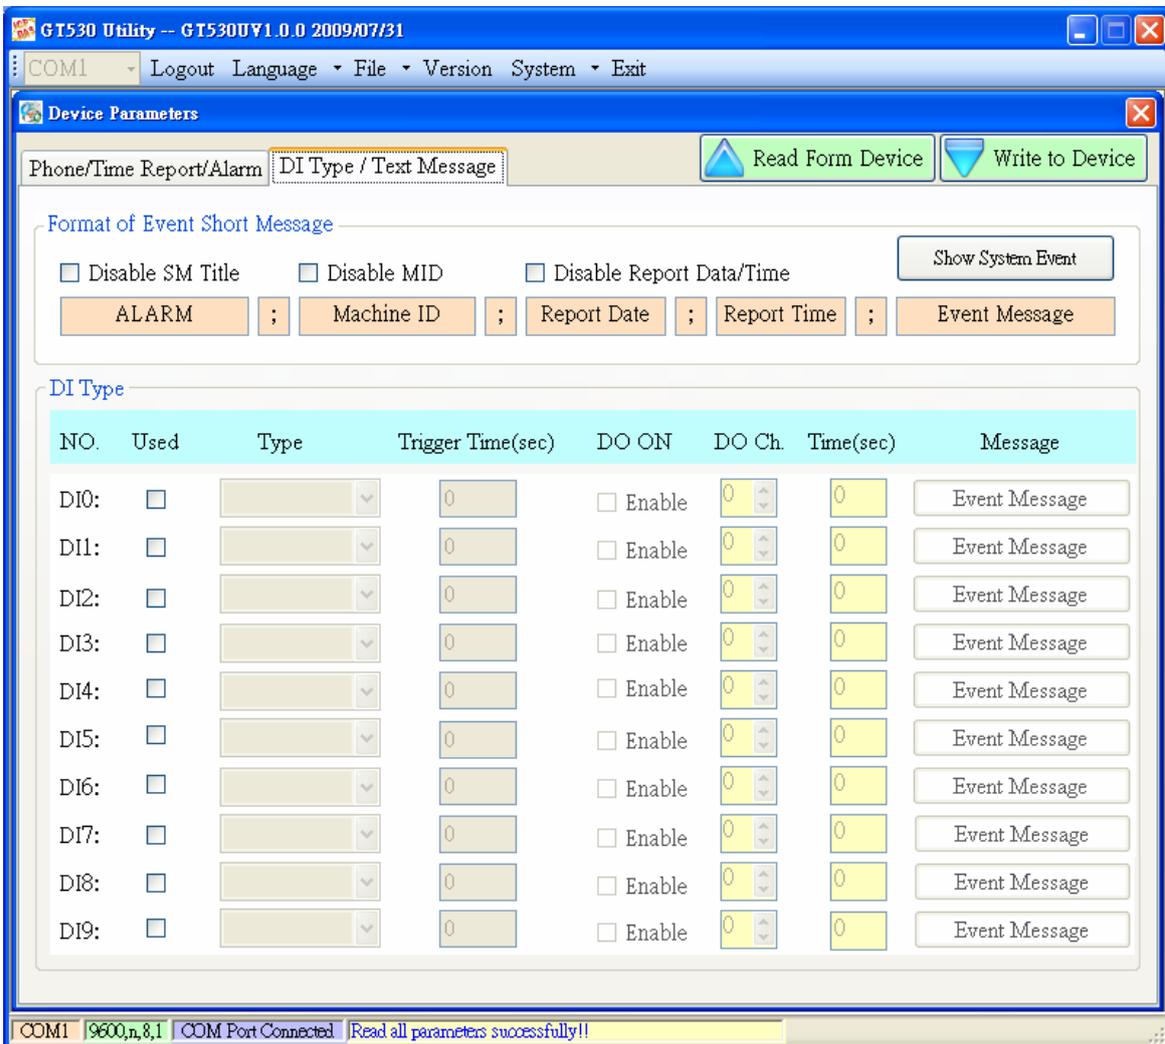

1. The format of event Shot Message:

The format of event SMS can be modified by users by the check boxes. The complete format of even SMS is below:

ALARM;Machine ID;Report Date;Report Time;Event Message

ALARM : Indicate alarm report

Machine ID : Device ID

Report Date : Report date (The format is YYYYMMDD (YYYY=year, MM=month, DD=day))

Report Time: Report time (The format is HHMMSS (HH=hour, MM=minute, SS=second))

Event Message : User-defined content

The three messages of event SMS can be set or canceled by users to match various applications. They include:

- (1) Cancel Title: Enable the function. The title string “ALARM” would not

be sent in SMS

- (2) Cancel Machine ID: Enable the function. The machine ID would not be sent in SMS
- (3) Cancel report time: Enable the function. The data and time would not be sent in SMS

2. Show System Event

The window shows the system event message according to the selected language. The content is fixed and can not be changed. There are 4 system events in GT-530 as follows:

- (1) Event 1 : The external power is off. (This function can be disabled)
- (2) Event 2 : The volume of battery is lower than the setting value. (This function can be disabled). n is the remaining percentage volume of battery.
- (3) Event 3 : The time of GT-530 is abnormal. This function can not be disabled. It could make the wrong timing for report and the cause is the silver battery of GT-530 is abnormal. After changing the silver battery, the time of GT-530 must be set.
- (4) Event 4: The counter value is reaching the preset limits. This function can be disabled. n represents the number of DI channel. (n: 0 ~5)



3. DI type

There are 3 modes of DI type for users to select. It needs to reset GT-530 to enable new setting after changing these parameters.

- (1) Use: Enable DI function
- (2) Type: DI0 ~ DI5 could be set as Counter function, NC or NO mode and DI6~DI9 can be NC or NO mode.
 - ◆ Counter : Counter function (frequency : 5 ~ 40Hz)
 - ◆ DI-NC : Normal Close mode. When the DI circuit is broken, the event is triggered. GT-530 would send the alarm SMS. Refer to section

2.4.2 for the detail.


- ◆ DI-NO : Normal Open mode. When the DI circuit is shorten, the event is triggered. GT-530 would send the alarm SMS. Refer to section 2.4.3 for the detail.
- (3) Trigger Time(sec) : Set the hold time of the DI triggered signal (0~9999 seconds)
- (4) DO ON : This function enable DO output when DI event is triggered.
- (5) DO ch.: Set the DO channel.
- (6) Time(sec) : Set the output time of DO channel (0~999 seconds). If the power is just provided by Li-battery, GT-530 would not be into sleep mode until the output time is reaching.
- (7) Event message : Set the user-defined message content. These message would be included in event SMS.




4.4.3 Import/Export Parameters

Users can use the import and export functions from the menu bar. This function would be enabled when the “Device Parameter” window is open.


The explanation is below:

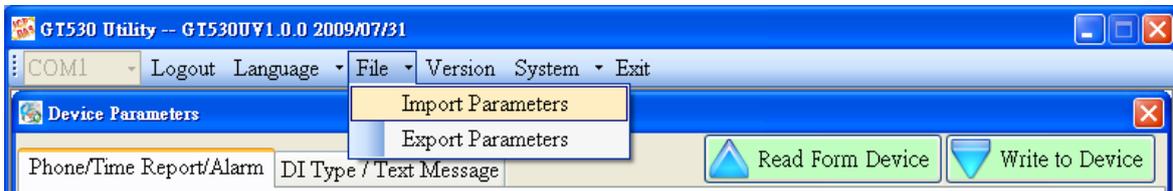

- A. **Import Parameters** : This function is used for reading back the setting of device parameters from .par file and displaying in “Device parameter” window. When press “import” button, a file selection window would pop up for users to choice the .par file.

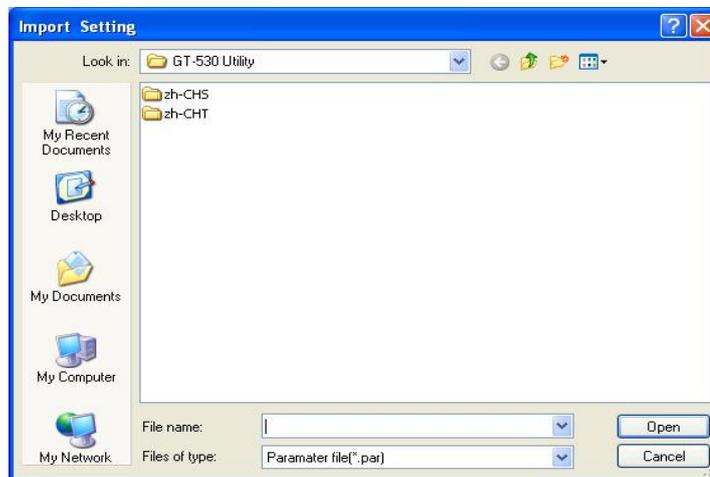


- B. **Export Parameters**: The function is used for saving the setting of “Device parameter” window as .par file. When press “Export” button, a file selection window would pop-up for users to save the setting as .par file in specific path.

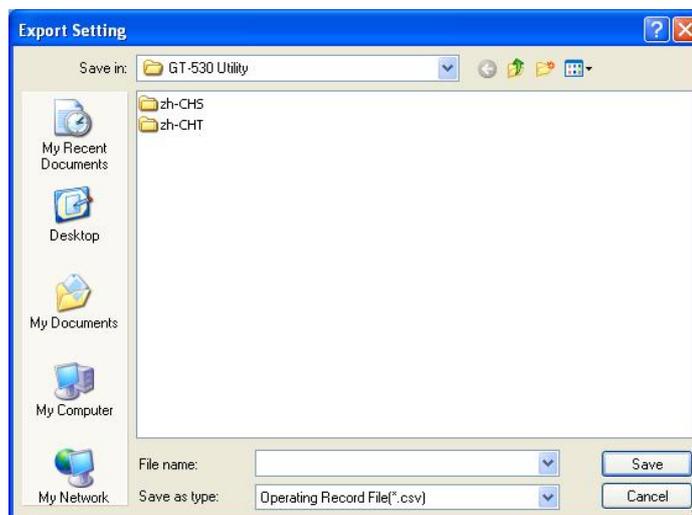

- (6) DI2 : The DI2 counter value. If the DI is not set as counter, the value is 0.
- (7) DI3 : The DI3 counter value. If the DI is not set as counter, the value is 0.
- (8) DI4 : The DI4 counter value. If the DI is not set as counter, the value is 0.
- (9) DI5 : The DI5 counter value. If the DI is not set as counter, the value is 0.

4.5.2 Event Report record

In this page, users can inquire all event report of GT-530. The explanation is below :

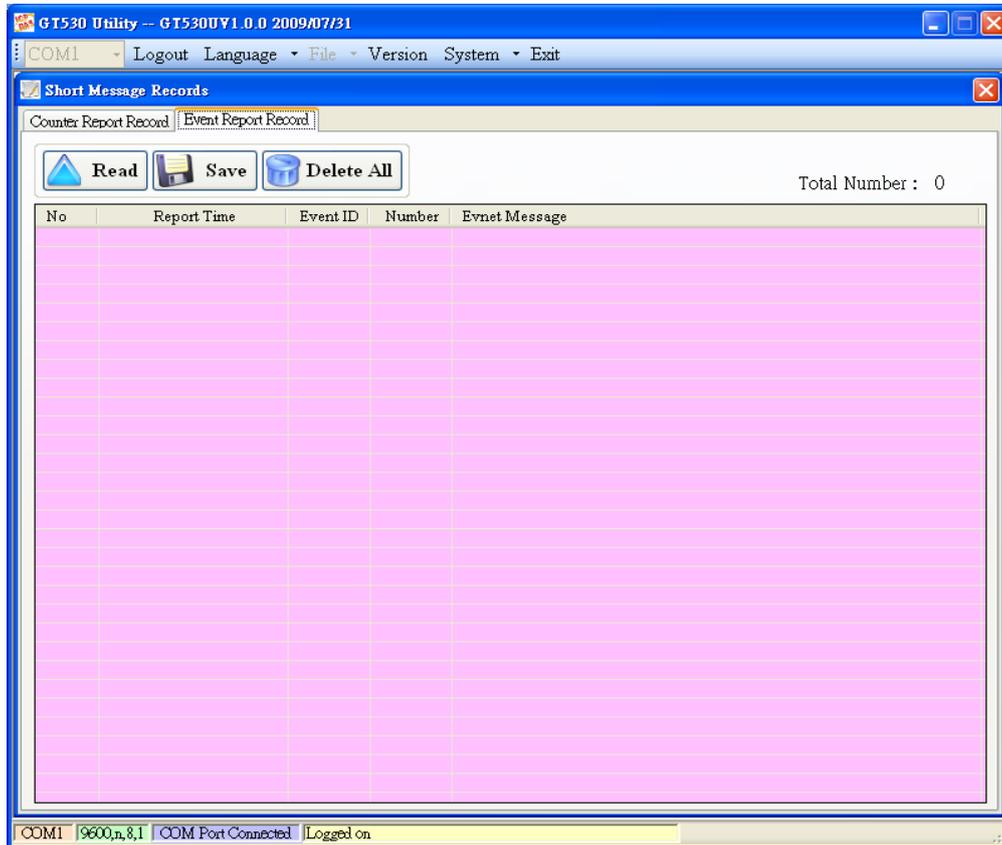

Operation :


- (1) Read : Read all the CRPT report from GT-530. The maximum number of CRPT report records is 64
- (2) Save : Save these records to a file.
- (3) Delete all : Delete all event report records of GT-530.

Text field :

- (1) No. : Record number
- (2) Report time : Event report time of GT-530
- (3) Event ID : Event identification
- (4) Number : The SMS quantity sent to the defined phone numbers
- (5) Event message : The event content

4.6 Device Time

This window provides the function to inquire and modify the time of GT-530. Besides, the next and last report times are also shown. The text field operation is below.

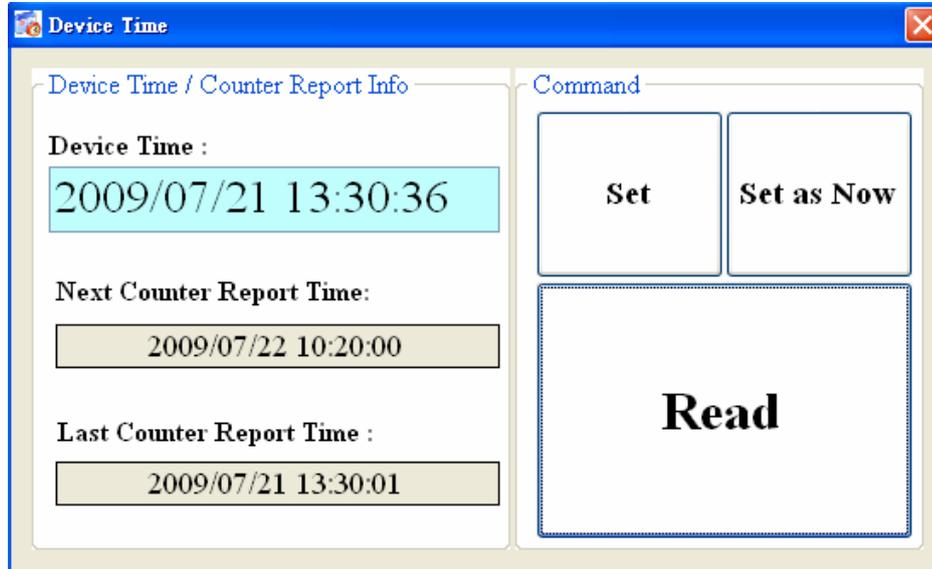

Text field :

- (1) Device time: show the time of GT-530. Users also can change the time in this field to key in the specific time.
- (2) Next Counter Report Time : show the next CRPT time
- (3) Last Counter report time : show the last CRPT time

Operation:

- (1) “Set as Now”: Set the PC time to GT-530. After setting the time successfully, the information of GT-530 time and CRPT report time would be updated.
- (2) Set: Set the GT-530 time according the “Device Time” field. After setting the time successfully, the information of GT-530 time and CRPT report time would be updated.
- (3) Read: Read back the time of GT-530, the next report time and the last report time.

Note:

If the counter report function is enable and reset the time of GT-530, the next time to send the SMS report is re-calculated according to the current time of GT-530 and the CRPT time. There would 2 conditions on the day:

- (1) When the GT-530 time is over the CRPT time, GT-530 would send the CRPT SMS after 30 seconds.
- (2) If the GT-530 time does not reach the CRPT time, GT-530 would not send the CRTP SMS until GT-530 time reaches the CRPT time.

4.7 Counter Value

The window provides the function to inquire and modify the counter values of DI0 ~ DI5. The explanation of operation and text field is below:

Name	Value	Set Value	Counter Alarm	Alarm Value
DI 0	0 0 0 0 0 0 0 0 0 0	0	<input type="checkbox"/> Enable	+ 0
DI 1	0 0 0 0 0 0 0 0 0 0	0	<input type="checkbox"/> Enable	+ 0
DI 2	0 0 0 0 0 0 0 0 0 0	0	<input type="checkbox"/> Enable	+ 0
DI 3	0 0 0 0 0 0 0 0 0 0	0	<input type="checkbox"/> Enable	+ 0
DI 4	0 0 0 0 0 0 0 0 0 0	0	<input type="checkbox"/> Enable	+ 0
DI 5	0 0 0 0 0 0 0 0 0 0	0	<input type="checkbox"/> Enable	+ 0

Read Set Value Set Alarm

Text field :

- (1) Name: The DI name of DI0 ~ DI5 .
- (2) Value : The current counter value (maximum: 999999999)
- (3) Set Value: Input the defined counter value. The maximum is 999999999. This field is enabled when DI is set as counter mode.
- (4) Counter Alarm: Enable the counter alarm.
- (5) Alarm Value: Counter alarm value= current value+ alarm value. This field can not be 0

Operation:

- (1) Read : Read the current counter value and alarm settings from GT-530. If the counter is not set as counter,the counter value is 0.
- (2) Set Value : Change the counter value into GT-530 according to the "Set Value" field
- (3) Set Alarm : Set the counter alarm into GT-530.

4.8 Change Password

This window provides the function of changing login password. The default password is “111111”. This password is also applied in SMS command to GT-530. These SMS commands is described in chapter 5.



The screenshot shows a 'Change Password' dialog box with a blue title bar. Inside, there are three text input fields labeled 'Old Password', 'New Password', and 'Confirm Again'. Below these fields is a large light blue button with a green arrow icon pointing down and the text 'Change'.

Text field:

- (1) Old password: Input the current password.
- (2) New password: Input the new password (maximum : 12 characters)
- (3) Confirm Again : Input new password again.

Operation

- (1) Change: Updated the password.

4.9 DO control/DI status

The function is used for controlling DO and reading the status of DIs:



Text field

(1) DI0 ~ DI9、DO0 ~ DO1 :


- ✧ Grey : the voltage logic is high.
- ✧ Red : the voltage logic is low

Operation

- (1) Read : Read back the status of DI0 ~ DI9 and DO0 ~ DO1 from GT-530.
- (2) DO0 ~ DO1 ON : Set the DO output on
- (3) DO0 ~ DO1 OFF : Set the DO output off

4.10 Battery information

This function provides users to check the remaining volume of battery.

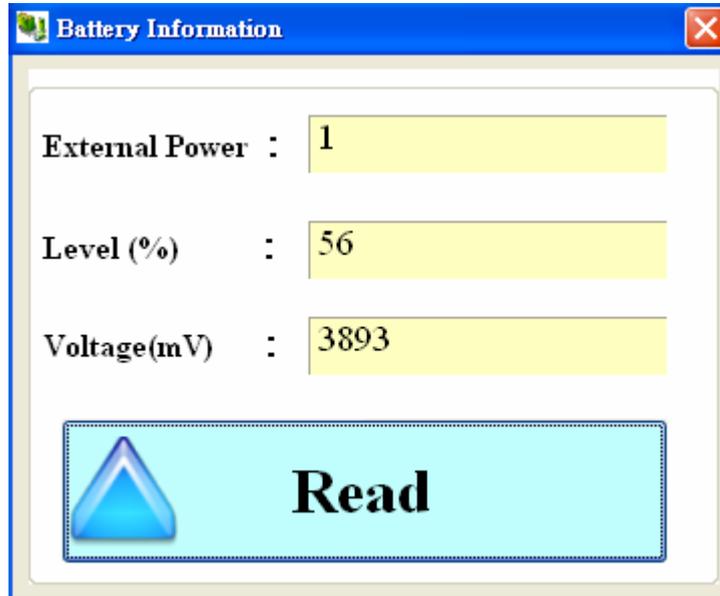

Text field


- (1) External Power: The external power is on or off. (1- on, 0-off). It needs to open the external power when using utility to configure GT-530.
- (2) Level: Show the percentage of battery volume. If the battery is not connected to GT-530. The value is about 60%
- (3) Voltage: The voltage value of battery. If the battery is not connected to GT-530. The value is about 3925 mV

Operation

- (1) Read: Read the above information from GT-530.

4.11 Signal Quality

This window can show GSM signal strength.

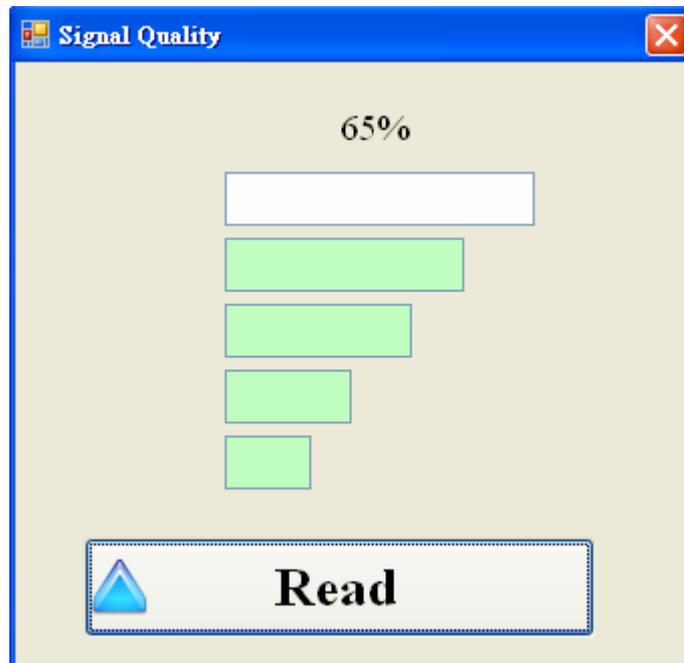

Text field :


The strength is divided into 5 sections shown in percentage.

Operation :

- (1) Read : Read the GSM signal strength.

4.12 Version

Press "Version" in tool menu, and the window would show the version of Utility and firmware.

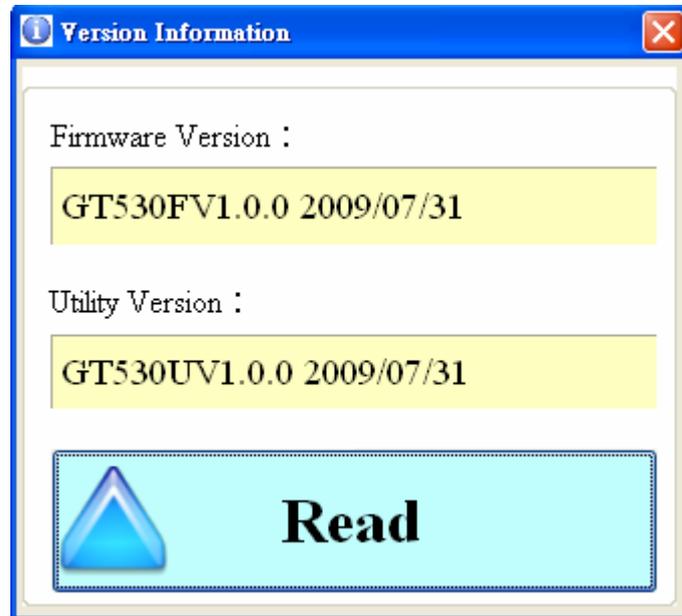

Text field:


- (1) Firmware version: show the version information of GT-530's firmware
- (2) Utility version: show the version information of GT-530's utility

Operation:

Read: Read these information from GT-530.

4.13 System

“System” menu item has 2 functions of recovering factory setting and resetting GT-530

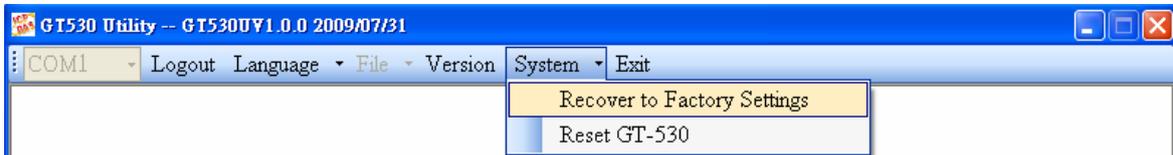


4.13.1 Recover to Factory Settings

The function is used to recover GT-530 as factory settings including password.

The steps are below:

- (1) Connect COM3.TX and COM3.RX.
- (2) Make sure the STA led is blanking per 1 sec.
- (3) Select the Recover to Factory Settings.

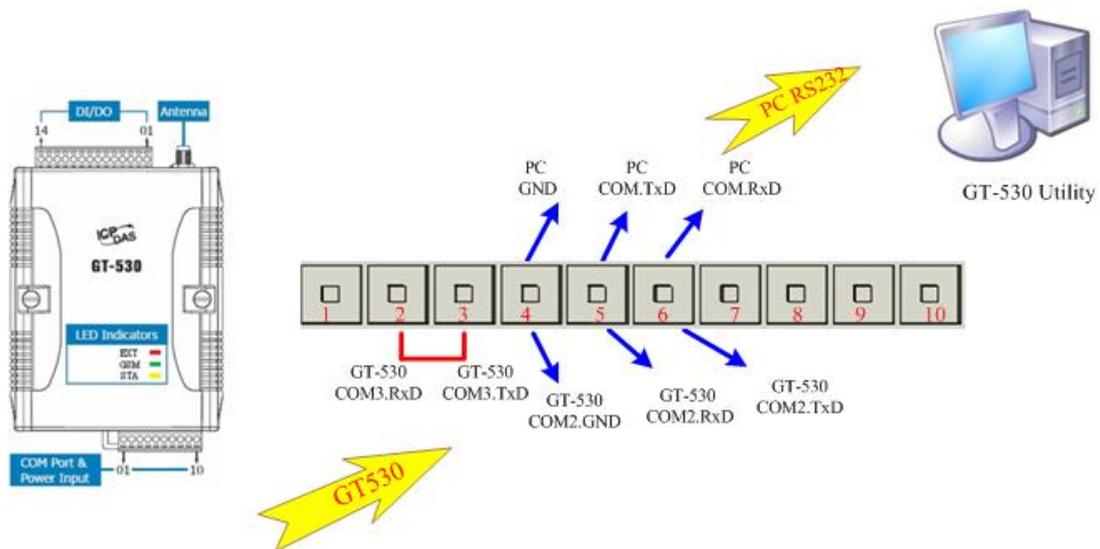

4.13.2 Reset GT-530

The function is used to reset GT-530 by software.

- (1) Make sure STA led is blanking per 1 second
- (2) Select “Rest GT-530” button to reset GT-530.

5. SMS Command

These SMS commands help users to control or get the information of GT-530. GT-530 can only receive these commands according to the phone numbers set in GT-530. These phone numbers must be set to have “Allowed” authority. If the phone number is not in the list, GT-530 would not reply to any command.

Command Table

SMS command	Description
@DTIME	Time set and inquiry
@CDO	DO control
@CTSV	Counter value inquiry
@INP	DI/DO inquiry
@BATS	Battery inquiry
@PASS	Password inquiry

5.1 @TIME (Time set and inquiry)

(1) Description :

This command is used to set or inquire the time of GT-530.

(2) Request :

Set

@TIME;Password;YYYYMMDD;HHMMSS

Inquiry

@TIME;Password

Format

Password : login password

YYYYMMDD : YYYY=year, MM=month, DD=day

HHMMSS : HH=hour, MM=minute, SS=second

Example:

Set the time as 2009/04/10 10:03:00 :

@TIME;000000;20090410;100300

Inquiry the time:

@TIME;000000

(3) Response

!MID;TIME;Result;YYYYMMDD;HHMMSS

MID : Machine ID

TIME : Command name

Result : command result

- ◆ OK → command is OK
- ◆ NO → Password is wrong
- ◆ ER → The format is wrong or authority is not allowed

YYYYMMDD : YYYY=year, MM=month, DD=day

HHMMSS : HH=hour, MM=minute, SS=second

Example :

!GT-530;TIME;OK;20090410;100300

5.2 @DOCn (DO control)

(1) Description :

Set DO0 and DO1 output

(2) Request :


Command: @CDOn;Password;CMD;Second

n : 0 ~ 1 (0-DO0, 1-DO1)

Password : login password

CMD :

- ◆ ON → set DO on
- ◆ OFF → set DO off
- ◆ PLUS → The DO channel is set to on during the defined time.

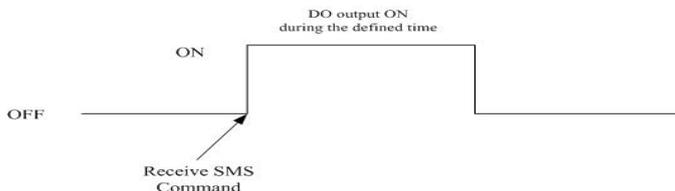

Second : The command is used for PLUS mode. (0~999 seconds)

Example

Set DO1 output to on:

```
@DOC1;000000;ON
```

Set DO1 output to on during 20 seconds:

```
@DOC1;000000;PLUS;20
```

(3) Response :

```
!MID;DOCn; Result; CMD;Second
```

MID : Machine ID

DOC : command name

n : 0 ~ 1 (0- DO0, 1-DO1)

Result : command result

- ◆ OK → command is successfully
- ◆ NO → the password is wrong
- ◆ ER → The format is wrong or authority is not allowed

CMD、Second :

The same as the above description.

Example :

```
!GT-530;DOC1;OK;ON
```

```
!GT-530;DOC1;OK;PLUS;20
```

5.3 @ACTV (Counter value inquiry)

(1) Description :

Inquire the counter values of DI0 ~ DI5

(2) Request :

Inquire

@ACTV;Password

Password : login password

Example

Inquire the 6 current counter values of GT-530.

@ACTV;000000

(3) Response :

!MID;ACTV;Result;DI0;DI1;DI2;DI3;DI4;DI5

MID : Machine ID

ACTV : command name

Result : command result

- ◆ OK → No error
- ◆ NO → the password is wrong
- ◆ ER → The format is wrong or authority is not allowed

DI0 : The DI0 counter value. If the DI is not set as counter, the value is 0.

DI1 : The DI1 counter value. If the DI is not set as counter, the value is 0.

DI2 : The DI2 counter value. If the DI is not set as counter, the value is 0.

DI3 : The DI3 counter value. If the DI is not set as counter, the value is 0.

DI4 : The DI4 counter value. If the DI is not set as counter, the value is 0.

DI5 : The DI5 counter value. If the DI is not set as counter, the value is 0.

Example :

!GT-530;ACTV;OK;3;3;3;3;3;3

5.4 @DIV (DI/DO inquiry)

(1) Description :

Inquiry the status of 10 DI and 2 DO.

(2) Request :

Inquiry

@DIV; Password

Password : Login password

Example

Inquiry the status of 10 DI and 2 DO :

@DIV;000000

(3) Response :

!MID;DIV; Result;DI0;DI1;DI2;DI3;DI4;DI5;DI6;DI7;DI8;DI9;DO0;DO1

MID : Machine ID

DIV : command name

Result : command result

- ◆ OK → command successfly
- ◆ NO → the password is wrong
- ◆ ER → The format is wrong or authority is not allowed

DI0~DI9 : The status of DI channels

- ◆ 1 → Low Voltage
- ◆ 0 → High Voltage

DO0 ~ DO1 : The status of DO channel

- ◆ 1 → High Voltage
- ◆ 0 → Low Voltage

Example :

!GT-530;DIV;OK;0;0;0;0;0;0;0;0;0;0;1;0

5.5 @BAT (Battery inquiry)

(1) Description :

This command is to inquire the information of battery.

(2) Request :

Inquiry

@BAT;Password

Password : login password

Example

inquire the information of battery :

@BAT;000000

(3) Response :

!MID;BAT;Result;Pext;Percent;Voltage

MID : Machine ID

BAT : command name

Result : command result

- ◆ OK → command successfully
- ◆ NO → the password is wrong
- ◆ ER → The format is wrong or authority is not allowed

Pext : the status of the external power

- ◆ 0 → OFF
- ◆ 1 → ON

Percent: The percentage of battery volume (%)

Voltage: The voltage value of battery (mV)

Example :

!GT-530;BAT;OK;1;57;3899

5.6 @PASS(Password inquiry)

(1) Description :

If you forget the password, you can use this command to inquire password. The phone number must be set the authority of “SMS Command”.

(2) Request :

Inquiry

@PASS

Example

Inquire the password of GT-530 :

@PASS

(3) Response :

!MID;PASS;Result;Password;Password

MID : Machine ID

PASS : command name

Result : command result

◆ OK → Inquire successfully

◆ ER → No authority

Password : the current password

Example :

!GT-530;PASS;OK;111111;111111

6. Send/Receive SMS by COM 3

GT-530 provides sending/receiving SMS function from COM 3. This function can provide PLC or PAC to send or receive SMS through GT-530. That can extend GT-530 to various applications.

COM port setting

- ◆ Baud rate : 9600 bps
- ◆ Data bit : 8
- ◆ Parity check : none
- ◆ Stop bit : 1
- ◆ Flow control : none

6.1 Send data to COM port of GT-530 by SMS command

It is possible to use SMS to send data to com port of GT-530. The command header is "+++". The first setting phone number just has the authority to use this function with the "Allowed" enabling. The command support 7 Bits format

Command :

+++Message

Message : The message is sent to com3 of GT-530 (Maximum 130 char)

Exmample

SMS content : +++Hello

To com port : Hello

6.2 Sending SMS by COM 3

This function is used to send SMS to the first setting phone number by this command "+++". This command supports ASCII code, not Unicode

Request :

+++Message,

Message : The user-defined SMS content, and the end of the message have to add ASCII code 0x0d.

Example :

Command from com3 : +++Hello

Received SMS content : Hello

7. Troubleshooting

Item	Trouble state	Solution
1	EXT LED is off without Li-battery	Please check the external power and wire connection.
2	STA is always on	Check SIM card Check Antenn Check the GSM signal strength
3	GT-530 Utility can not connect to GT-530	Check STA LED blinking every 1 sec Check com port connection and baud rate setting
4	After event triggering, users can not receive SMS.	Check DI connection Check phone number and format Check DI event is enabled in GT-530 Utility
5	Counter value is abnormal	Check wire connection Check the counter signal is at 5~40Hz. Check the DI mode setting. Must be counter mode.
6	The content of received SMS is abnormal.	Please select the correct language to set the content of SMS in utility. If you want to transfer Unicode char, select the language supporting UCS2.
7	The time of receiving SMS is abnormal.	1. The time in GT-530 is abnormal. Setup the time of GT-530 by utility. 2. The battery of RTC is low. Change the silver battery of RTC. After changing the battery, set the time of GT-530.
8	STA led is blanking per 50 ms	The pin code is wrong. The login windows would show the field to input PIN or PUK code
9	Forget Password	Use SMS command to get the password.